YAMAHA

PARTS CATALOGUE

FZ150 (3C11) INDONESIA

1F3C1-460E1

( )

YAMAHA GENUINE Parts & Accessories

FZ150
PARTS CATALOGUE
©2007 by Yamaha Motor Co., Ltd.
1st edition, March 2007
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   "UR" Use specified parts number.
   "UN" Use as many as needed.
   "AP" Alternate Parts
   "LM" Locally Made (Parts need to be ordered locally)
   "F#" Frame No. (Applicable machine No.)
   "O/S" Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the "REMARKS" as shown below.

PART NO.	DESCRIPTION	Q'TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Frame Serial No.

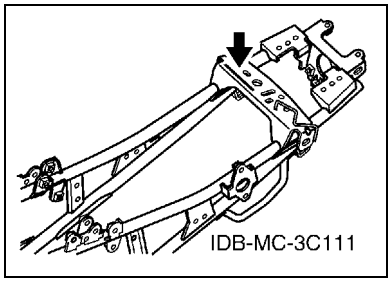

Engine Serial No.

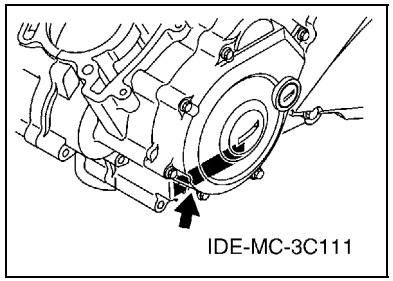

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
DPBMC(*)	DEEP PURPLISH BLUE METALLIC C	0564
DRMK(*)	DEEP RED METALLIC K	0918
SL	SILVER	0035
YB(*)	YAMAHA BLACK	0033

9. Applicable Starting Serial No.

Frame Serial No.

Serial No.	Name Of Q'ty Column	Model Code

Engine Serial No.

Serial No.	Name Of Q'ty Column	Model Code

CONTENTS

ENGINE

CYLINDER HEAD 1
CRANKSHAFT & PISTON 2
VALVE 4
CAMSHAFT & CHAIN 5
WATER PUMP 6
RADIATOR & HOSE 7
OIL PUMP 8
INTAKE 9
EXHAUST 11
CRANKCASE 12
CRANKCASE COVER 1 13
STARTER 14
STARTER CLUTCH 15
CLUTCH 16
TRANSMISSION 18
SHIFT CAM & FORK 20
SHIFT SHAFT 21

CHASSIS

FRAME 22
FENDER 23
SIDE COVER 24
REAR ARM & SUSPENSION 27
STEERING 28
FRONT FORK 29
FUEL TANK 31
SEAT 32
FRONT WHEEL 33
FRONT BRAKE CALIPER 34
REAR WHEEL 35
STEERING HANDLE & CABLE 37
FRONT MASTER CYLINDER 38
STAND & FOOTREST 39
GENERATOR 41
STARTING MOTOR 42
FLASHER LIGHT 43
METER 44
HEADLIGHT 45
TAILLIGHT 46
HANDLE SWITCH & LEVER 47
ELECTRICAL 1 48
ELECTRICAL 2 49

INDEX

NUMERICAL INDEX 50

FIG. 1 CYLINDER HEAD

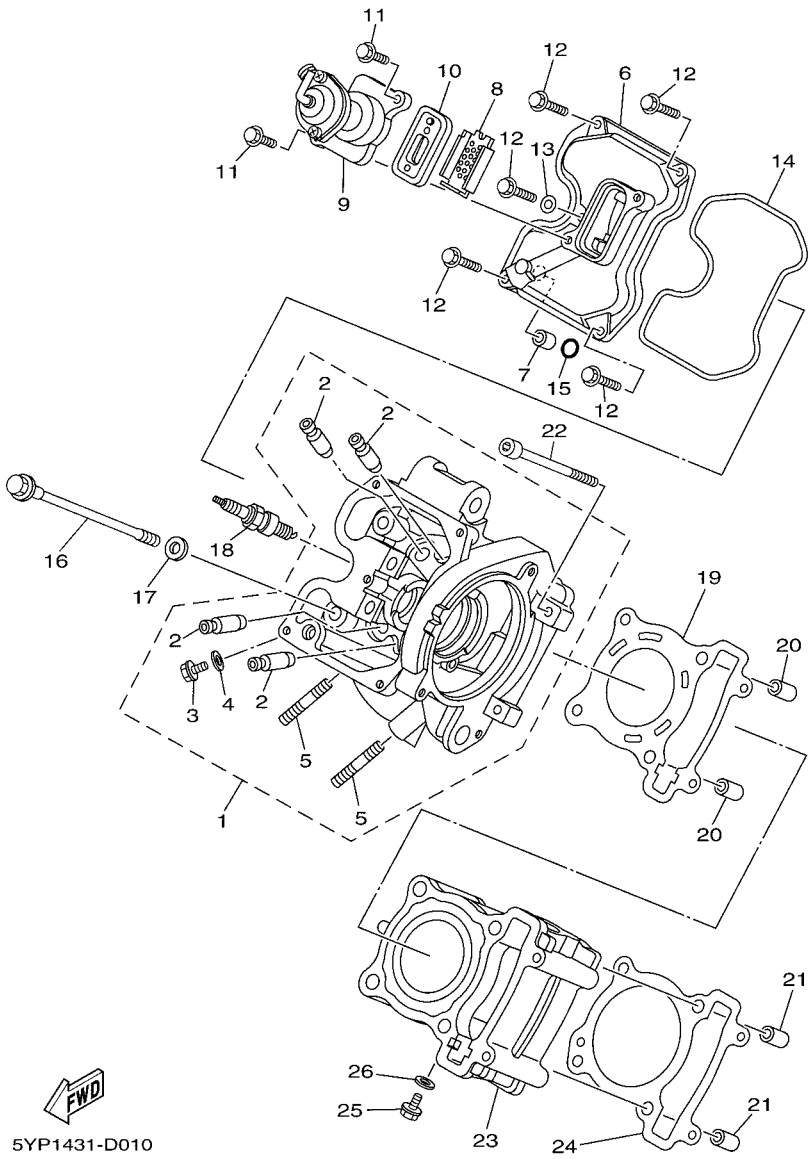

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	1S7–E1102–00	CYLINDER HEAD ASSY	1					
2	1S7–E1133–10	.GUIDE, VALVE 1	4					
3	90153–06803	.SCREW, HEXAGON	1					
4	90430–06014	.GASKET	1					
5	95617–08620	.BOLT, STUD	2					
6	1S7–E1191–00	COVER, CYLINDER HEAD 1	1					
7	91811–10005	PIN, DOWEL	1					
8	1S7–E482K–00	PLATE	1					
9	1S7–E4840–00	AIR CUT VALVE ASSY	1					
10	1S7–E4890–00	REED VALVE ASSY	1					
11	95027–06014	BOLT, FLANGE	2					
12	95027–06020	BOLT, FLANGE	5					
13	90430–06014	GASKET	1					
14	1S7–E1193–00	GASKET, HEAD COVER 1	1					
15	93210–11803	O-RING	1					
16	90105–08850	BOLT, FLANGE	4					
17	90201–08609	WASHER, PLATE	4					
18	94700–00872	PLUG, SPARK (NGK CR8E)	1					UR
	94700–00873	PLUG, SPARK (U24ESR-N)	1					UR
19	3C1–E1181–00	GASKET, CYLINDER HEAD 1	1					
20	91810–14809	PIN, DOWEL	2					
21	91810–14809	PIN, DOWEL	2					
22	91317–06100	BOLT	2					
23	3C1–E1311–00	CYLINDER 1	1					
24	1S7–E1351–00	GASKET, CYLINDER	1					
25	90153–06803	SCREW, HEXAGON	1					
26	90430–06014	GASKET	1					

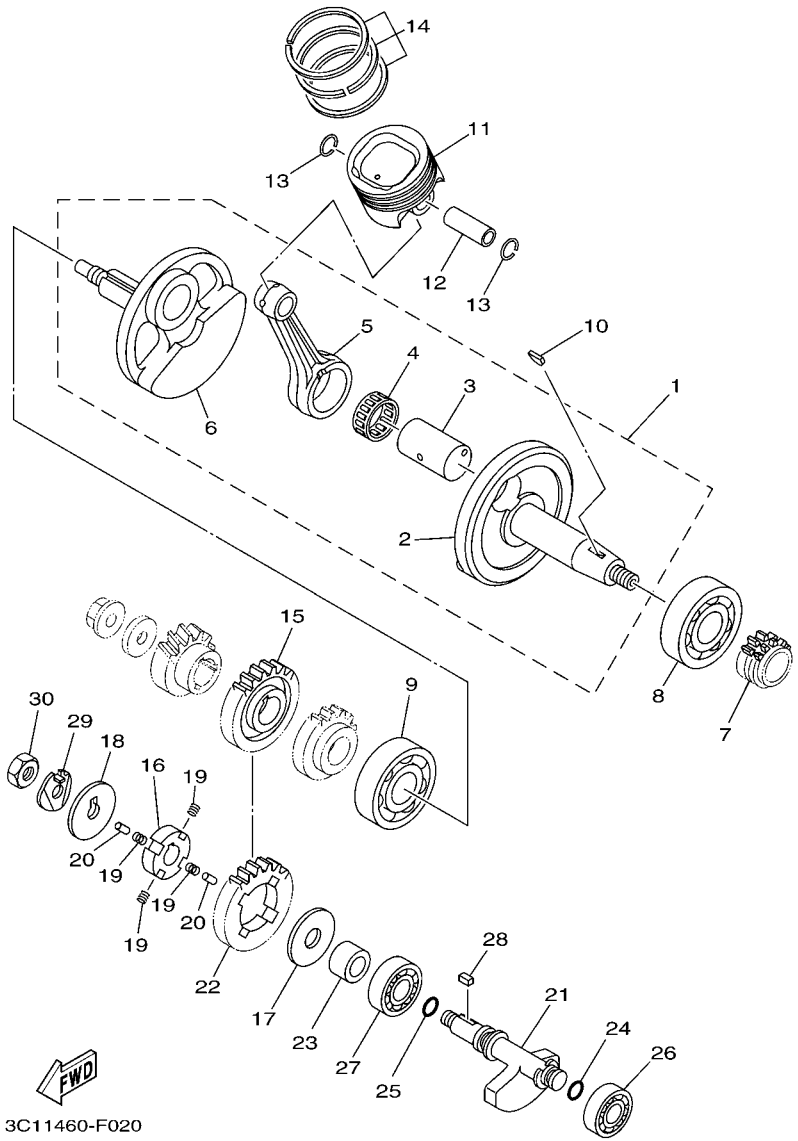

FIG. 2 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E1400–00	CRANKSHAFT ASSY	1					
2	3C1–E1412–00	.CRANK 1	1					
3	3C1–11681–00	.PIN, CRANK 1	1					
4	93310–528YB	.BEARING	1					
5	3C1–E1651–10	.ROD, CONNECTING	1					
6	3C1–E1422–00	.CRANK 2	1					
7	3C1–E1549–00	SPROCKET, CAM CHAIN	1					
8	93306–305YF	BEARING	1					
9	93306–305X7	BEARING	1					
10	90280–03017	KEY, WOODRUFF	1					
11	3C1–E1631–00	PISTON (STD)	1					
12	3C1–E1633–00	PIN, PISTON	1					
13	93450–16115	CIRCLIP	2					
14	3C1–11603–00	PISTON RING SET (STD)	1					
15	3C1–11536–00	GEAR, DRIVE	1					
16	3C1–E1496–00	BOSS, BUFFER	1					
17	90201–15821	WASHER, PLATE	1					
18	90214–10800	WASHER, CLAW	1					
19	90501–16800	SPRING, COMPRESSION	4					
20	93604–08800	PIN, DOWEL	2					
21	3C1–11454–00	WEIGHT 1	1					
22	3C1–11531–00	GEAR, BALANCE WEIGHT	1					
23	90387–15810	COLLAR	1					
24	93210–11805	O-RING	1					
25	93210–13803	O-RING	1					
26	93306–252Y9	BEARING	1					
27	93306–203XK	BEARING	1					

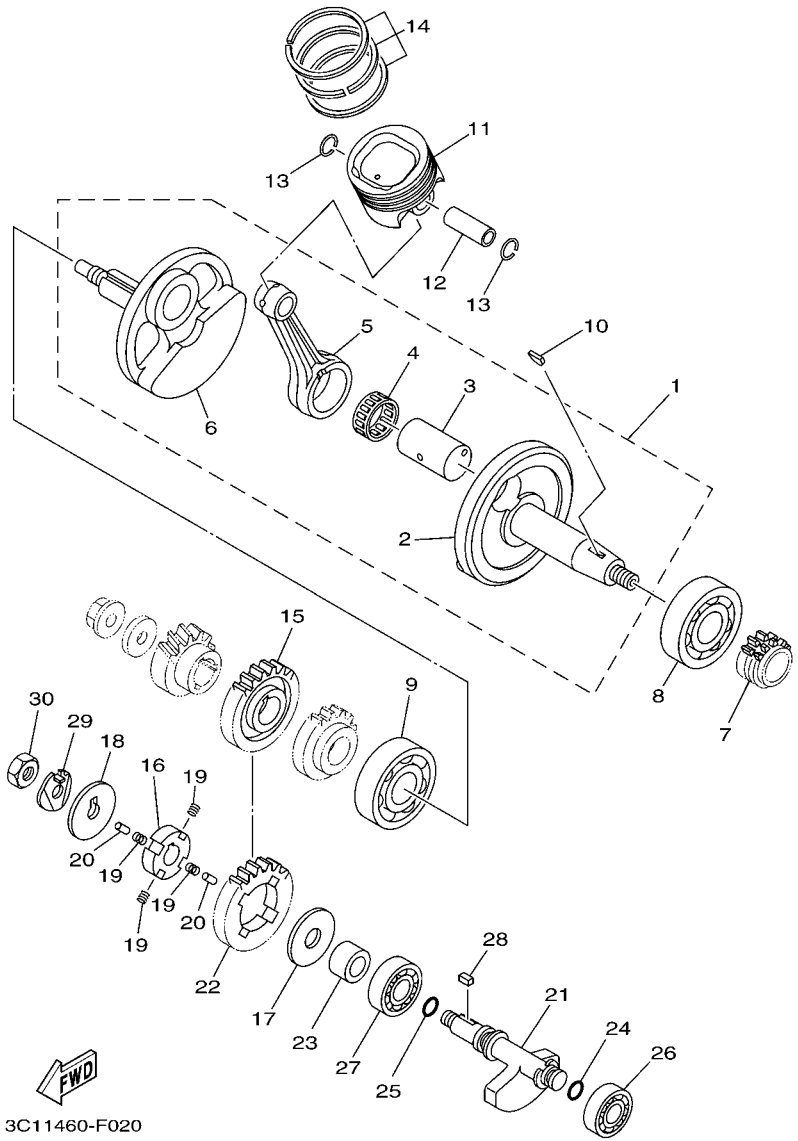

FIG. 2 CRANKSHAFT & PISTON

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
28	90282–05031	KEY, STRAIGHT	1					
29	90215–10284	WASHER, LOCK	1					
30	90170–10405	NUT	1					

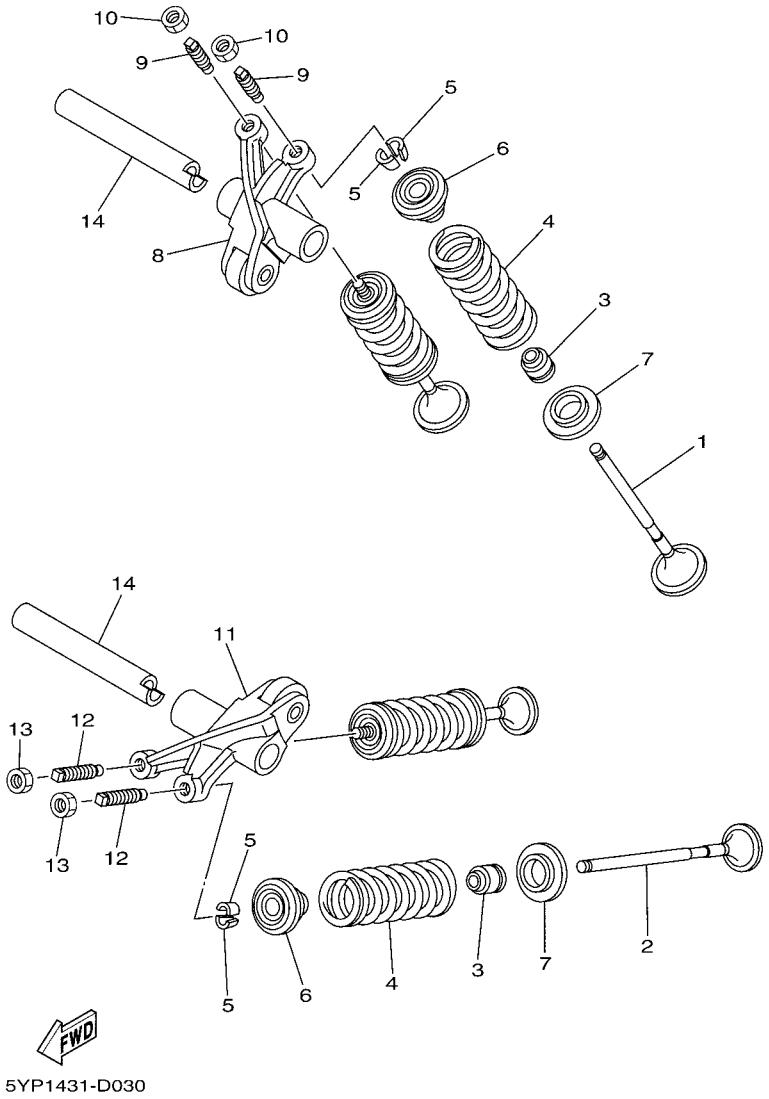

5YP1431-D030

FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	1S7–E2111–00	VALVE, INTAKE	2					
2	1S7–E2121–00	VALVE, EXHAUST	2					
3	2S6–E2119–00	SEAL, VALVE STEM	4					
4	3C1–E2113–00	SPRING, VALVE INNER	4					
5	3S0–E2118–00	COTTER, VALVE	8					
6	5YP–12117–00	RETAINER, VALVE SPRING	4					
7	5YP–E2126–00	SEAT, VALVE SPRING 2	4					
8	1S7–E2151–00	ARM, VALVE ROCKER	1					
9	3C1–12159–00	SCREW, VALVE ADJUSTING	2					
10	90170–05302	NUT	2					
11	1S7–E2161–00	ARM, VALVE ROCKER 2	1					
12	3C1–12159–00	SCREW, VALVE ADJUSTING	2					
13	90170–05302	NUT	2					
14	1S7–E2156–00	SHAFT, ROCKER 2	2					

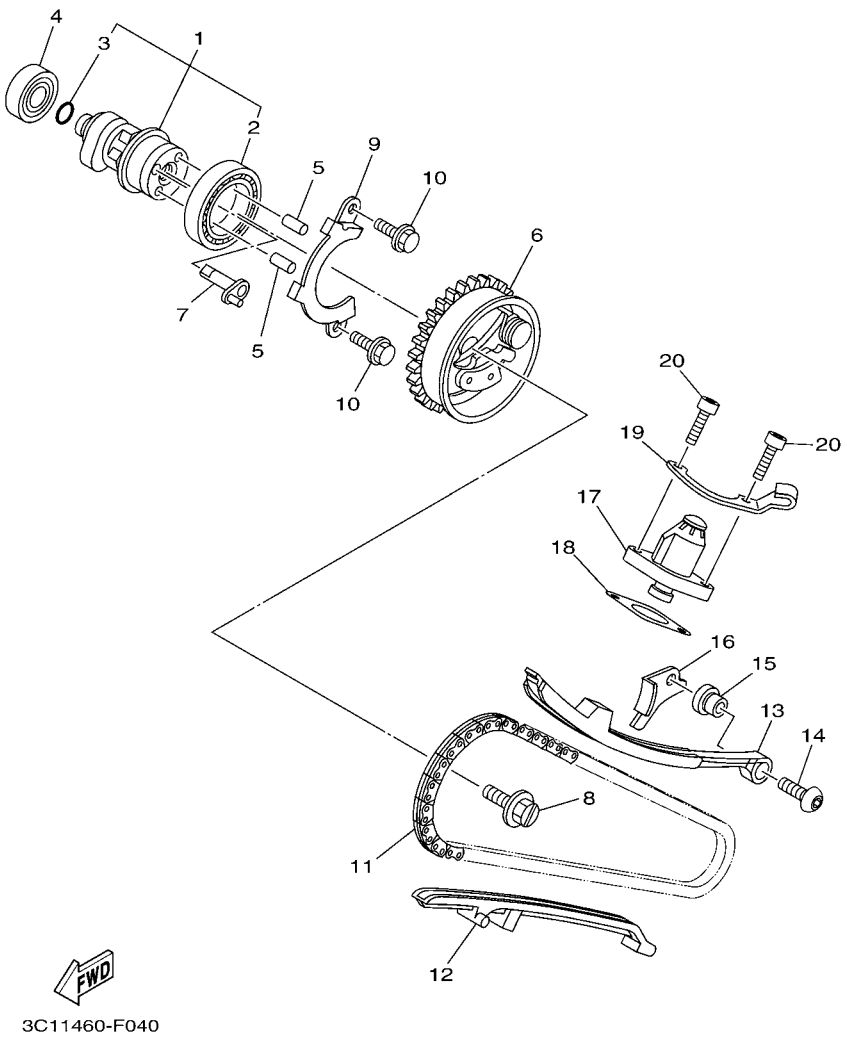

3C11460-F040

FIG. 4 CAMSHAFT & CHAIN

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E2170–00	CAMSHAFT ASSY 1	1					
2	93306–906Y0	.BEARING	1					
3	93210–09806	.O-RING	1					
4	93306–001X2	BEARING	1					
5	99480–05010	PIN	2					
6	3C1–E2280–00	DECOMPRESSION ASSY	1					
7	1S7–E2288–00	CAM, DECOMPRESSION	1					
8	5YP–E2157–00	BOLT	1					
9	1S7–E111F–00	PLATE	1					
10	95027–06010	BOLT, FLANGE	2					
11	94568–A8096	CHAIN	1					
12	5YP–E2231–00	GUIDE, STOPPER 1	1					
13	1B9–12241–00	GUIDE, STOPPER 2	1					
14	90149–06829	SCREW	1					
15	3C1–E5598–00	COLLAR	1					
16	3C1–E2256–00	COVER, CHAIN	1					
17	2P2–E2210–00	TENSIONER ASSY, CAM CHAIN	1					
18	5MX–E2213–00	GASKET, TENSIONER CASE	1					
19	3C1–E5441–00	HOLDER, CLUTCH CABLE	1					
20	91317–06020	BOLT	2					

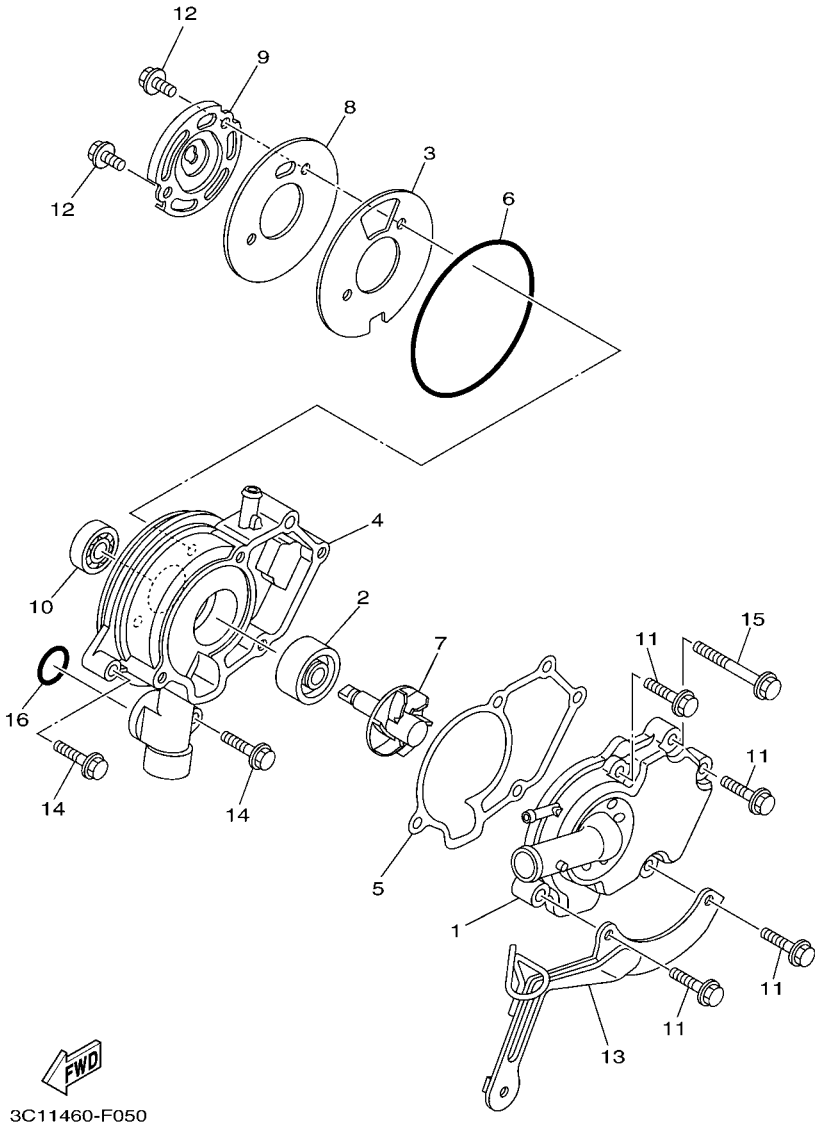

3C11460-F050

FIG. 5 WATER PUMP

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E2422–00	COVER, HOUSING	1					
2	93103–10801	OIL SEAL	1					
3	1S7–E2428–00	GASKET, HOUSING COVER 2	1					
4	1S7–E1185–01	COVER, CYLINDER HEAD SIDE 1	1					
5	1S7–E1196–00	GASKET, CYLINDER HEAD SIDE	1					
6	93210–84801	O-RING	1					
7	1S7–E2450–00	IMPELLER SHAFT ASSY	1					
8	1S7–E1951–00	PLATE	1					
9	1S7–E1952–01	PLATE	1					
10	93306–000Y3	BEARING	1					
11	95027–06025	BOLT, FLANGE	4					
12	95027–06012	BOLT, FLANGE	2					
13	3C1–E2443–00	STAY	1					
14	95027–06025	BOLT, FLANGE	2					
15	95027–06050	BOLT, FLANGE	1					
16	93210–19809	O-RING	1					

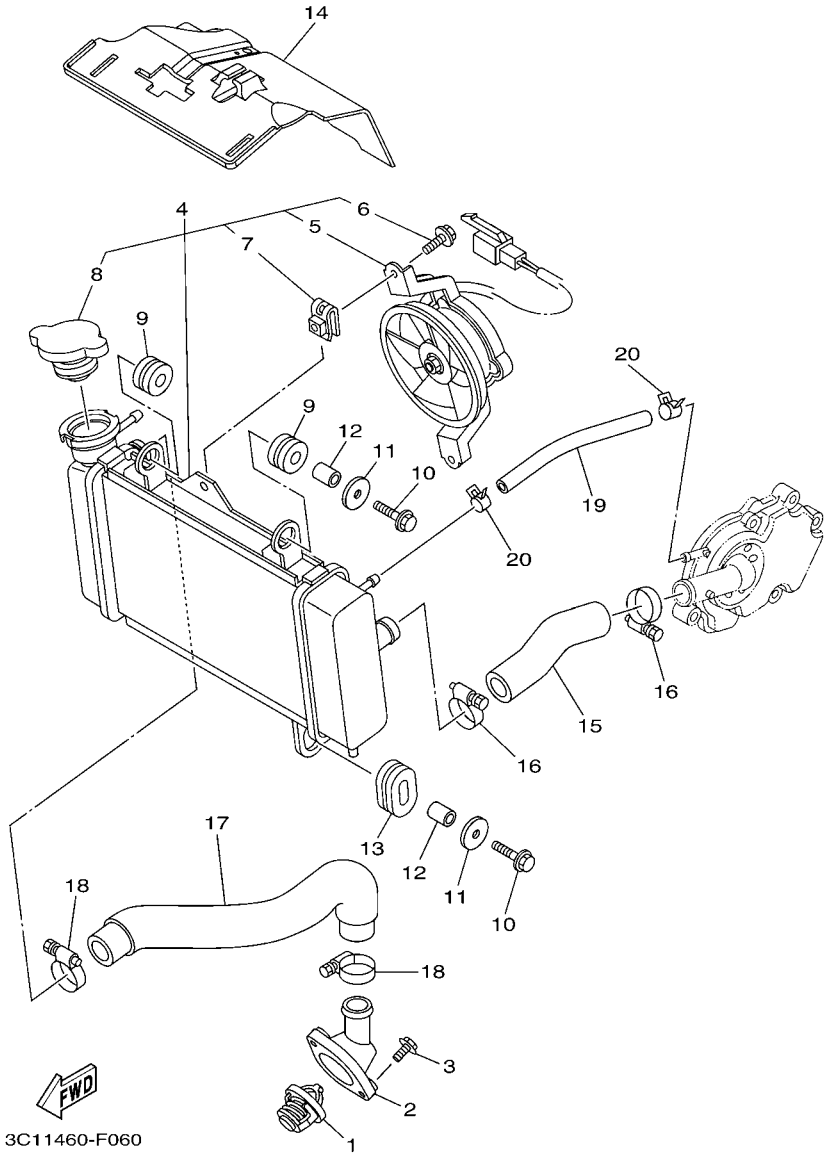

FIG. 6 RADIATOR & HOSE

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	5YP–12411–00	THERMOSTAT	1					
2	1S7–E2413–00	COVER, THERMOSTAT	1					
3	95027–06020	BOLT, FLANGE	2					
4	3C1–E240A–00	RADIATOR ASSY	1					
5	5YP–E2405–00	.BLOWER ASSY	1					
6	5YP–E2675–00	.BOLT, BLOWER HOLDING	2					
7	5YP–E2671–00	.NUT 1	2					
8	5YP–E2462–00	.CAP, RADIATOR	1					
9	90480–15363	GROMMET	2					
10	95827–06025	BOLT, FLANGE	2					
11	90201–06072	WASHER, PLATE	2					
12	90387–064W3	COLLAR	2					
13	90480–01803	GROMMET	1					
14	3C1–E2467–00	COVER, RADIATOR	1					
15	3C1–E2481–00	PIPE 1	1					
16	90450–28801	HOSE CLAMP ASSY	2					
17	3C1–E2482–00	PIPE 2	1					
18	90450–28801	HOSE CLAMP ASSY	2					
19	90445–12804	HOSE	1					
20	90467–10805	CLIP	2					

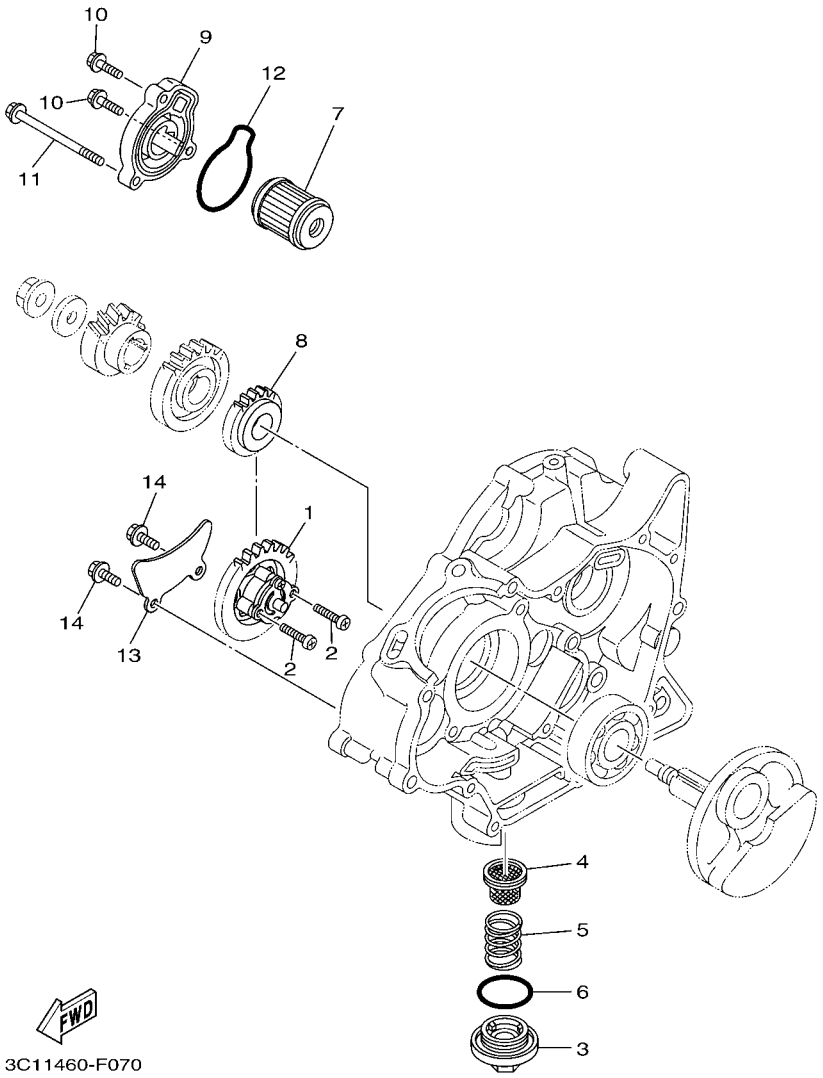

FIG. 7 OIL PUMP

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E3300–00	OIL PUMP ASSY	1					
2	98507–05025	SCREW, PAN HEAD	2					
3	1S7–E5351–00	PLUG, DRAIN	1					
4	1S7–E3411–00	STRAINER, OIL	1					
5	90501–18576	SPRING, COMPRESSION	1					
6	93210–34802	O-RING	1					
7	1S7–E3440–00	ELEMENT ASSY, OIL CLEANER	1					
8	3C1–E3324–00	GEAR, PUMP DRIVE	1					
9	3C1–E3447–00	COVER, OIL ELEMENT	1					
10	9502L–06020	BOLT, FLANGE	2					
11	9502L–06080	BOLT, FLANGE	1					
12	93210–54805	O-RING	1					
13	3C1–E3327–00	COVER, PUMP GEAR	1					
14	9502L–06012	BOLT, FLANGE	2					

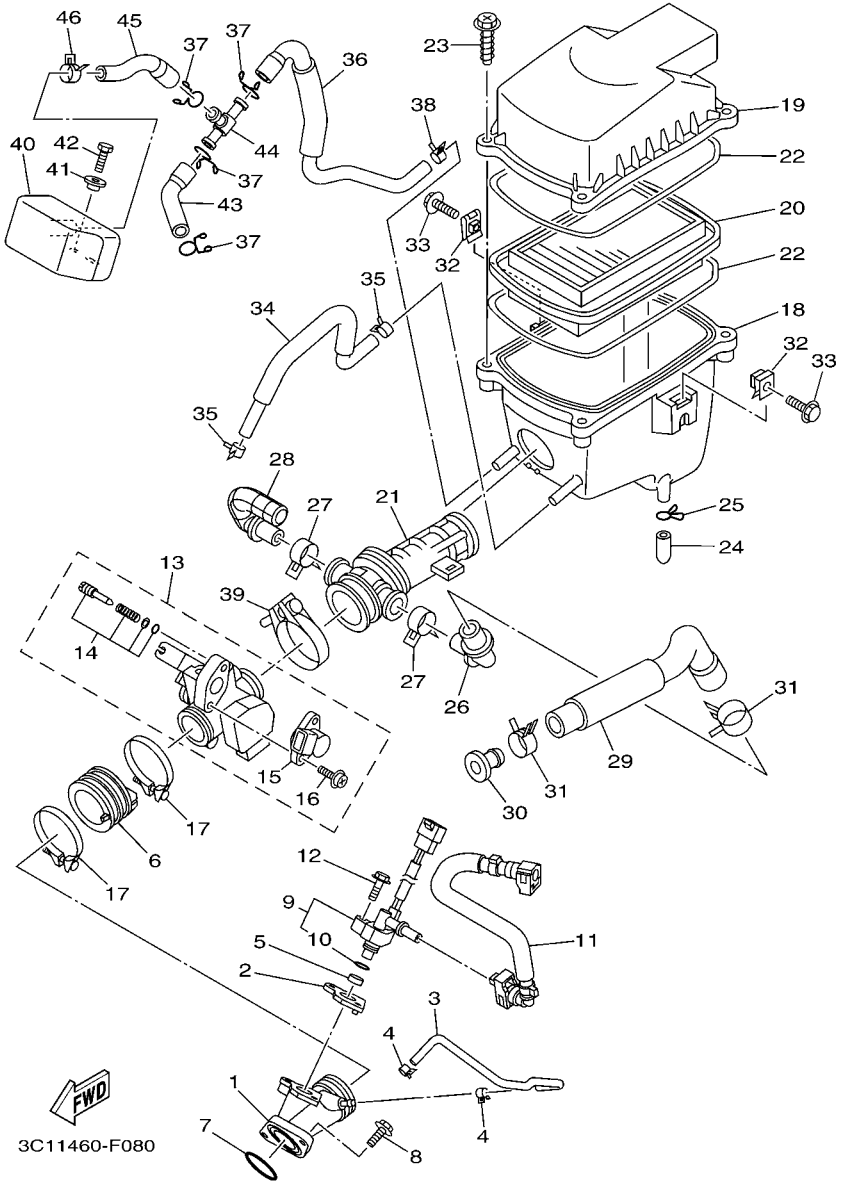

FIG. 8 INTAKE

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E3585–00	MANIFOLD	1					
2	3C1–E3556–00	GASKET, MANIFOLD	1					
3	3C1–E3542–00	HOSE, VACUUM SENSING 1	1					
4	90467–08092	CLIP	2					
5	90430–09800	GASKET	1					
6	3C1–E3586–00	JOINT, CARBURETOR 1	1					
7	93210–32807	O-RING	1					
8	9502N–06020	BOLT, FLANGE	2					
9	3C1–13770–00	INJECTOR ASSY	1					
10	5CA–14147–00	.O-RING	1					
11	3C1–13971–00	PIPE, FUEL 1	1					
12	95817–06030	BOLT, FLANGE	1					
13	3C1–E3750–00	THROTTLE BODY ASSY	1					
14	5JW–14104–00	.AIR SCREW SET	1					
15	2S5–1410H–00	.FUEL CUT SOLENOID VALVE	1					
16	1S4–14216–00	.SCREW	1					
17	5MX–E3575–01	BAND	2					
18	3C1–E4411–00	CASE, AIR CLEANER 1	1					
19	3C1–E4412–00	CAP, CLEANER CASE 1	1					
20	3C1–E4450–00	ELEMENT ASSY, AIR CLEANER	1					
21	3C1–E4453–00	JOINT, AIR CLEANER 1	1					
22	3C1–E4452–00	SEAL	2					
23	90163–05803	SCREW, TAPPING	4					
24	5TL–E443E–00	PIPE, DRAIN	1					
25	90467–12800	CLIP	1					
26	3C1–E4485–00	PIPE, JOINT	1					
27	90467–20050	CLIP	2					

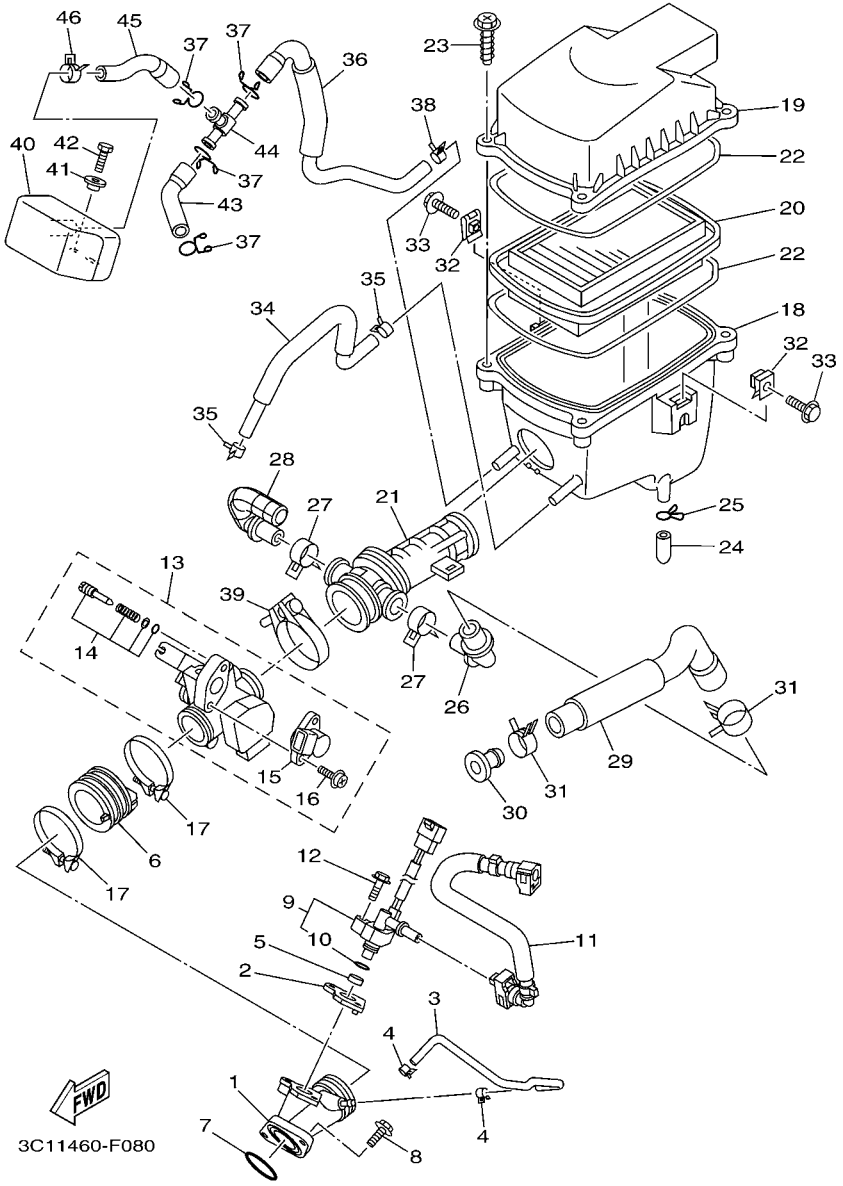

FIG. 8 INTAKE

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
28	3C1–E4419–00	PIPE	1					
29	3C1–E441J–00	PIPE, SILENCER	1					
30	90338–16008	PLUG	1					
31	90467–23801	CLIP	2					
32	90183–06802	NUT, SPRING	2					
33	90119–06051	BOLT, WITH WASHER	2					
34	3C1–E1166–00	PIPE, BREATHER 1	1					
35	90467–13064	CLIP	2					
36	3C1–E4882–00	HOSE, BEND 2	1					
37	90467–15012	CLIP	4					
38	90467–13802	CLIP	1					
39	90450–39802	HOSE CLAMP ASSY	1					
40	3C1–E4877–00	RESONATOR	1					
41	90387–068S1	COLLAR	2					
42	97027–06014	BOLT	2					
43	3C1–E4881–00	HOSE, BEND 1	1					
44	90413–13800	WAY 3	1					
45	3C1–E4883–00	HOSE, BEND 3	1					
46	90467–16800	CLIP	1					

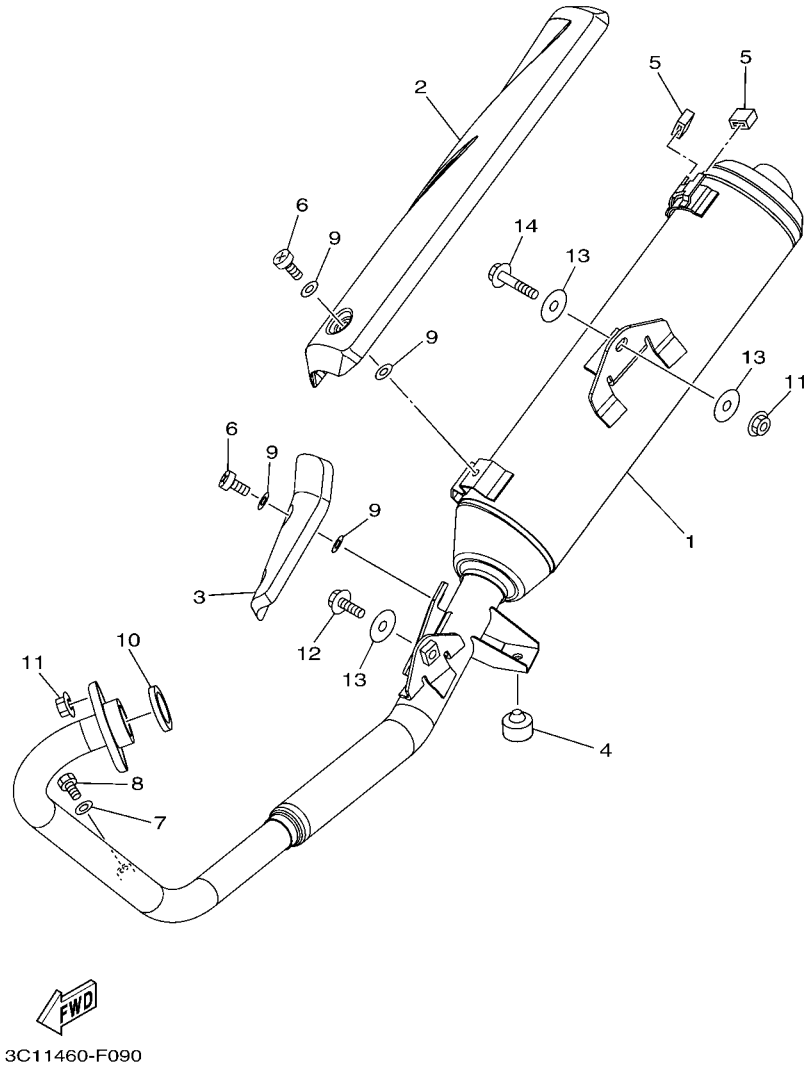

3C11460-F090

FIG. 9 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E4710–00	MUFFLER ASSY 1	1					
2	3C1–E4758–00	PROTECTOR, SILENCER	1					
3	3C1–E4728–00	PROTECTOR, MUFFLER 2	1					
4	4YY–F7114–00	STOPPER, MAIN STAND	1					
5	1S7–E4737–00	DAMPER, MUFFLER	2					
6	98980–06010	SCREW, BIND	4					
7	92990–06600	WASHER, PLATE	1					
8	97080–06008	BOLT	1					
9	90201–05817	WASHER, PLATE	8					
10	1S7–E4613–00	GASKET, EXHAUST PIPE	1					
11	95707–08500	NUT, FLANGE	3					
12	95817–08025	BOLT, FLANGE	1					
13	90201–08612	WASHER, PLATE	3					
14	95817–08040	BOLT, FLANGE	1					

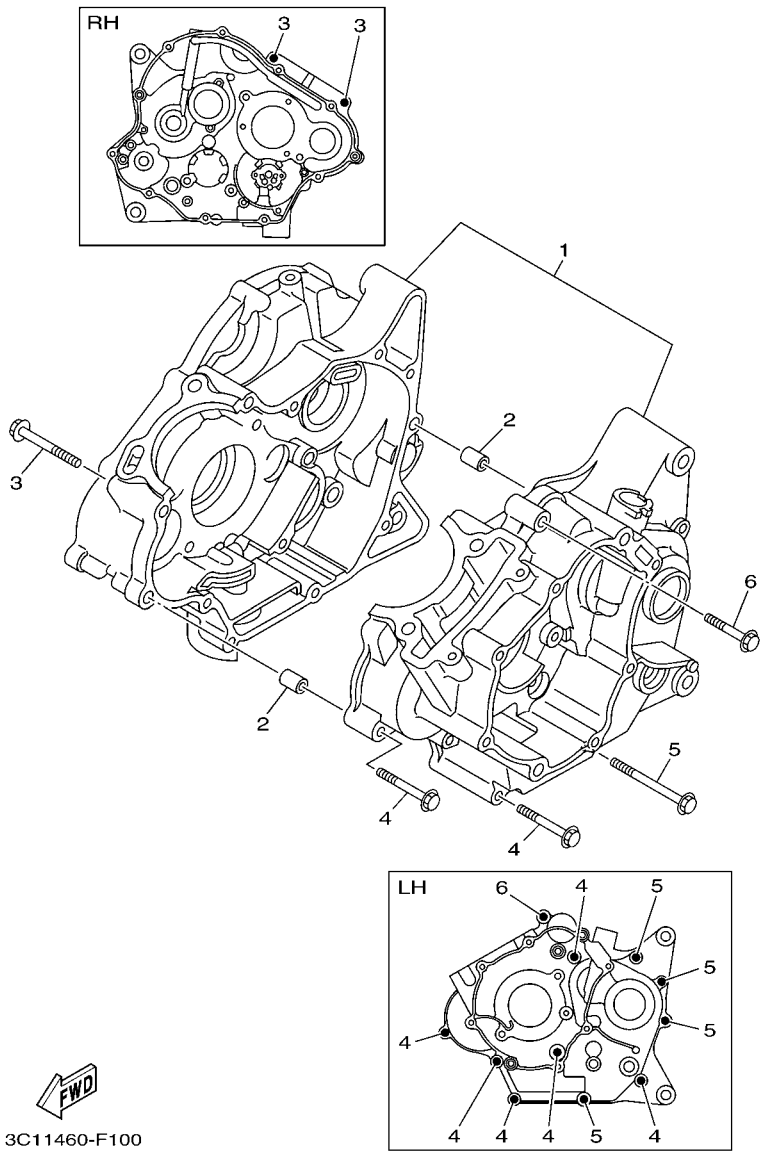

FIG. 10 CRANKCASE

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E5150–00	CRANKCASE ASSY	1					
2	91810–14809	PIN, DOWEL	2					
3	9502L–06055	BOLT, FLANGE	2					
4	9502L–06045	BOLT, FLANGE	6					
5	9502L–06070	BOLT, FLANGE	4					
6	9502L–06040	BOLT, FLANGE	1					

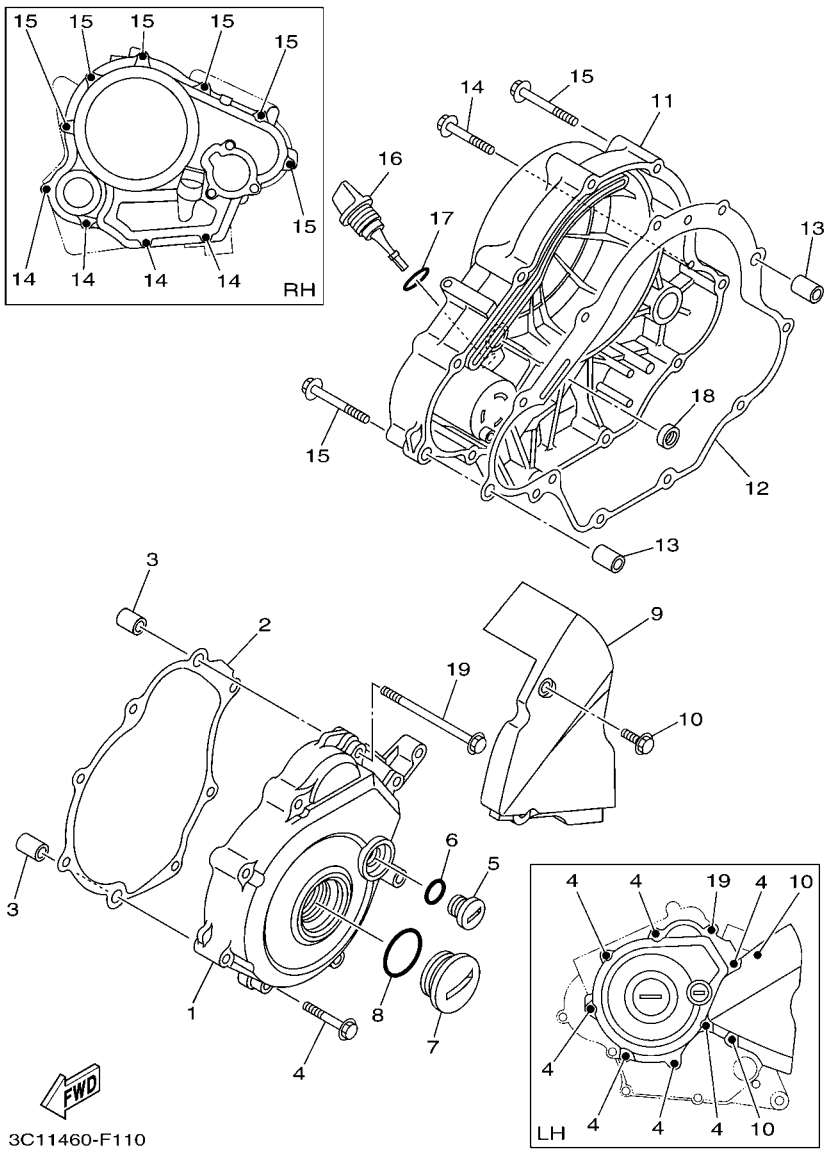

FIG. 11 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E5411–00	COVER, CRANKCASE 1	1					
2	3C1–E5451–00	GASKET, CRANKCASE COVER 1	1					
3	91810–14809	PIN, DOWEL	2					
4	9502L–06040	BOLT, FLANGE	7					
5	90340–14805	PLUG, STRAIGHT SCREW	1					
6	93210–148F8	O-RING	1					
7	90340–32810	PLUG, STRAIGHT SCREW	1					
8	93210–328G3	O-RING	1					
9	3C1–E5418–00	COVER, CHAIN CASE	1					
10	9502L–06016	BOLT, FLANGE	2					
11	3C1–E5421–00	COVER, CRANKCASE 2	1					
12	3C1–E5461–00	GASKET, CRANKCASE COVER 2	1					
13	91810–14809	PIN, DOWEL	2					
14	9502L–06040	BOLT, FLANGE	4					
15	9502L–06050	BOLT, FLANGE	6					
16	3C1–E5362–00	PLUG, OIL LEVEL	1					
17	93210–198F9	O-RING	1					
18	93101–10843	OIL SEAL	1					
19	9502L–06090	BOLT, FLANGE	1					

FIG. 12 STARTER

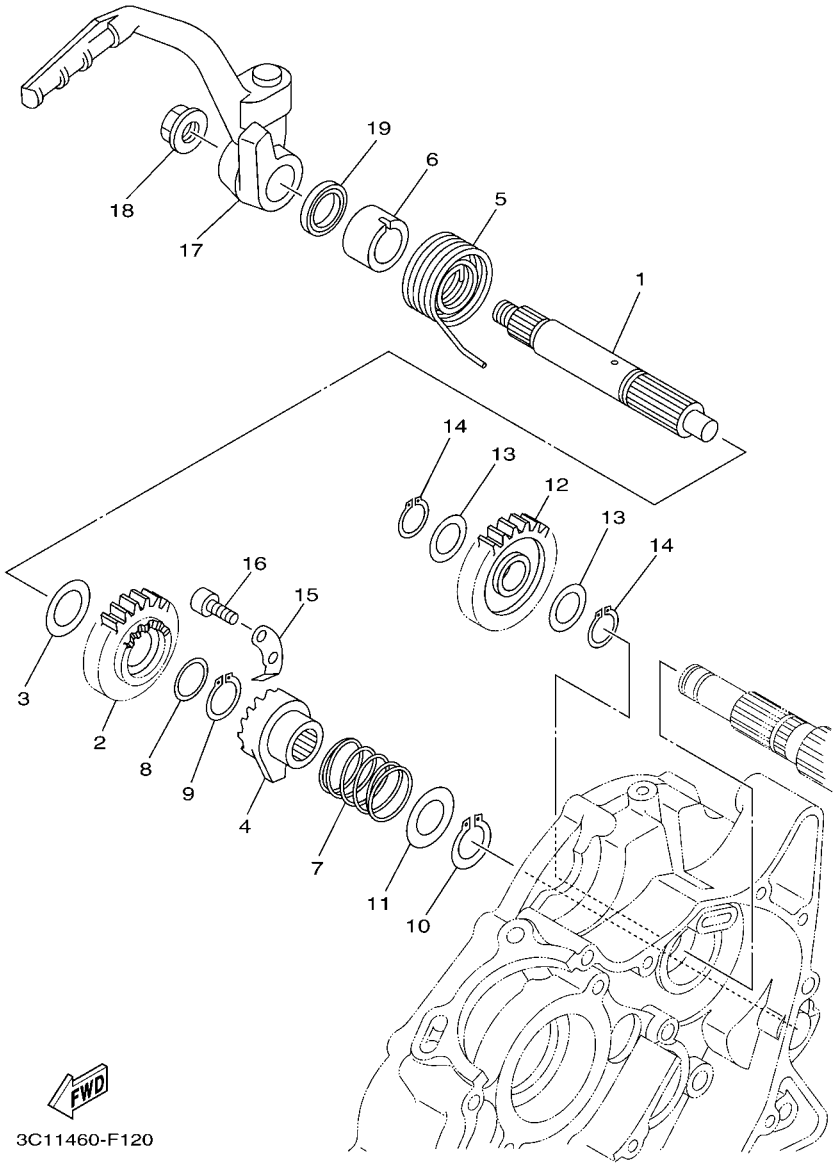

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E5661–00	AXLE, KICK	1					
2	3C1–E5641–00	GEAR, KICK	1					
3	90201–20815	WASHER, PLATE	1					
4	3C1–E5671–00	WHEEL, RATCHET	1					
5	90508–26803	SPRING, TORSION	1					
6	3C1–E5666–00	SPACER	1					
7	3C1–E5767–00	SPRING	1					
8	90201–20685	WASHER, PLATE (T=0.5)	1					
9	93410–20038	CIRCLIP	1					
10	99009–19400	CIRCLIP	1					
11	90201–19800	WASHER, PLATE	1					
12	3C1–E5651–00	GEAR, KICK IDLE	1					
13	90201–175F6	WASHER, PLATE	2					
14	99009–17400	CIRCLIP	2					
15	3C1–E5674–00	GUIDE, RATCHET WHEEL	1					
16	91317–06016	BOLT	2					
17	3C1–E5620–00	KICK CRANK ASSY	1					
18	90179–12802	NUT	1					
19	93109–20800	OIL SEAL	1					

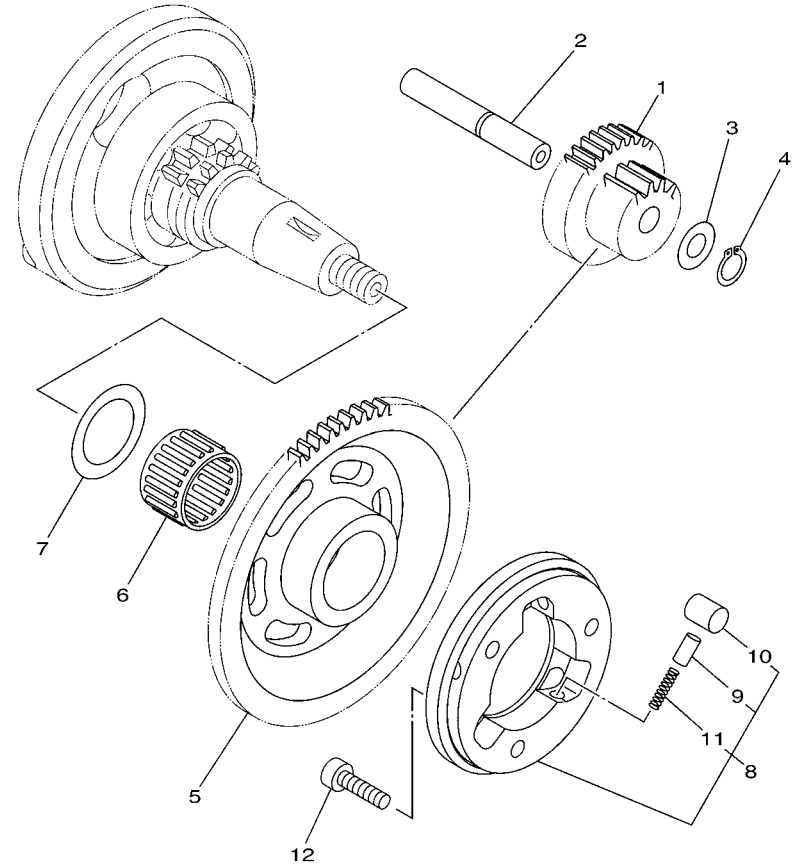

3C11460-F130

FIG. 13 STARTER CLUTCH

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E5514–00	GEAR 2	1					
2	3C1–E5521–00	SHAFT 1	1					
3	90201–105E8	WASHER, PLATE	1					
4	99009–10400	CIRCLIP	1					
5	3C1–E5524–00	WHEEL, STARTER	1					
6	93310–325X1	BEARING	1					
7	90201–25290	WASHER, PLATE	1					
8	5YP–E5580–00	STARTER CLUTCH OUTER ASSY	1					
9	5HV–E5583–00	.CAP, STARTER CLUTCH SPRING	3					
10	5YP–E5614–00	.PIN, DOWEL	3					
11	90501–030A0	.SPRING, COMPRESSION	3					
12	91317–06020	BOLT	3					

FIG. 14 CLUTCH

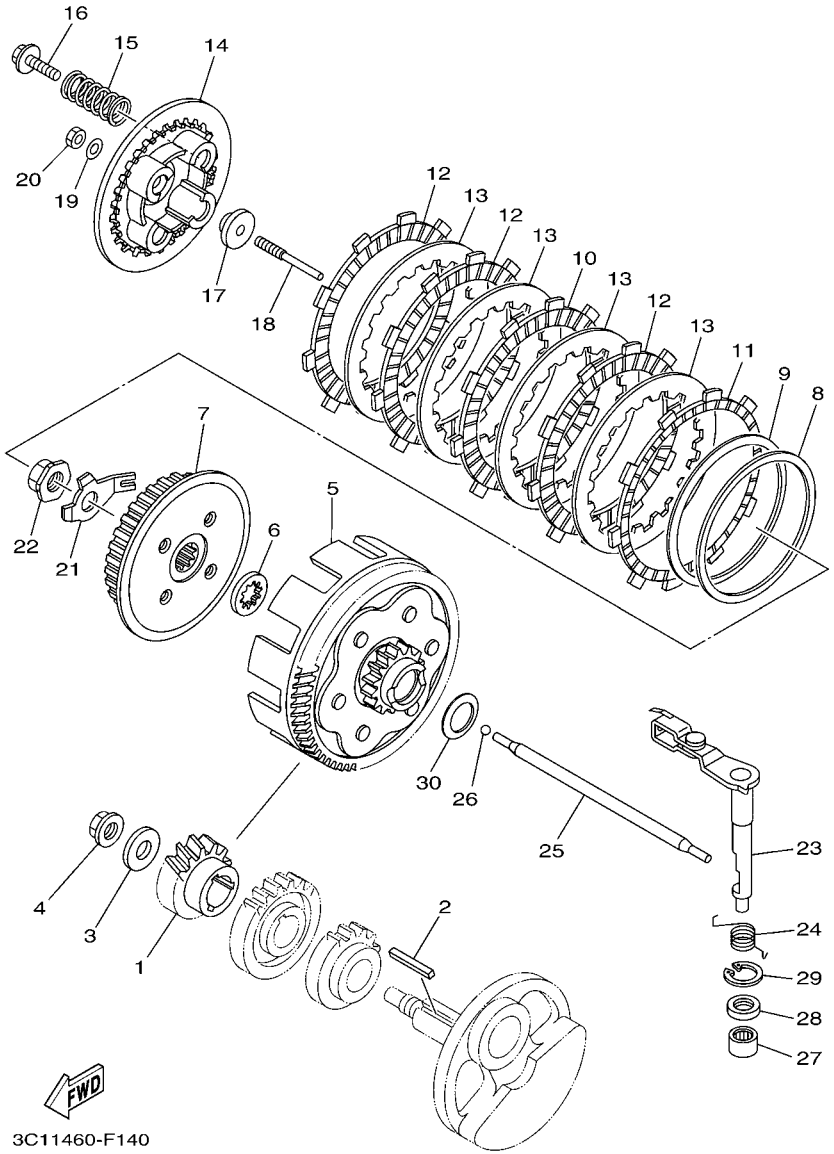

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E6111–00	GEAR, PRIMARY DRIVE	1					
2	3C1–16193–00	KEY, FEATHER	1					
3	90201–12019	WASHER, PLATE	1					
4	90179–12802	NUT	1					
5	3C1–E6150–00	PRIMARY DRIVEN GEAR COMP.	1					
6	3C1–E6154–00	PLATE, THRUST 1	1					
7	3C1–E6371–00	BOSS, CLUTCH	1					
8	3C1–E6384–00	PLATE, SEAT	1					
9	3C1–E6383–00	SPRING, CLUTCH BOSS	1					
10	3C1–E6307–00	PLATE, FRICTION 3	1					
11	3C1–E6331–00	PLATE, FRICTION 2	1					
12	3C1–E6321–00	PLATE, FRICTION	3					
13	3C1–E6324–00	PLATE, CLUTCH 1	4					
14	3C1–E6351–00	PLATE, PRESSURE 1	1					
15	3C1–E6333–00	SPRING, CLUTCH 1	4					
16	3C1–E6337–00	SCREW, SPRING	4					
17	3C1–E6358–00	PLATE, PUSH	1					
18	3C1–E6356–00	ROD, PUSH 1	1					
19	3C1–E6144–00	WASHER	1					
20	3C1–E6344–00	NUT, ADJUSTING	1					
21	3C1–E6135–00	WASHER, LOCK	1					
22	90179–14001	NUT	1					
23	3C1–16380–00	PUSH LEVER ASSY	1					
24	3C1–E6345–00	SPRING, RETURN	1					
25	3C1–16357–00	ROD, PUSH 2	1					
26	93503–16003	BALL	1					
27	93315–112Y8	BEARING	1					

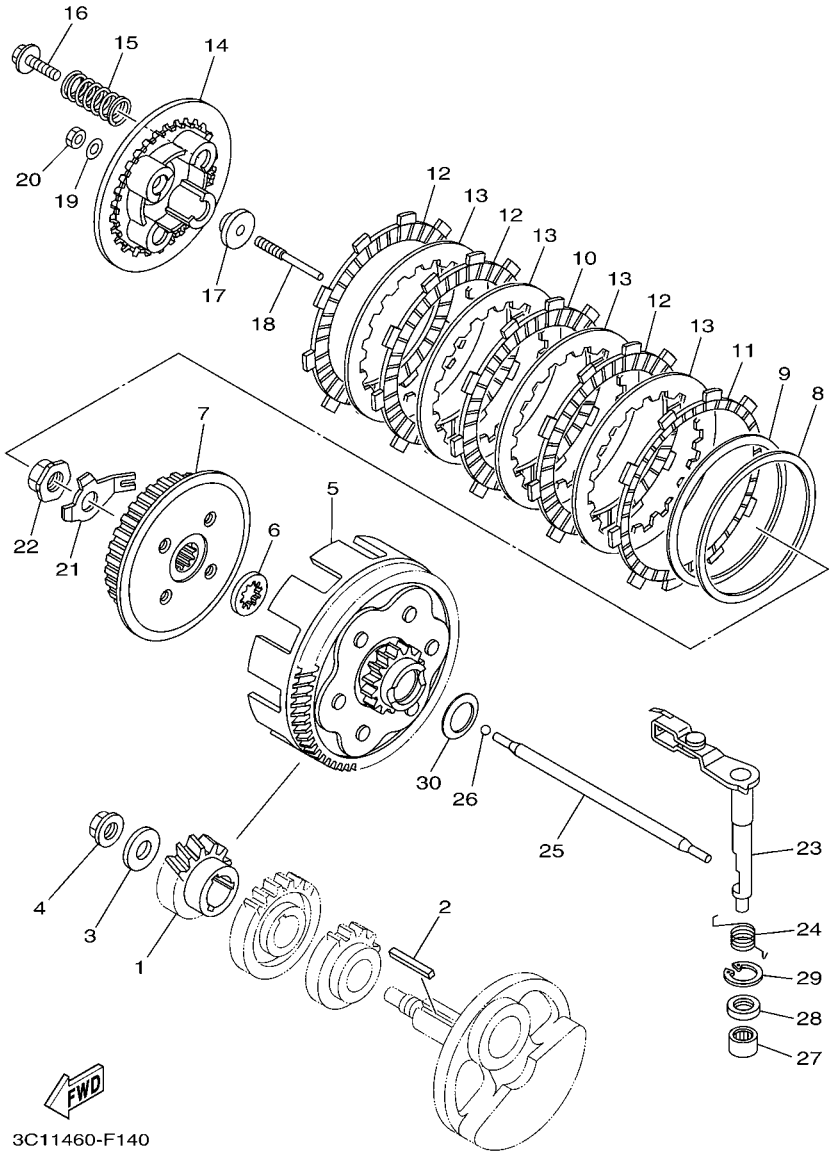

FIG. 14 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
28	93102–12862	OIL SEAL	1					
29	99009–20500	CIRCLIP	1					
30	90208–20003	WASHER, CONICAL SPRING	1					

FIG. 15 TRANSMISSION

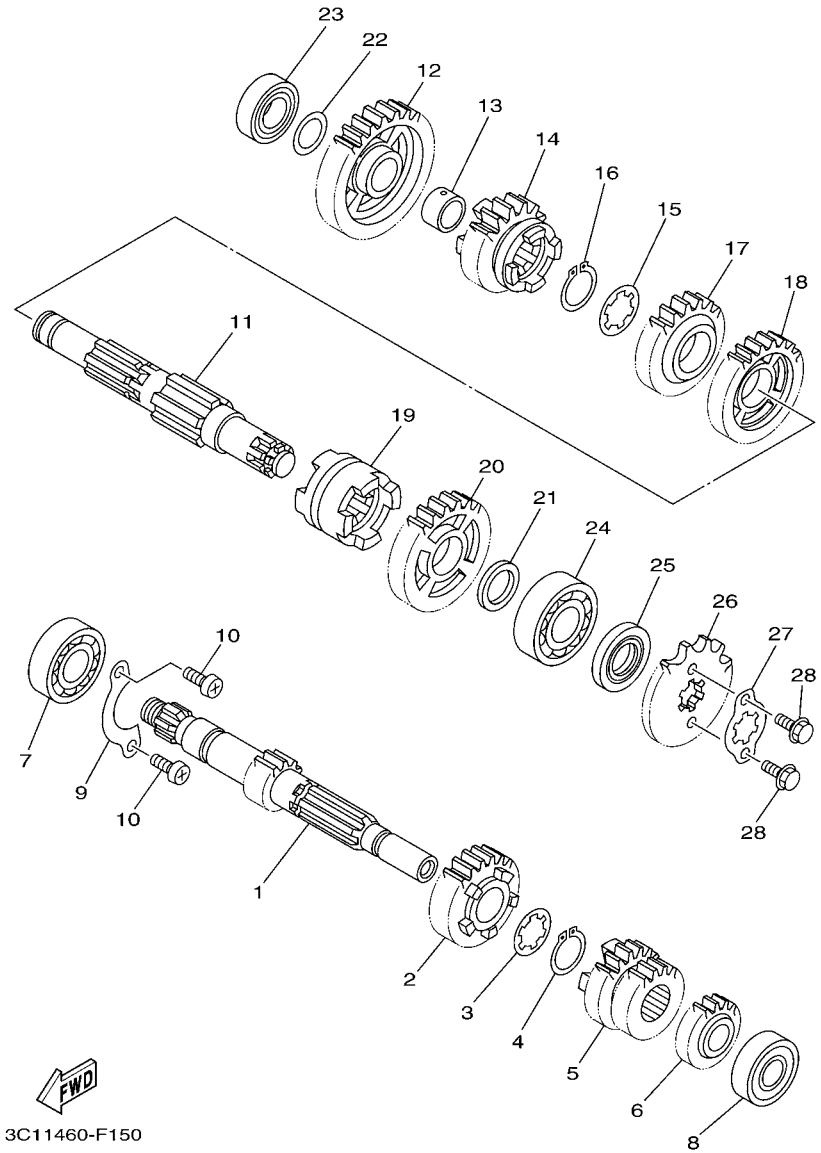

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E7411–00	AXLE, MAIN (12T)	1					
2	3C1–E7151–00	GEAR, 5TH PINION (23T)	1					
3	90209–17285	WASHER	1					
4	93410–20038	CIRCLIP	1					
5	3C1–E7131–00	GEAR, 3RD PINION (21T/21T)	1					
6	3C1–E7121–00	GEAR, 2ND PINION (16T)	1					
7	93306–004XR	BEARING	1					
8	93306–252X1	BEARING	1					
9	3C1–E7471–00	PLATE, COVER	1					
10	98517–06012	SCREW, PAN HEAD	2					
11	3C1–E7402–00	DRIVE AXLE ASSY	1					
12	3C1–E7211–00	GEAR, 1ST WHEEL (34T)	1					
13	90387–17804	COLLAR	1					
14	3C1–E7251–00	GEAR, 5TH WHEEL (22T)	1					
15	90209–18208	WASHER	1					
16	93410–22039	CIRCLIP	1					
17	3C1–E7241–00	GEAR, 4TH WHEEL (24T)	1					
18	3C1–E7231–00	GEAR, 3RD WHEEL (30T)	1					
19	3C1–E7285–00	CLUTCH, DOG	1					
20	3C1–E7221–00	GEAR, 2ND WHEEL (30T)	1					
21	90201–20814	WASHER, PLATE	1					
22	90201–173F4	WASHER, PLATE	1					
23	93306–003Y7	BEARING	1					
24	93306–204YL	BEARING	1					
25	93102–20892	OIL SEAL	1					
26	93822–14815	SPROCKET, DRIVE (14T)	1					
27	3C1–E7456–00	HOLDER, SPROCKET	1					

FIG. 15 TRANSMISSION

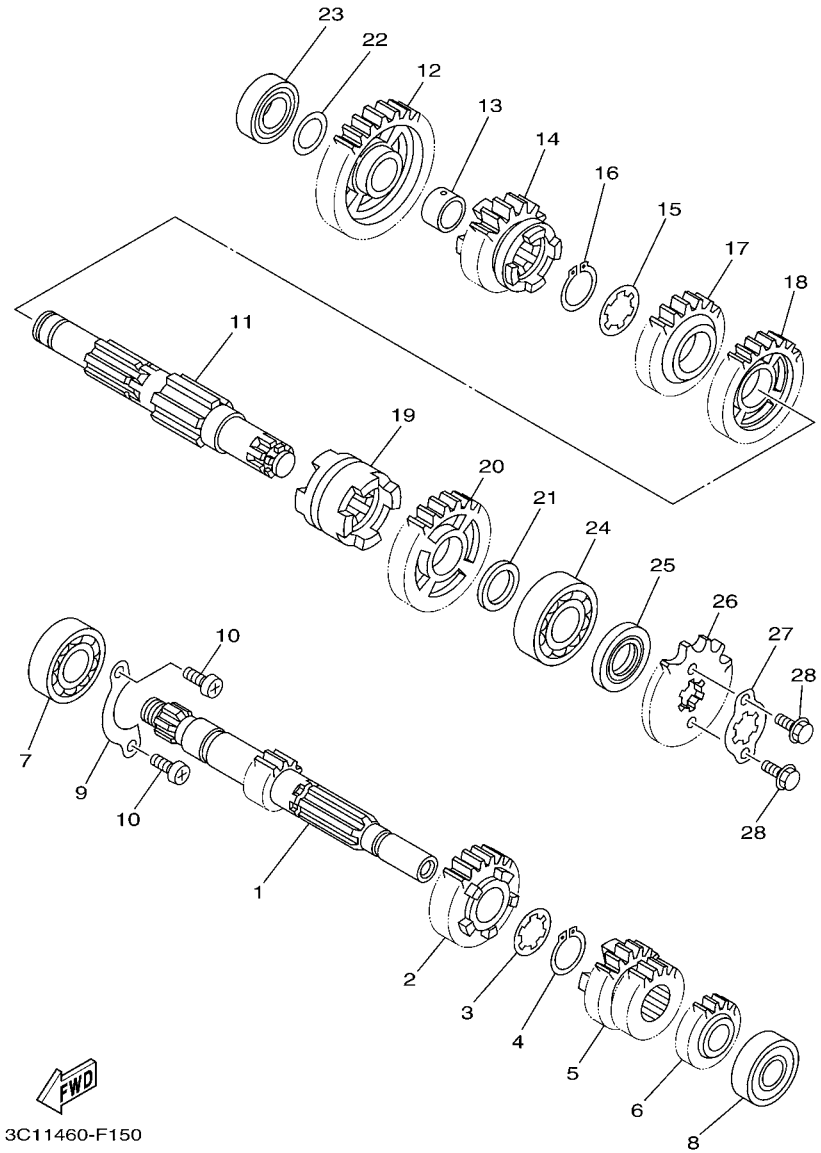

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
28	95027–06010	BOLT, FLANGE	2					

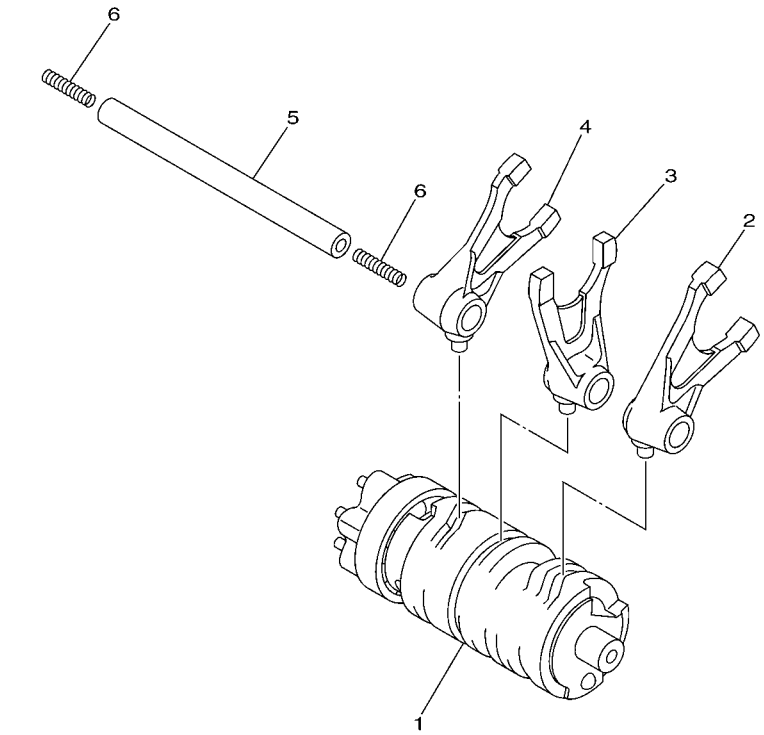

3C11460-F160

FIG. 16 SHIFT CAM & FORK

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E8540–00	SHIFT CAM ASSY	1					
2	3C1–E8511–00	FORK, SHIFT 1	1					
3	3C1–E8512–00	FORK, SHIFT 2	1					
4	3C1–E8513–00	FORK, SHIFT 3	1					
5	3C1–E8531–00	BAR, SHIFT FORK GUIDE 1	1					
6	90501–06800	SPRING, COMPRESSION	2					

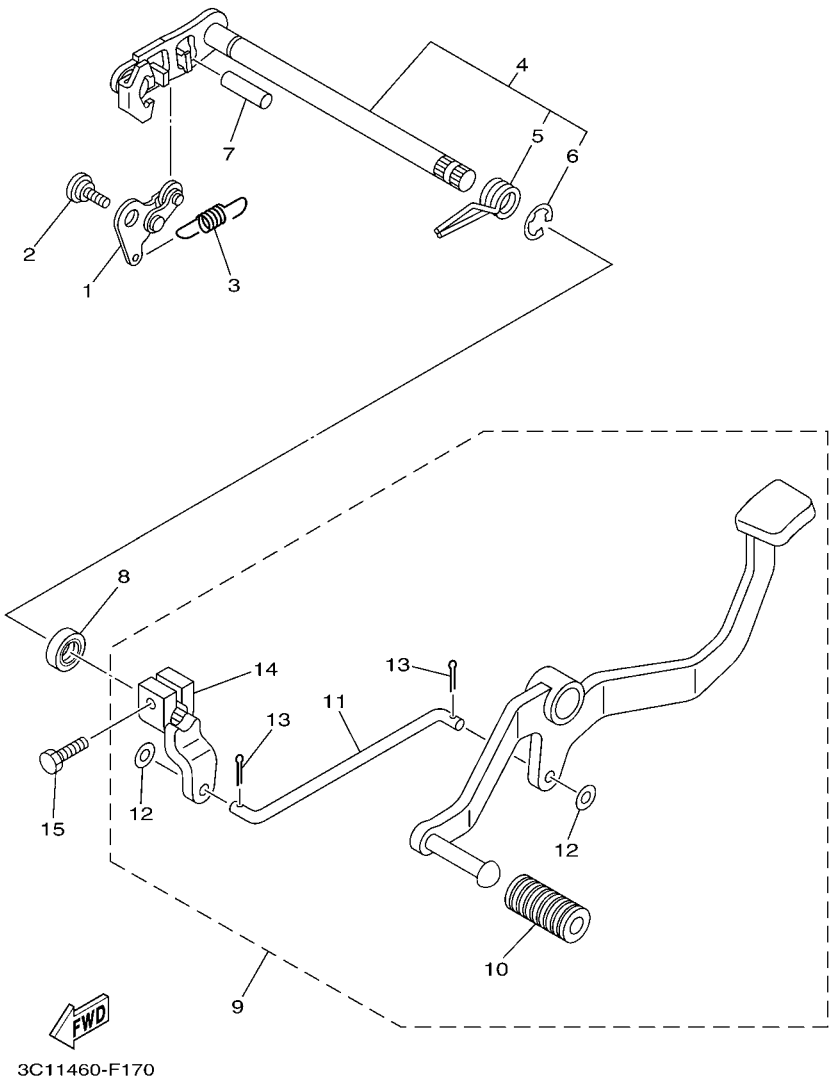

3C11460-F170

FIG. 17 SHIFT SHAFT

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–E8140–00	STOPPER LEVER ASSY	1					
2	3C1–E8119–00	BOLT, SHIFT	1					
3	3C1–E8337–00	SPRING	1					
4	3C1–E8101–00	SHIFT SHAFT ASSY	1					
5	90508–32837	.SPRING, TORSION	1					
6	99001–10600	.CIRCLIP	1					
7	93608–30839	PIN, DOWEL	1					
8	93102–12891	OIL SEAL	1					
9	3C1–E8110–00	SHIFT PEDAL ASSY	1					
10	1EG–E8113–01	.COVER, SHIFT PEDAL	1					
11	3C1–E8115–00	.ROD, SHIFT	1					
12	92907–06200	.WASHER	2					
13	91401–20012	.PIN, COTTER	2					
14	5BP–E8112–00	.ARM, SHIFT	1					
15	97024–06020	BOLT	1					

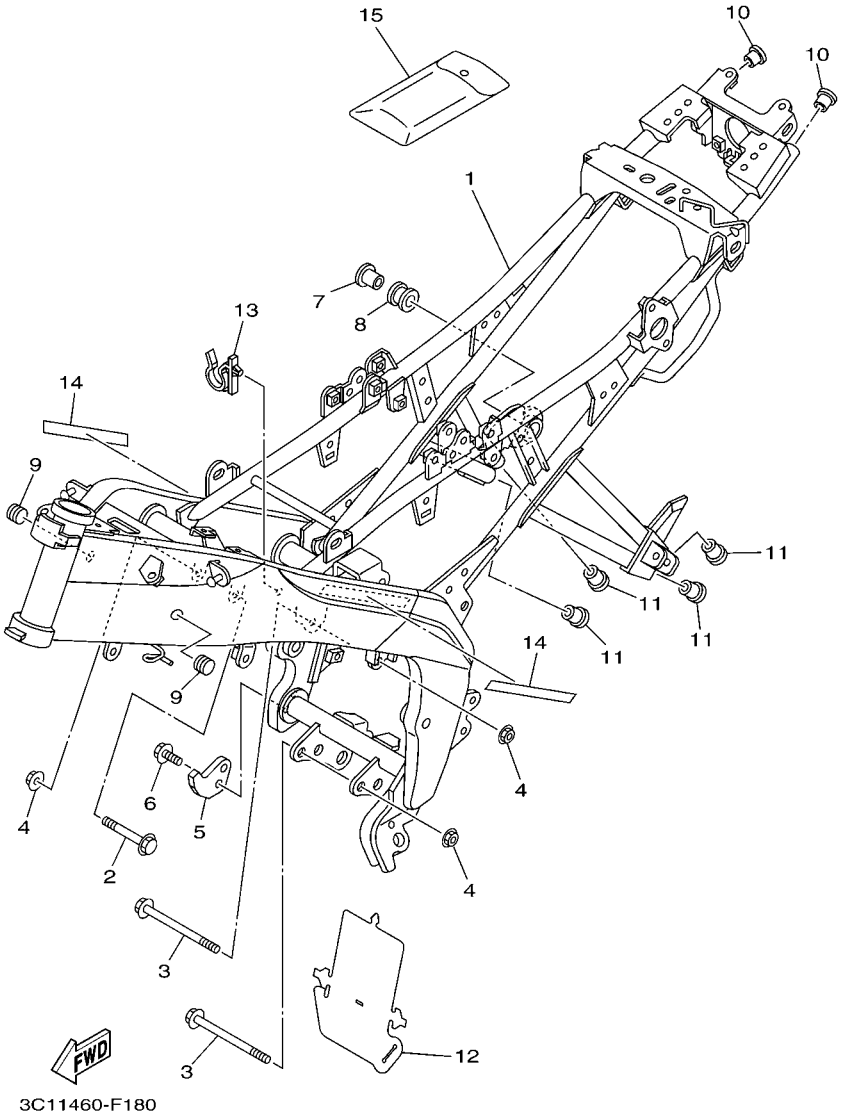

3C11460-F180

FIG. 18 FRAME

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F1110–00	FRAME COMP.	1					
2	90105–10323	BOLT, FLANGE	1					
3	90105–10829	BOLT, FLANGE	2					
4	90179–10805	NUT	3					
5	3C1–F118W–00	STOPPER	1					
6	9581L–08020	BOLT, FLANGE	2					
7	90387–08813	COLLAR	1					
8	5TP–E4747–00	DAMPER, MUFFLER	1					
9	90338–15802	PLUG	2					
10	90338–18122	PLUG	2					
11	90338–16148	PLUG	4					
12	3C1–F2327–00	MUD GUARD 1	1					
13	3C1–F1338–00	CLAMP	1					
14	3C1–F118E–00	EMBLEM 1	2					
15	3C1–F8100–00	TOOL KIT	1					

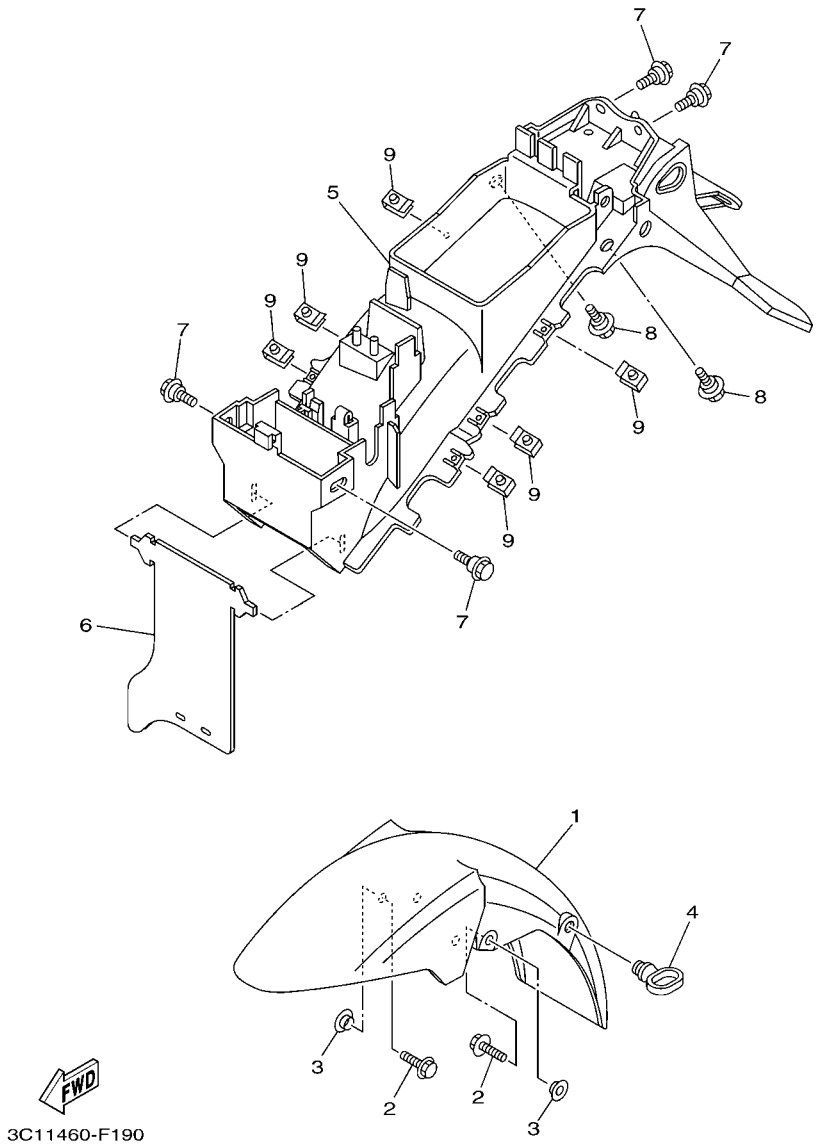

FIG. 19 FENDER

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F1511–00–33	FENDER, FRONT	1					UR FOR YB
	3C1–F1511–00–P0	FENDER, FRONT	1					UR FOR DRMK
	3C1–F1511–00–P1	FENDER, FRONT	1					UR FOR DPBMC
2	90119–06044	BOLT, WITH WASHER	4					
3	90387–062M9	COLLAR	4					
4	4ST–F1518–00	HOLDER, CABLE	1					
5	3C1–F1611–00	FENDER, REAR	1					
6	3C1–F1621–00	FLAP	1					
7	90109–063F1	BOLT	4					
8	90109–06183	BOLT	2					
9	90183–05807	NUT, SPRING	6					

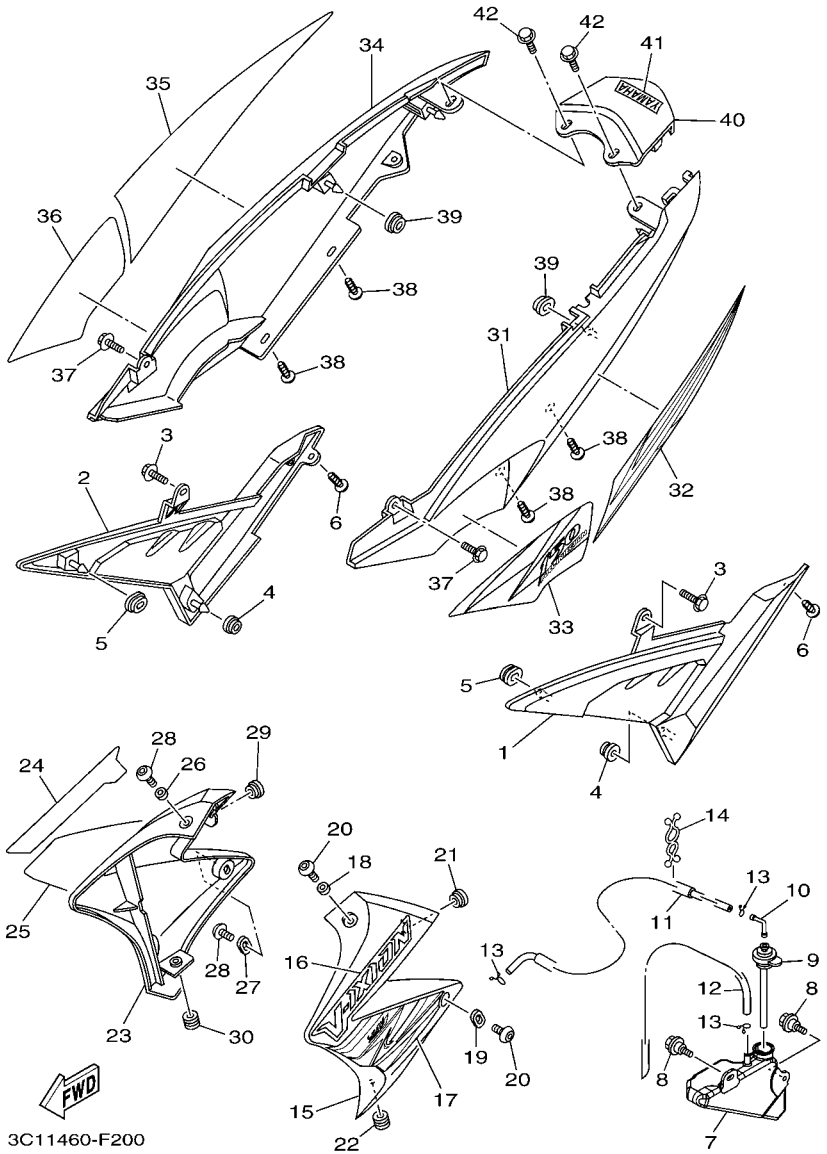

FIG. 20 SIDE COVER

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F1711–00	COVER, SIDE 1	1					
2	3C1–F1721–00	COVER, SIDE 2	1					
3	90119–06044	BOLT, WITH WASHER	2					
4	90480–13567	GROMMET	2					
5	90480–01558	GROMMET	2					
6	97707–50014	SCREW, TRUSS HEAD TAPPING	2					
7	3C1–F1871–00	TANK, RECOVERY	1					
8	90109–06183	BOLT	2					
9	3C1–F1875–00	CAP	1					
10	3C1–F1828–00	ELBOW	1					
11	90445–08831	HOSE	1					
12	90445–08832	HOSE	1					
13	90467–08003	CLIP	3					
14	90464–14807	CLAMP	1					
15	3C1–F137W–00–33	SCOOP, AIR 1	1					UR FOR YB
	3C1–F137W–00–P0	SCOOP, AIR 1	1					UR FOR DRMK
	3C1–F137W–00–P1	SCOOP, AIR 1	1					UR FOR DPBMC
16	3C1–F137N–01	GRAPHIC 1	1					UR FOR YB
	3C1–F137N–11	GRAPHIC 1	1					UR FOR DRMK
	3C1–F137N–21	GRAPHIC 1	1					UR FOR DPBMC
17	3C1–F137P–00	GRAPHIC 2	1					UR FOR YB
	3C1–F137P–10	GRAPHIC 2	1					UR FOR DRMK
	3C1–F137P–20	GRAPHIC 2	1					UR FOR DPBMC
18	90387–06897	COLLAR	1					
19	3C1–F1748–00	COLLAR	1					
20	90149–06821	SCREW	2					
21	90480–12320	GROMMET	1					

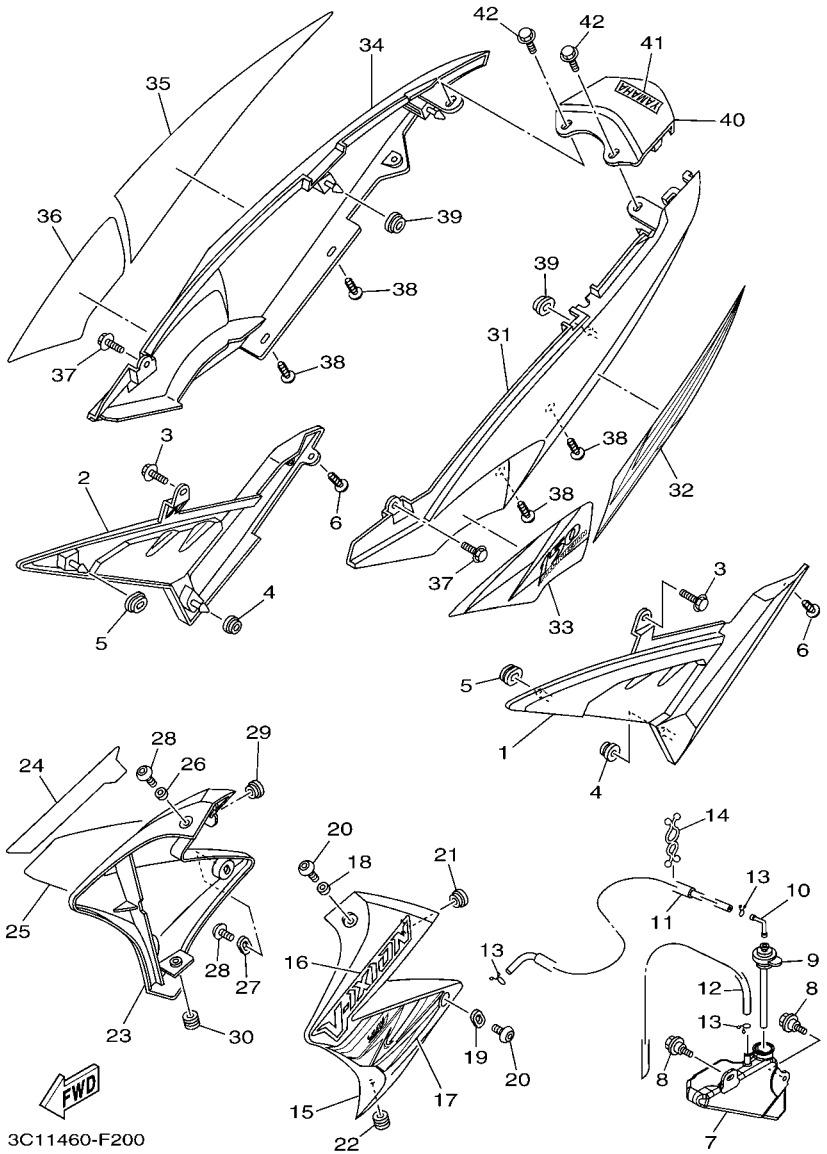

FIG. 20 SIDE COVER

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
22	90480–10623	GROMMET	1					
23	3C1–F137X–00–33	SCOOP, AIR 2	1					UR FOR YB
	3C1–F137X–00–P0	SCOOP, AIR 2	1					UR FOR DRMK
	3C1–F137X–00–P1	SCOOP, AIR 2	1					UR FOR DPBMC
24	3C1–F137N–01	GRAPHIC 1	1					UR FOR YB
	3C1–F137N–11	GRAPHIC 1	1					UR FOR DRMK
	3C1–F137N–21	GRAPHIC 1	1					UR FOR DPBMC
25	3C1–F137R–00	GRAPHIC 3	1					UR FOR YB
	3C1–F137R–10	GRAPHIC 3	1					UR FOR DRMK
	3C1–F137R–20	GRAPHIC 3	1					UR FOR DPBMC
26	90387–06897	COLLAR	1					
27	3C1–F1748–00	COLLAR	1					
28	90149–06821	SCREW	2					
29	90480–12320	GROMMET	1					
30	90480–10623	GROMMET	1					
31	3C1–F1731–00–33	COVER, SIDE 3	1					UR FOR YB
	3C1–F1731–00–P0	COVER, SIDE 3	1					UR FOR DRMK
	3C1–F1731–00–P1	COVER, SIDE 3	1					UR FOR DPBMC
32	3C1–F173E–00	GRAPHIC 1	1					UR FOR YB
	3C1–F173E–10	GRAPHIC 1	1					UR FOR DRMK
	3C1–F173E–20	GRAPHIC 1	1					UR FOR DPBMC
33	3C1–F174G–00	GRAPHIC 3	1					UR FOR YB
	3C1–F174G–10	GRAPHIC 3	1					UR FOR DRMK
	3C1–F174G–20	GRAPHIC 3	1					UR FOR DPBMC
34	3C1–F1741–00–33	COVER, SIDE 4	1					UR FOR YB
	3C1–F1741–00–P0	COVER, SIDE 4	1					UR FOR DRMK
	3C1–F1741–00–P1	COVER, SIDE 4	1					UR FOR DPBMC

FIG. 20 SIDE COVER

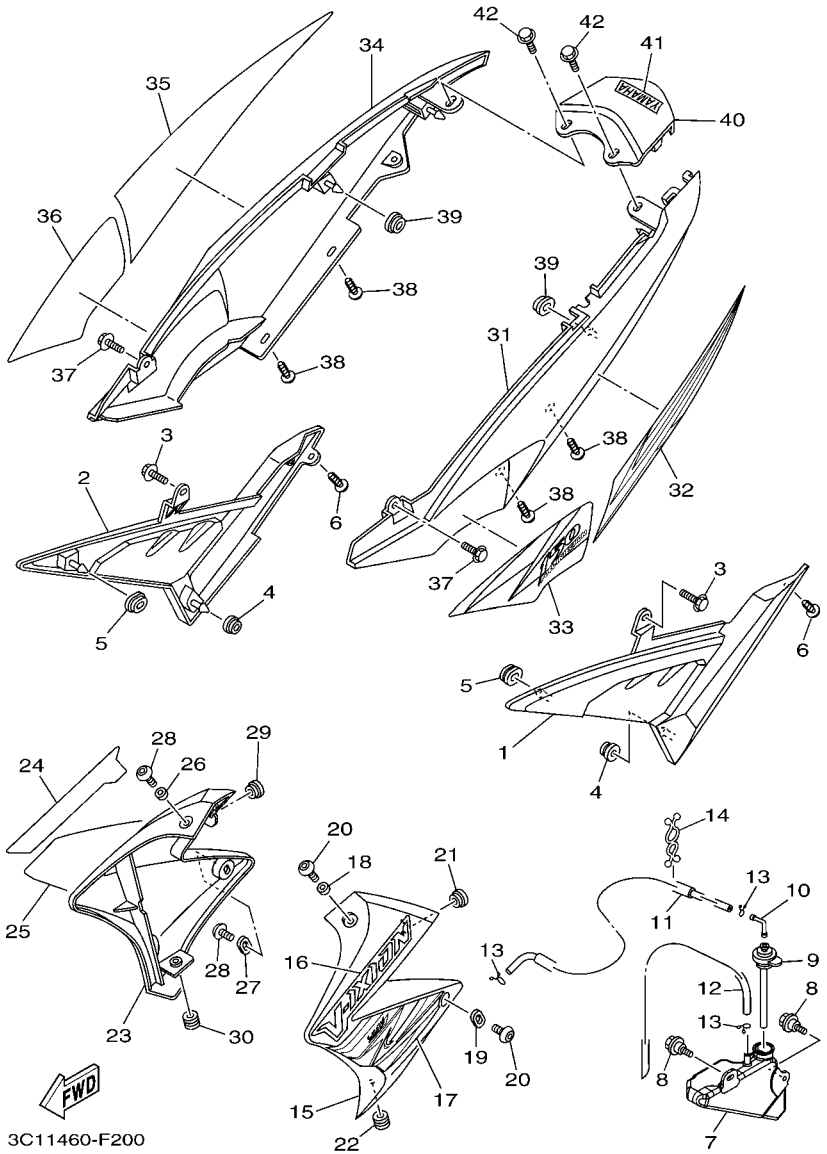

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
35	3C1–F173F–00	GRAPHIC 2	1					UR FOR YB
	3C1–F173F–10	GRAPHIC 2	1					UR FOR DRMK
	3C1–F173F–20	GRAPHIC 2	1					UR FOR DPBMC
36	3C1–F174H–00	GRAPHIC 4	1					UR FOR YB
	3C1–F174H–10	GRAPHIC 4	1					UR FOR DRMK
	3C1–F174H–20	GRAPHIC 4	1					UR FOR DPBMC
37	90119–06044	BOLT, WITH WASHER	2					
38	97707–50014	SCREW, TRUSS HEAD TAPPING	4					
39	90480–01558	GROMMET	2					
40	3C1–F171E–00–33	COVER, SIDE 5	1					UR FOR YB
	3C1–F171E–00–P0	COVER, SIDE 5	1					UR FOR DRMK
	3C1–F171E–00–P1	COVER, SIDE 5	1					UR FOR DPBMC
41	5BP–F153E–00	EMBLEM, YAMAHA	1					UR FOR YB
	5BP–F153E–10	EMBLEM, YAMAHA	1					UR FOR DRMK
	5BP–F153E–20	EMBLEM, YAMAHA	1					UR FOR DPBMC
42	90119–06044	BOLT, WITH WASHER	2					

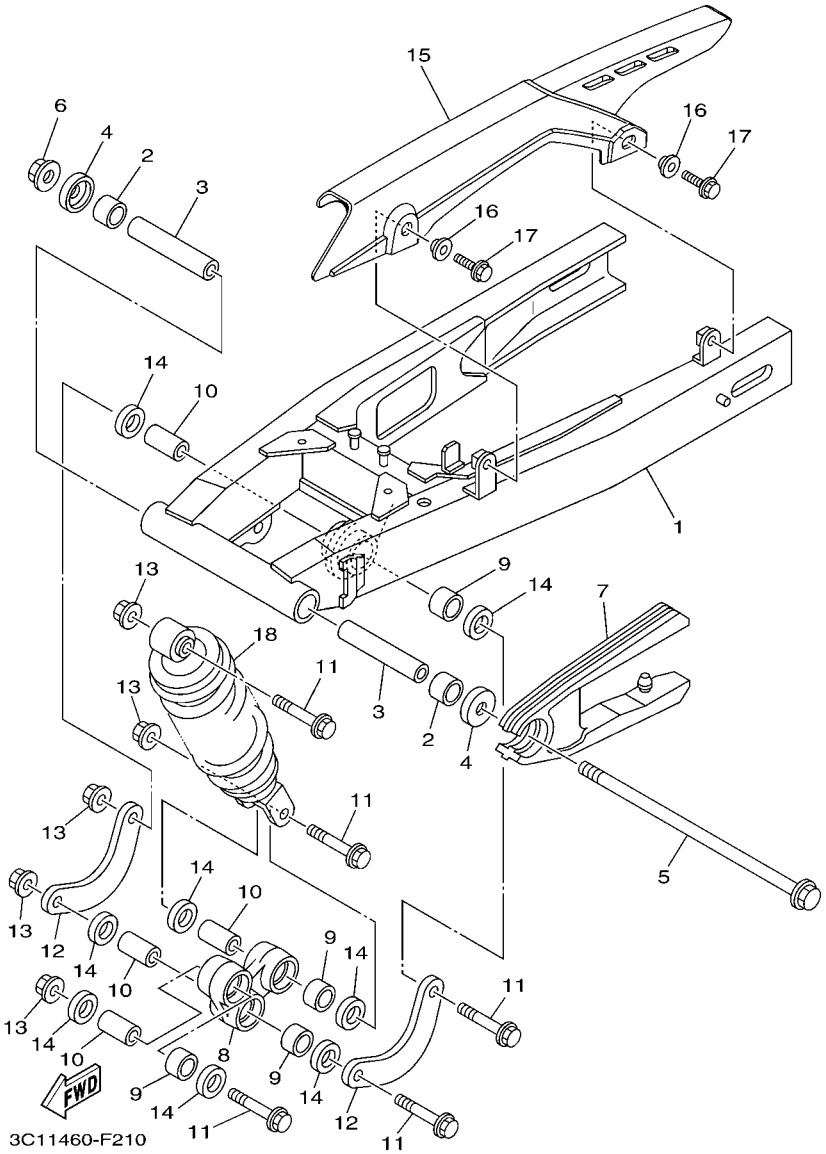

FIG. 21 REAR ARM & SUPPORT

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F2110–00	REAR ARM COMP.	1					
2	93317–218Y1	BEARING	2					
3	3C1–F2184–00	BUSH	2					
4	5BP–F2129–00	COVER, THRUST 2	2					
5	3C1–F2141–00	SHAFT, PIVOT	1					
6	9570L–12500	NUT, FLANGE	1					
7	3C1–F2151–00	SEAL, GUARD	1					
8	3C1–F217A–00	ARM, RELAY	1					
9	93315–317Y1	BEARING	4					
10	90387–10814	COLLAR	4					
11	90105–10826	BOLT, FLANGE	5					
12	3C1–F217F–00	ROD, CONNECTING 1	2					
13	90179–10805	NUT	5					
14	93106–17801	OIL SEAL	8					
15	3C1–F2311–00	CASE, CHAIN	1					
16	90387–09803	COLLAR	2					
17	95827–06014	BOLT, FLANGE	2					
18	3C1–F2210–00	SHOCK ABSORBER ASSY, REAR	1					

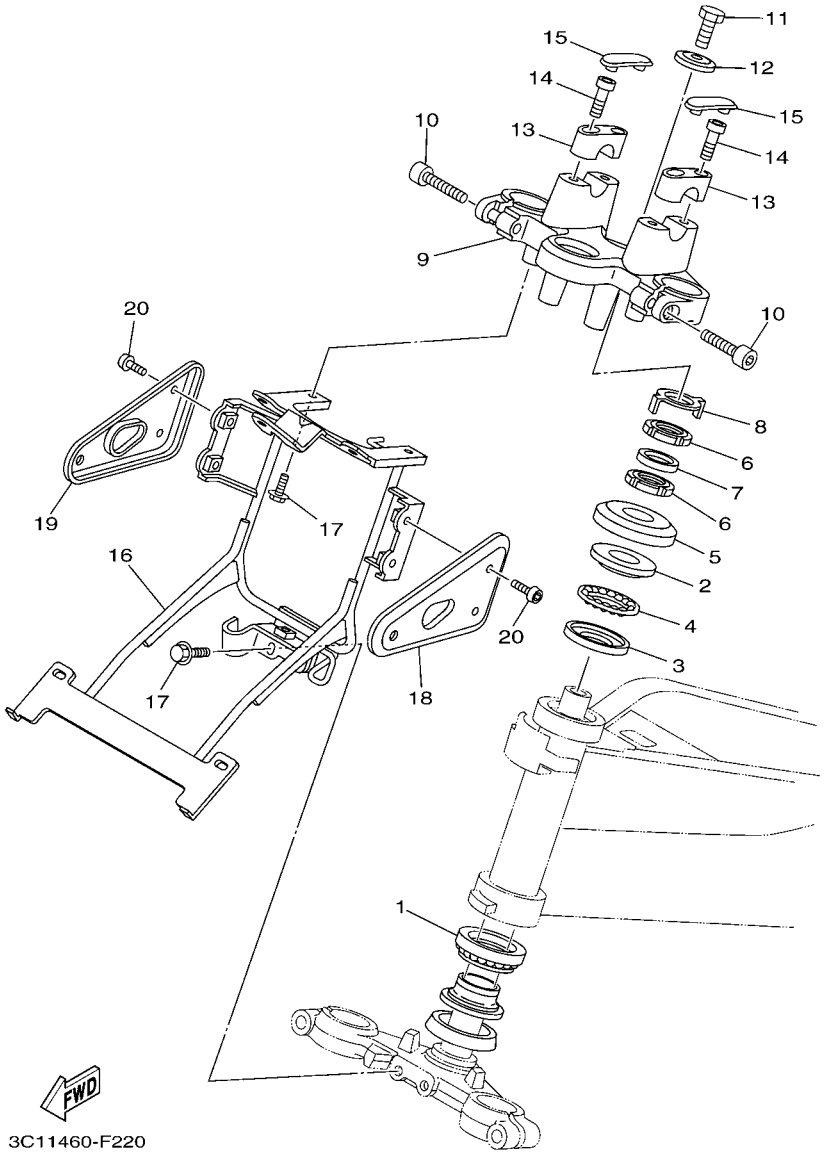

3C11460-F220

FIG. 22 STEERING

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	5BP–F3873–01	BEARING, STEERING UPPER	1					
2	183–23411–00	RACE, BALL 1	1					
3	183–23412–00	RACE, BALL 2	1					
4	5TL–2341E–00	RETAINER, BALL BEARING	1					
5	5BP–F3416–00	COVER, BALL RACE 2	1					
6	90179–25615	NUT	2					
7	90202–26142	WASHER, PLATE	1					
8	5BP–F3418–00	WASHER, SPECIAL	1					
9	3C1–F3435–00	CROWN, HANDLE	1					
10	9131L–08030	BOLT	2					
11	90105–10006	BOLT, FLANGE	1					
12	90209–10020	WASHER	1					
13	3KA–F3441–10	HOLDER, HANDLE UPPER	2					
14	91317–08030	BOLT	4					
15	3KA–F3469–00	CAP, BOLT	2					
16	3C1–F3174–00	STAY, HEADLIGHT	1					
17	95027–06012	BOLT, FLANGE	4					
18	3C1–F3121–00	COVER, UPPER 1	1					
19	3C1–F3131–00	COVER, UPPER 2	1					
20	92014–06010	BOLT, BUTTON HEAD	4					

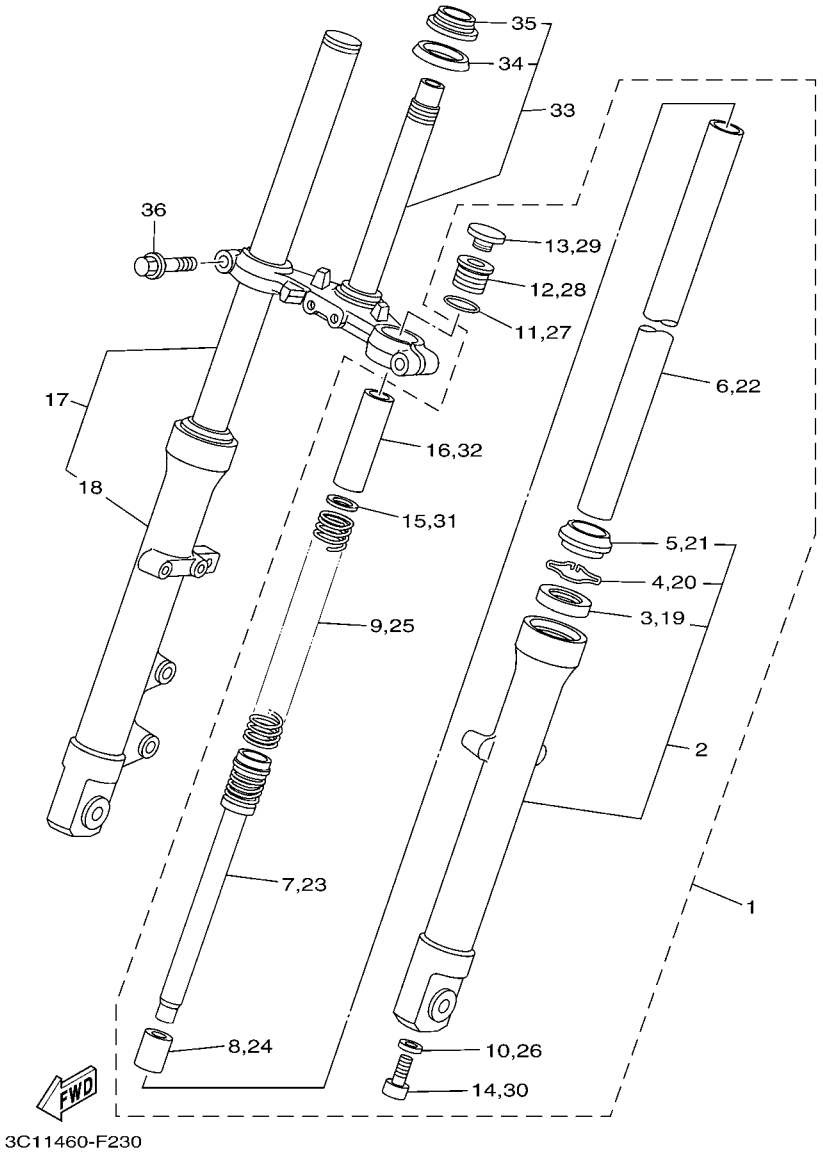

3C11460-F230

FIG. 23 FRONT FORK

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F3102–01	FRONT FORK ASSY (L.H)	1					
2	3C1–F3126–01	.TUBE, OUTER (LEFT)	1					
3	5BP–F3145–00	..OIL SEAL	1					
4	22W–F3156–L0	..CLIP, OIL SEAL	1					
5	5BP–F3144–00	..SEAL, DUST	1					
6	3C1–F3110–01	.INNER TUBE COMP.1	1					
7	3C1–F3170–00	.CYLINDER COMP., FRONT FORK	1					
8	2JK–F3173–00	.SPINDLE, TAPER	1					
9	3C1–F3141–00	.SPRING, FRONT FORK	1					
10	509–F3158–L0	.GASKET	1					
11	2JK–F3114–00	.GASKET	1					
12	3C1–F3111–00	.BOLT, CAP	1					
13	2N4–23168–00	.PLUG	1					
14	2JK–F3181–00	.BOLT, HEXAGON SOCKET HEAD	1					
15	2JK–F3149–01	.WASHER, SPRING UPPER	1					
16	3C1–F3118–01	.SPACER	1					
17	3C1–F3103–01	FRONT FORK ASSY (R.H)	1					
18	3C1–F3136–01	.TUBE, OUTER (RIGHT)	1					
19	5BP–F3145–00	..OIL SEAL	1					
20	22W–F3156–L0	..CLIP, OIL SEAL	1					
21	5BP–F3144–00	..SEAL, DUST	1					
22	3C1–F3110–01	.INNER TUBE COMP.1	1					
23	3C1–F3170–00	.CYLINDER COMP., FRONT FORK	1					
24	2JK–F3173–00	.SPINDLE, TAPER	1					
25	3C1–F3141–00	.SPRING, FRONT FORK	1					
26	509–F3158–L0	.GASKET	1					
27	2JK–F3114–00	.GASKET	1					

FIG. 23 FRONT FORK

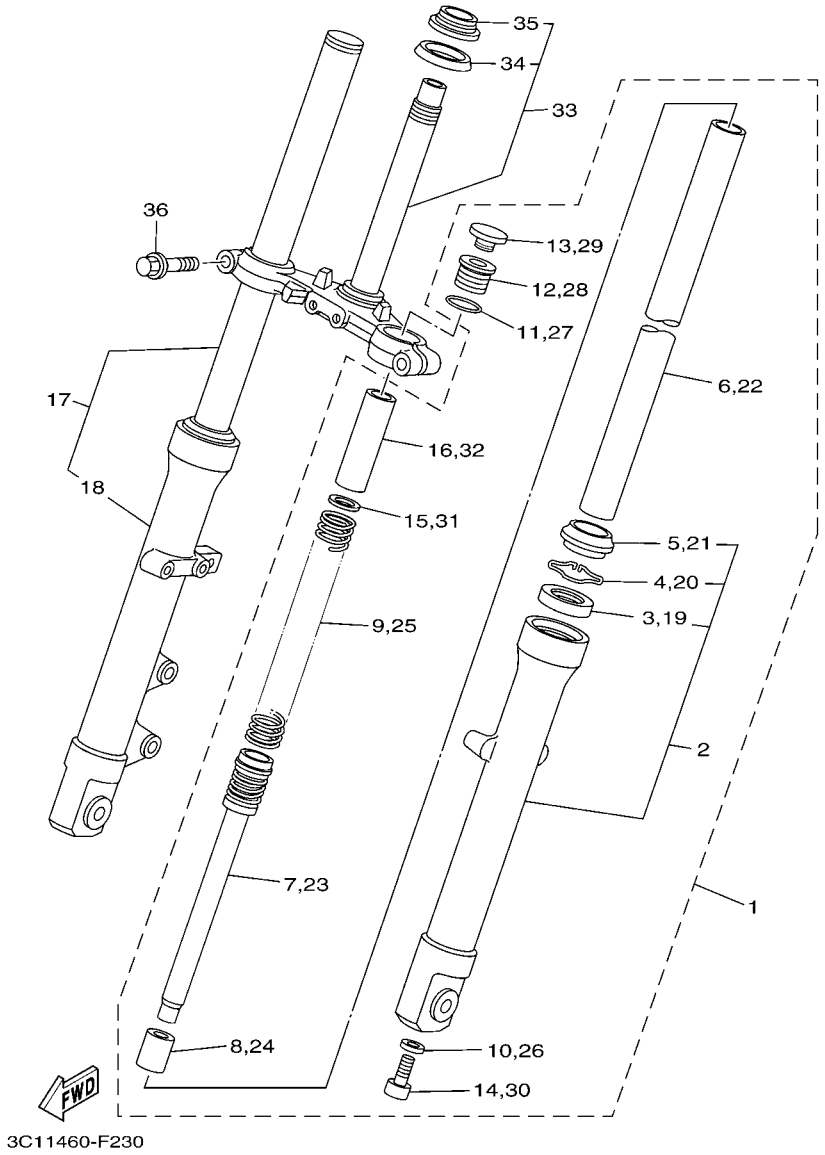

3C11460-F230

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
28	3C1–F3111–00	.BOLT, CAP	1					
29	2N4–23168–00	.PLUG	1					
30	2JK–F3181–00	.BOLT, HEXAGON SOCKET HEAD	1					
31	2JK–F3149–01	.WASHER, SPRING UPPER	1					
32	3C1–F3118–01	.SPACER	1					
33	3C1–F3340–00	UNDER BRACKET COMP.	1					
34	164–23462–00	.SEAL, STEERING	1					
35	5BP–F3875–00	.PLANE BEARING, STEERING LOWER	1					
36	2JK–F3346–00	BOLT 1	2					

FIG. 24 FUEL TANK

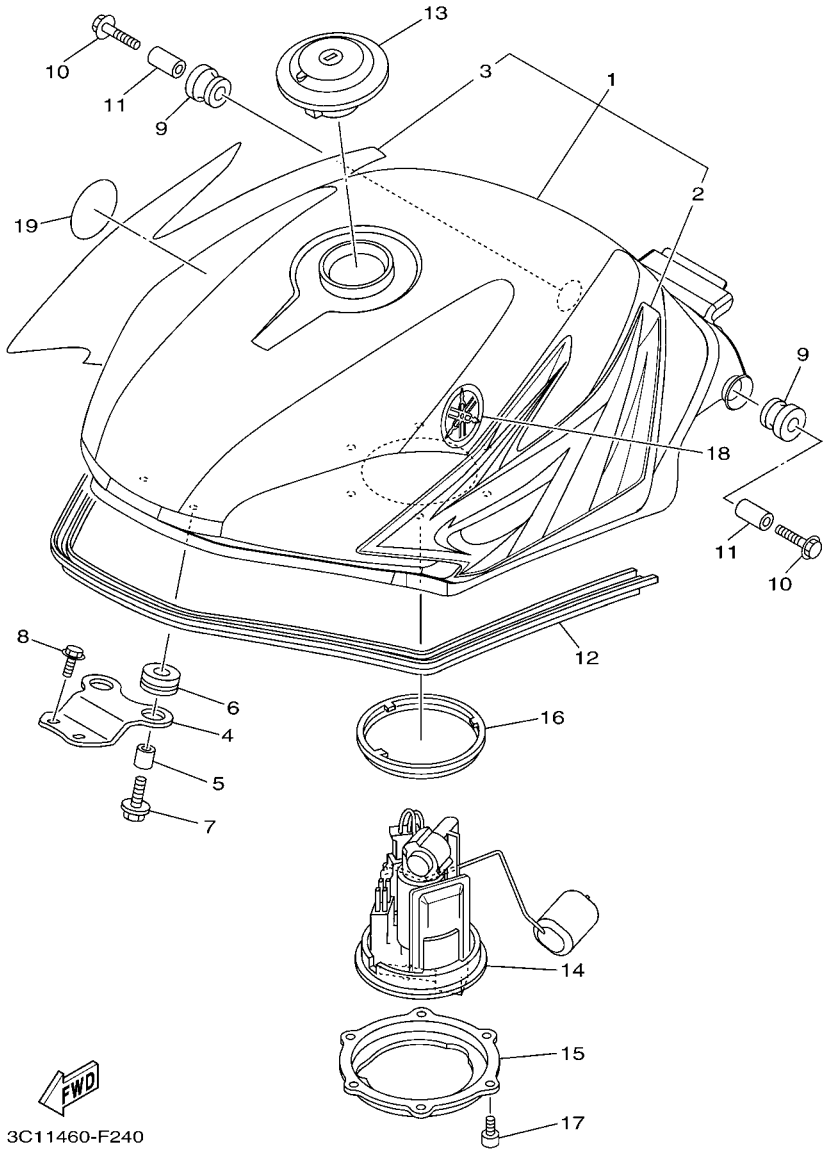

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F4100–00–33	FUEL TANK ASSY	1					UR FOR YB
	3C1–F4100–10–P0	FUEL TANK ASSY	1					UR FOR DRMK
	3C1–F4100–20–P0	FUEL TANK ASSY	1					UR FOR DPBMC
2	3C1–F4244–00	.GRAPHIC, FUEL TANK 1	1					UR FOR YB
	3C1–F4244–10	.GRAPHIC, FUEL TANK 1	1					UR FOR DRMK
	3C1–F4244–20	.GRAPHIC, FUEL TANK 1	1					UR FOR DPBMC
3	3C1–F4245–00	.GRAPHIC, FUEL TANK 2	1					UR FOR YB
	3C1–F4245–10	.GRAPHIC, FUEL TANK 2	1					UR FOR DRMK
	3C1–F4245–20	.GRAPHIC, FUEL TANK 2	1					UR FOR DPBMC
4	3C1–F4191–00	BRACKET, FUEL TANK 1	1					
5	90387–06892	COLLAR	2					
6	90480–15483	GROMMET	2					
7	90119–06877	BOLT, WITH WASHER	2					
8	9582L–06016	BOLT, FLANGE	2					
9	90480–18549	GROMMET	2					
10	95827–06030	BOLT, FLANGE	2					
11	90387–06890	COLLAR	2					
12	3C1–F4188–00	MOLD, FUEL TANK	1					
13	3C1–F4610–00	CAP ASSY	1					
14	3C1–E3907–00	FUEL PUMP COMP.	1					
15	3C1–F4491–00	BRACKET, FUEL PUMP	1					
16	3C1–F4486–00	O-RING	1					
17	91317–05010	BOLT	6					
18	3C1–F416B–00	EMBLEM	1					
19	3C1–F417B–00	EMBLEM	1					

FIG. 25 SEAT

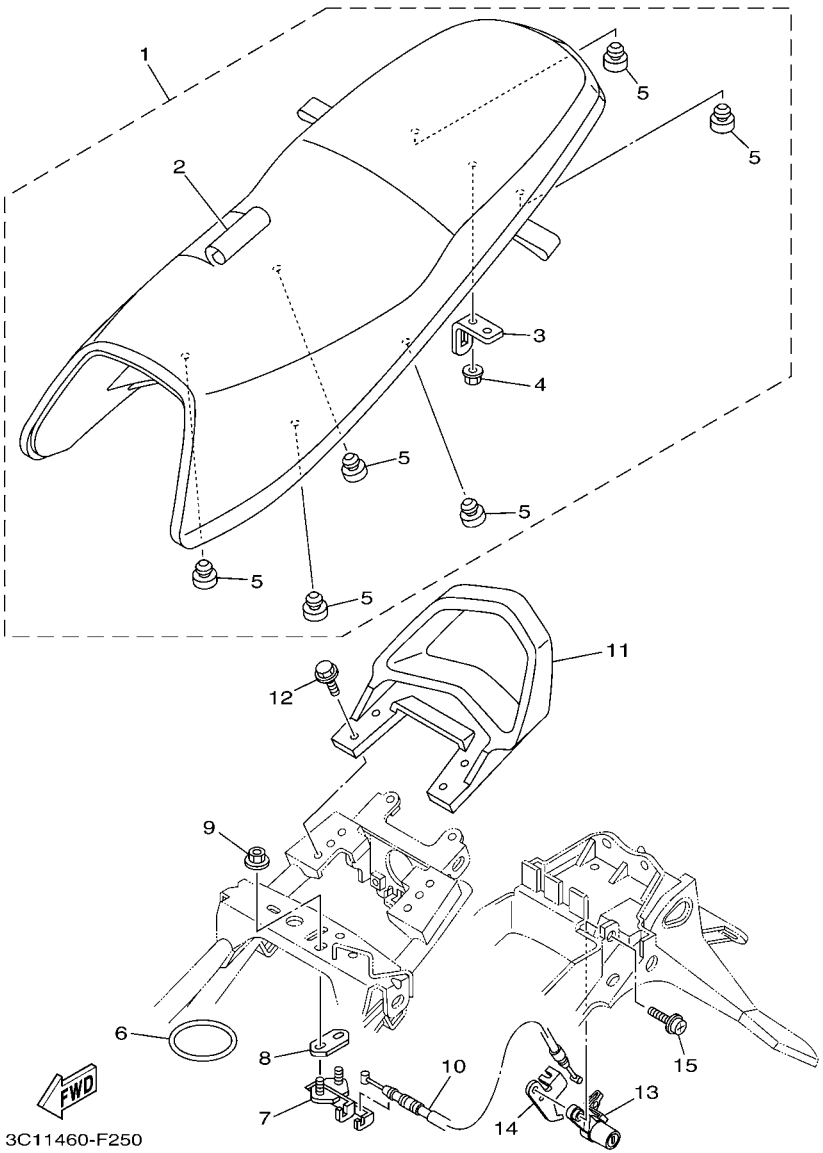

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F4730–00	DOUBLE SEAT ASSY	1					
2	3C1–F4731–00	.COVER, SEAT	1					
3	3C1–F4728–00	.BRACKET, SEAT	1					
4	9570L–06500	.NUT, FLANGE	1					
5	3C1–F4741–00	.PAD, SEAT	6					
6	5TL–H2131–00	BAND, BATTERY	1					
7	5BP–F4780–00	SEAT LOCK ASSY	1					
8	5BP–F4792–00	PLATE	1					
9	95707–06500	NUT, FLANGE	2					
10	3C1–F478E–00	CABLE, SEAT LOCK	1					
11	3C1–F4773–00–35	HANDLE, SEAT	1					SL
12	95827–08020	BOLT, FLANGE	4					
13	3C1–F4799–00	ROTOR ASSY	1					
14	1S7–F117K–00	STAY, LOCK	1					
15	90159–06033	SCREW, WITH WASHER	1					

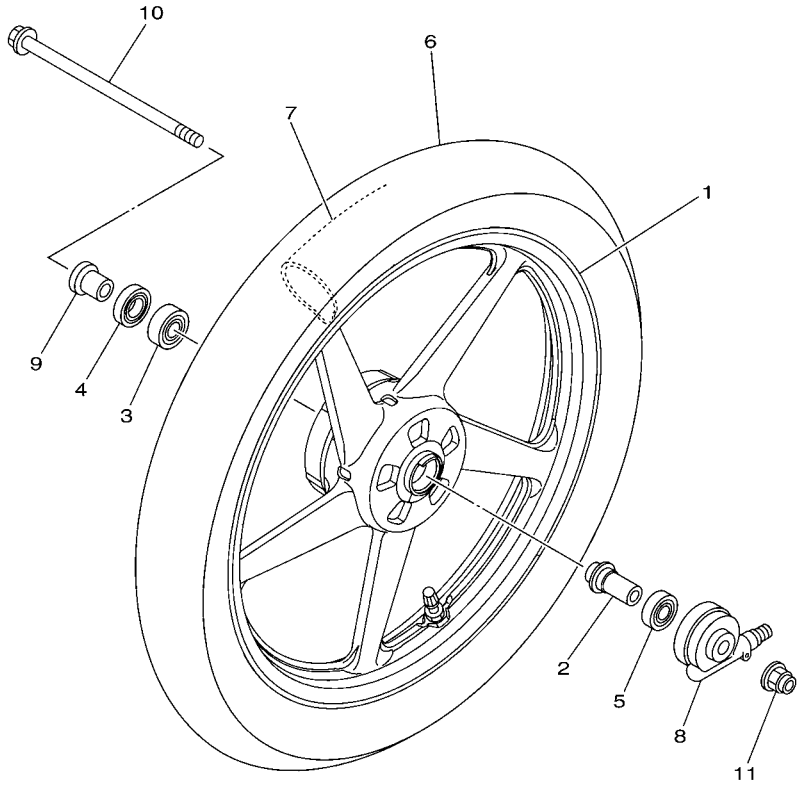

3C11460-F260

FIG. 26 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F5168–00	CAST WHEEL, FRONT	1					
2	3C1–F510C–00	COLLAR ASSY.	1					
3	93306–301XE	BEARING	1					
4	93106–20814	OIL SEAL	1					
5	93306–201XA	BEARING	1					
6	94127–17805	TIRE (2.75-17 41P NR72)	1					UR INOUE
	94127–17806	TIRE (2.75-17 41P D102FA)	1					UR DUNLOP
7	94227–17803	TUBE (2.75-17 TR4)	1					UR INOUE
	94227–17805	TUBE (2.75-17 TR4)	1					UR DUNLOP
8	3C1–F5190–00	GEAR UNIT ASSY	1					
9	3C1–F5186–00	COLLAR, WHEEL	1					
10	3C1–F5181–00	AXLE, WHEEL	1					
11	95607–12200	NUT, SELF-LOCKING	1					

FIG. 27 FRONT BRAKE CALIPER

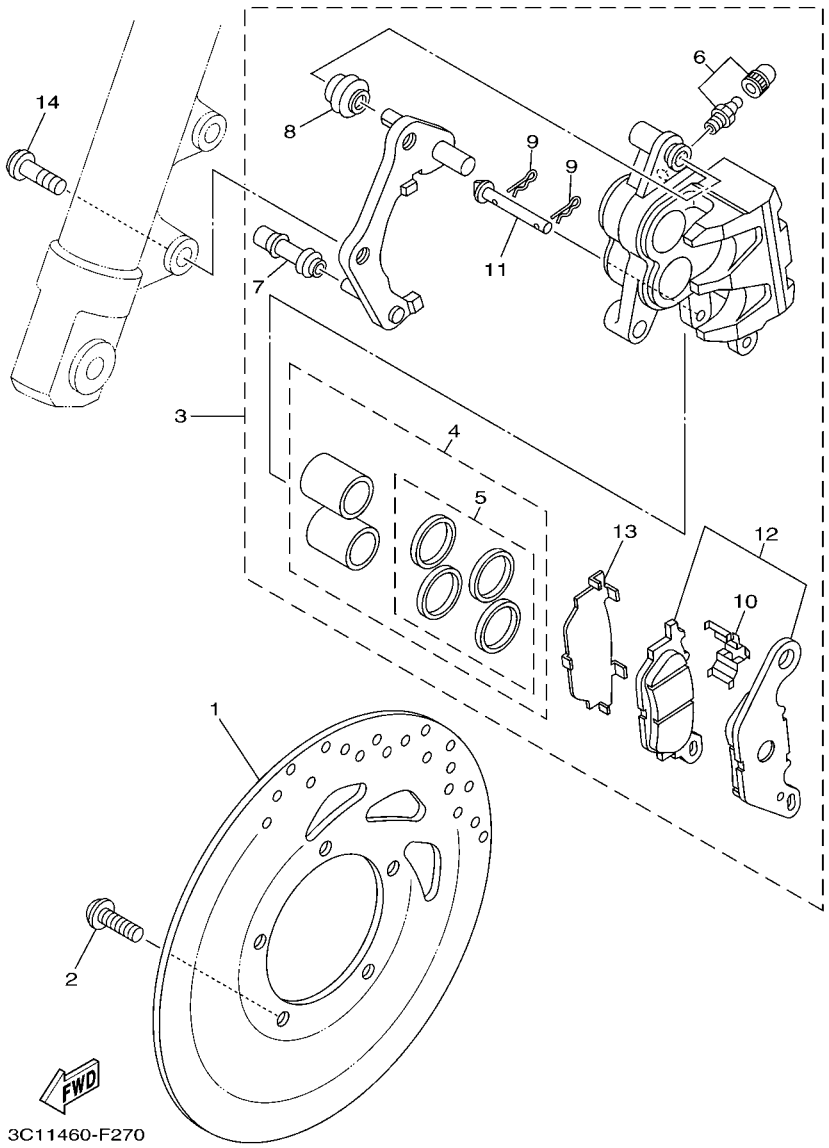

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F582U–00	DISK, BRAKE (RIGHT)	1					
2	90111–08815	BOLT,HEX. SOCKET BUTTON	5					
3	3C1–F580U–00	CALIPER ASSY (RIGHT)	1					
4	3C1–W0057–00	.PISTON ASSY, CALIPER	1					
5	3C1–W0047–00	..CALIPER SEAL KIT	1					
6	5TL–W0048–00	.BLEED SCREW KIT	1					
7	5YP–F5937–00	.BOOT 2	1					
8	5YP–F5917–00	.BOOT, CALIPER	1					
9	5YP–F5925–01	.CLIP	2					
10	5YP–F5919–00	.SUPPORT, PAD	1					
11	5YP–F5924–00	.PIN, PAD	1					
12	4C9–W0045–00	.BRAKE PAD KIT	1					
13	5YP–F5939–00	.CLIP, PAD	1					
14	90149–10802	SCREW	2					

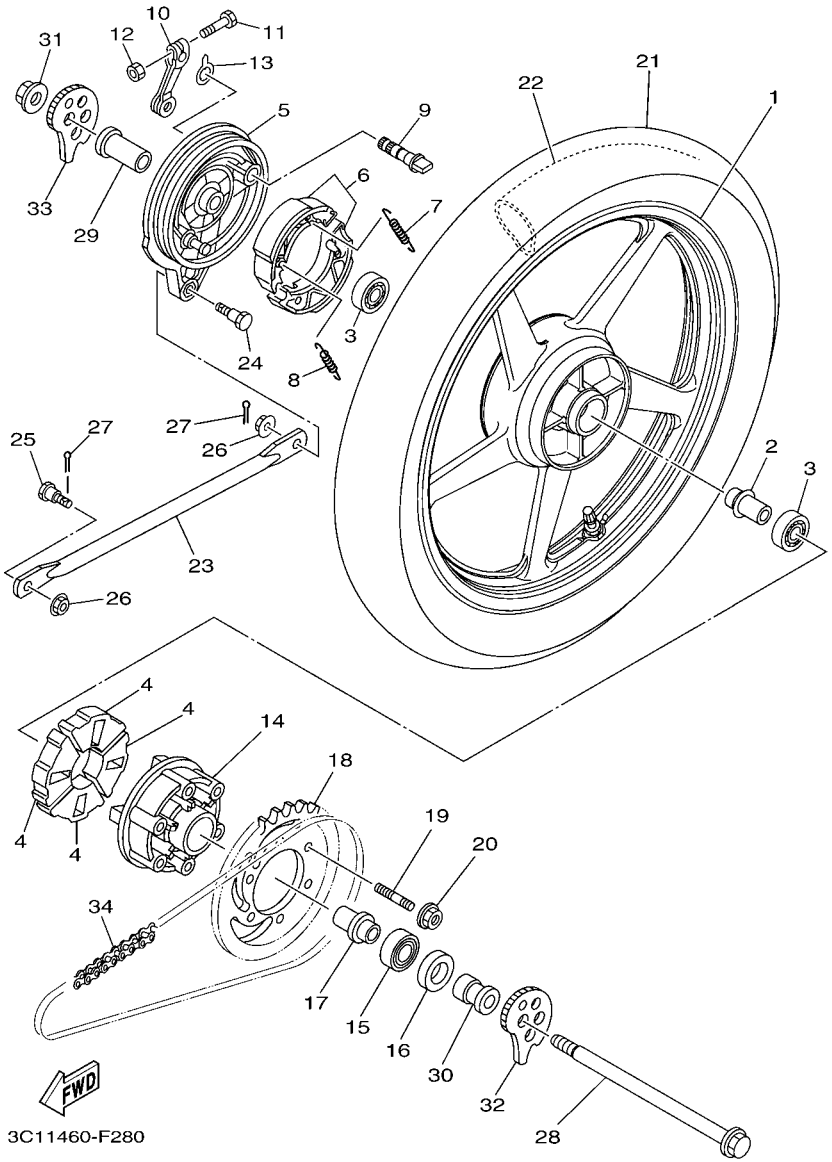

FIG. 28 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F5338–00	CAST WHEEL, REAR	1					
2	5BP–F530S–00	COLLAR ASSY	1					
3	93306–252X7	BEARING	2					
4	3C1–F5364–00	DAMPER	4					
5	5BP–F5321–01–33	PLATE, BRAKE SHOE	1					YB
6	5BP–F530K–00	BRAKE SHOE SET	1					
7	90506–12001	SPRING, TENSION	1					
8	90506–15001	SPRING, TENSION	1					
9	5BP–F5351–00	CAMSHAFT	1					
10	5BP–F5355–00	LEVER, CAMSHAFT	1					
11	90101–06278	BOLT	1					
12	95307–06600	NUT	1					
13	4ST–F533A–00	PLATE, INDICATOR	1					
14	3C1–F5366–00–33	CLUTCH, HUB	1					YB
15	93306–004XV	BEARING	1					
16	93106–26815	OIL SEAL	1					
17	90387–158V4	COLLAR	1					
18	3C1–F5442–00	SPROCKET, DRIVEN (42T)	1					
19	90116–08812	BOLT, STUD	6					
20	95607–08200	NUT, SELF-LOCKING	6					
21	94109–17801	TIRE (90/90-17 49P NR72)	1					UR INOUE
	94109–17802	TIRE (90/90-17 49P D102A)	1					UR DUNLOP
22	94218–17800	TUBE (3.00/3.25-17 TR4)	1					UR INOUE
	94227–17805	TUBE (2.75-17 TR4)	1					UR DUNLOP
23	3C1–F5371–00	BAR, TENSION	1					
24	90109–08063	BOLT	1					
25	90109–08825	BOLT	1					

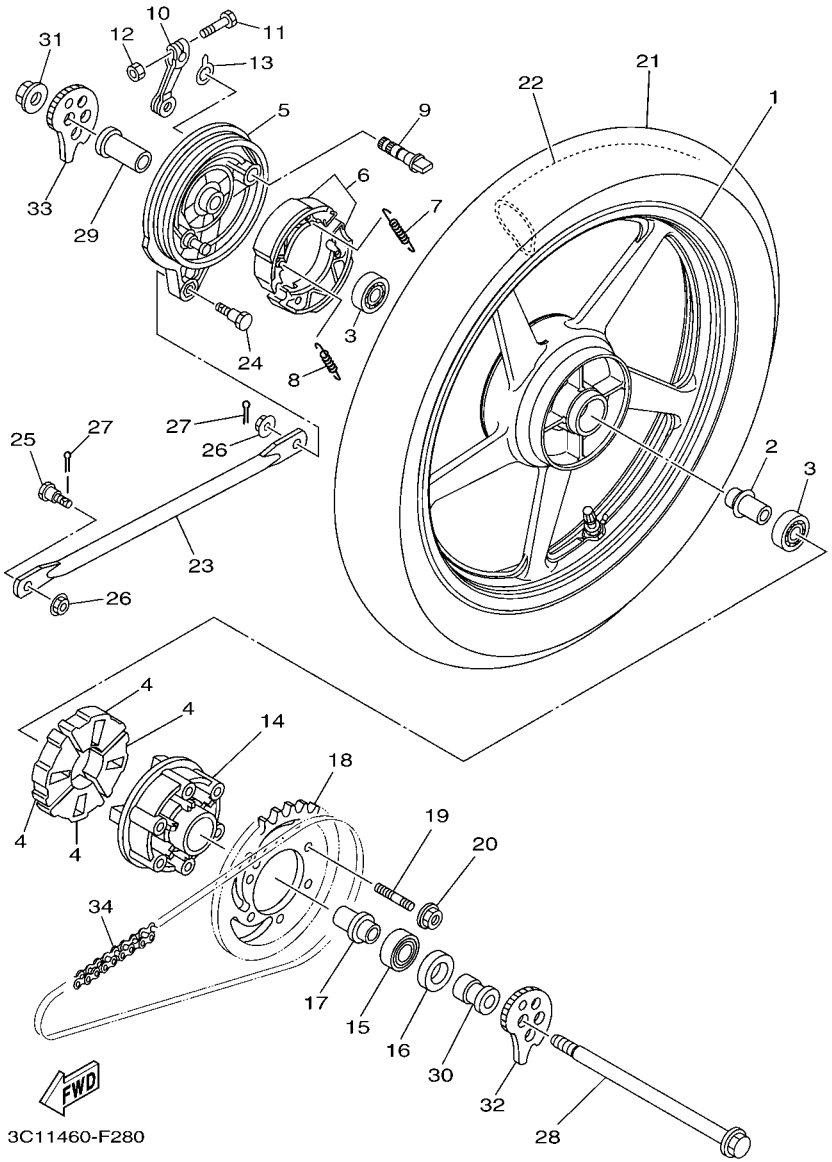

FIG. 28 REAR WHEEL

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
26	95707–08500	NUT, FLANGE	2					
27	91401–20012	PIN, COTTER	2					
28	3C1–F5381–00	AXLE, WHEEL	1					
29	3C1–F5383–00	COLLAR, WHEEL	1					
30	3C1–F5386–00	COLLAR, SPROCKET AXLE	1					
31	95607–14200	NUT, SELF-LOCKING	1					
32	3C1–F5388–00	PULLER, CHAIN 1	1					
33	3C1–F5389–00	PULLER, CHAIN 2	1					
34	94568–C0120	CHAIN (FSCM 428H-120)	1					

FIG. 29 STEERING HANDLE & CABLE

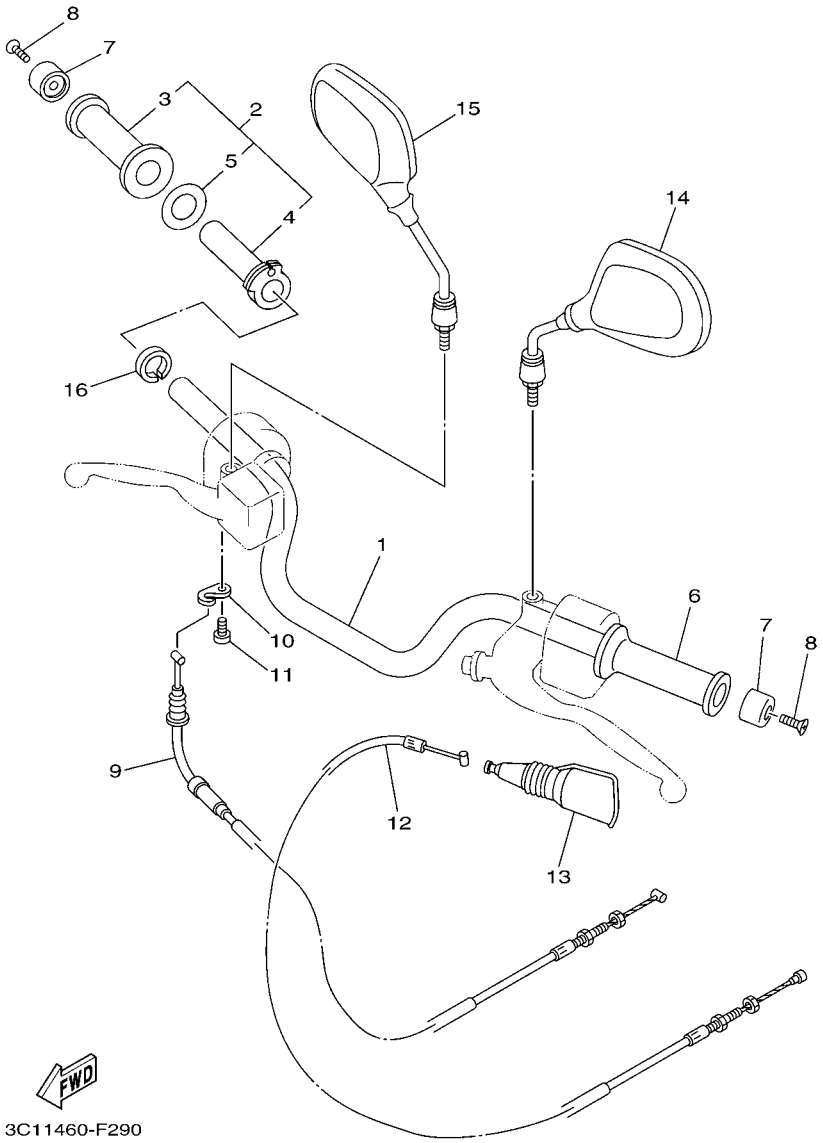

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F6111–00	HANDLEBAR	1					
2	3C1–F6240–00	GRIP ASSY	1					
3	4NS–F6242–10	.GRIP (RIGHT)	1					
4	3C1–F6243–00	.TUBE, THROTTLE GUIDE	1					
5	90201–261L1	.WASHER, PLATE	1					
6	4NS–F6241–10	GRIP	1					
7	5ER–F6246–00	END, GRIP	2					
8	98707–06035	SCREW, FLAT HEAD	2					
9	3C1–F6311–00	CABLE, THROTTLE 1	1					
10	3C1–F6393–00	HOLDER	1					
11	98507–05016	SCREW, PAN HEAD	1					
12	3C1–F6335–00	CABLE, CLUTCH	1					
13	3RS–F6372–00	COVER, HANDLE LEVER 1	1					
14	5MX–F6280–00	REAR VIEW MIRROR ASSY (LEFT)	1					
15	5MX–F6290–00	REAR VIEW MIRROR ASSY (RIGHT)	1					
16	90387–22660	COLLAR	1					

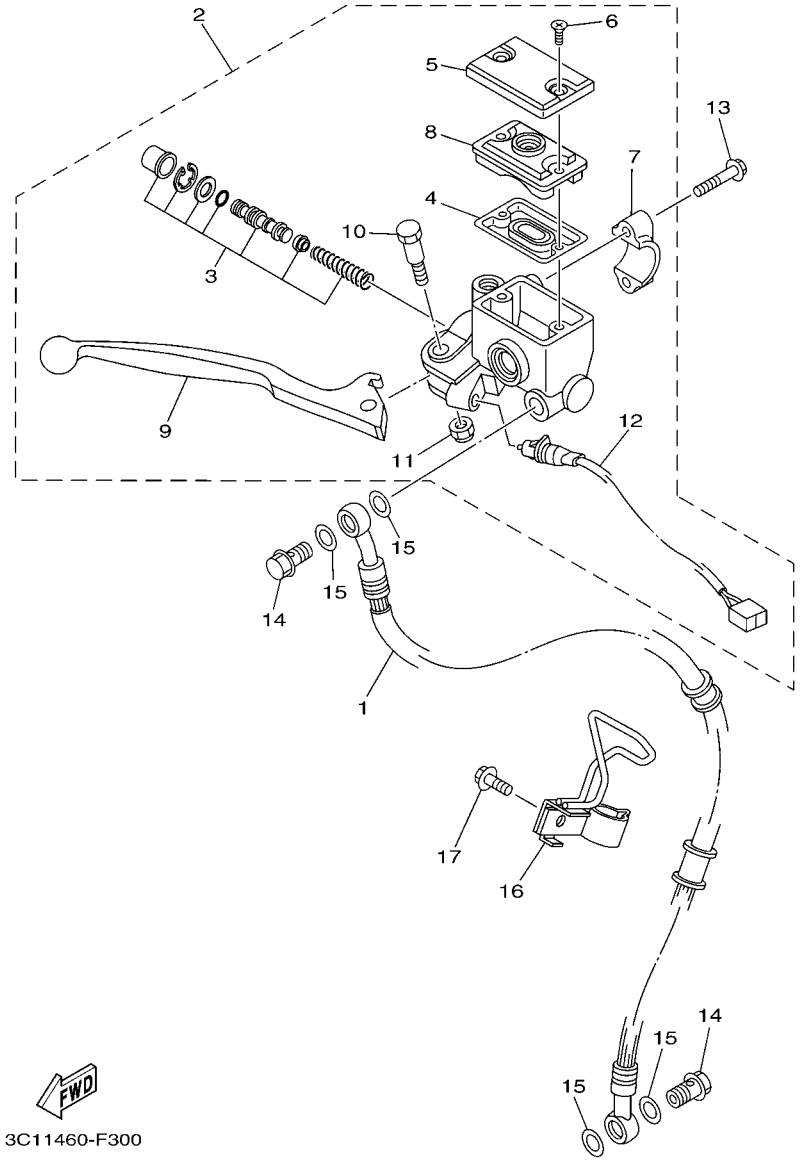

FIG. 30 FRONT MASTER CYLINDER

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F5872–00	HOSE, BRAKE 1	1					
2	3C1–F583T–00	MASTER CYLINDER ASSY	1					
3	5TL–W0041–01	.CYLINDER KIT, MASTER	1					
4	3RW–F5854–00	.DIAPHRAGM, RESERVOIR	1					
5	3C1–F5852–00	.CAP, RESERVOIR	1					
6	36Y–2589H–00	.SCREW	2					
7	3RW–F5867–00	.BRACKET, MASTER CYLINDER	1					
8	3C1–F5855–00	.BUSH,DIAPHRAGM	1					
9	3C1–H3922–00	.LEVER 2	1					
10	90109–06577	.BOLT	1					
11	95607–06100	.NUT, U	1					
12	5BP–H3980–10	.FRONT STOP SWITCH ASSY	1					
13	95027–06025	BOLT, FLANGE	2					
14	90401–10812	BOLT, UNION	2					
15	90201–10118	WASHER, PLATE	4					
16	3C1–F5886–01	HOLDER, BRAKE HOSE	1					
17	95027–06016	BOLT, FLANGE	1					

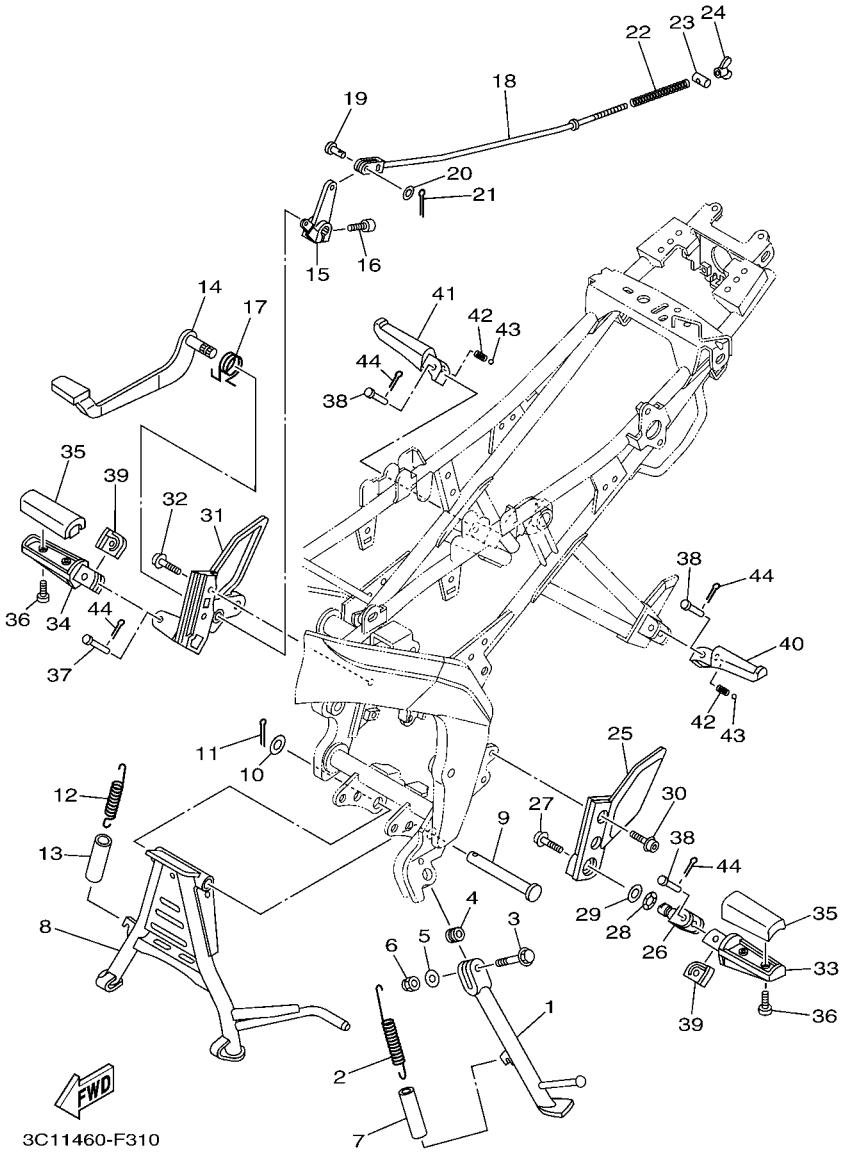

FIG. 31 STAND & FOOTREST

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–F7311–00	STAND, SIDE	1					
2	90506–28800	SPRING, TENSION	1					
3	90105–106A7	BOLT, FLANGE	1					
4	90387–10003	COLLAR	1					
5	92907–10600	WASHER, PLATE	1					
6	95617–10100	NUT, U	1					
7	90445–21848	HOSE (L70)	1					
8	3C1–F7111–00	STAND, MAIN	1					
9	3C1–F7112–00	SHAFT, MAIN STAND	1					
10	90201–163H8	WASHER, PLATE	1					
11	91401–30030	PIN, COTTER	1					
12	90506–35003	SPRING, TENSION	1					
13	90445–21848	HOSE (L70)	1					
14	3C1–F7211–00	PEDAL, BRAKE	1					
15	3C1–F7262–00	LEVER	1					
16	91317–06020	BOLT	1					
17	3C1–F7216–00	SPRING, RETURN	1					
18	3C1–F7231–00	ROD, BRAKE	1					
19	91701–06018	PIN, CLEVIS	1					
20	92907–06600	WASHER, PLATE	1					
21	91401–20012	PIN, COTTER	1					
22	90501–10245	SPRING, COMPRESSION	1					
23	90249–12008	PIN	1					
24	90175–06013	NUT, WING	1					
25	3C1–F7452–00	BRACKET, FOOTREST 1	1					
26	5BP–F7411–00	FOOTREST 1	1					
27	90110–10801	BOLT, HEXAGON SOCKET HEAD	1					

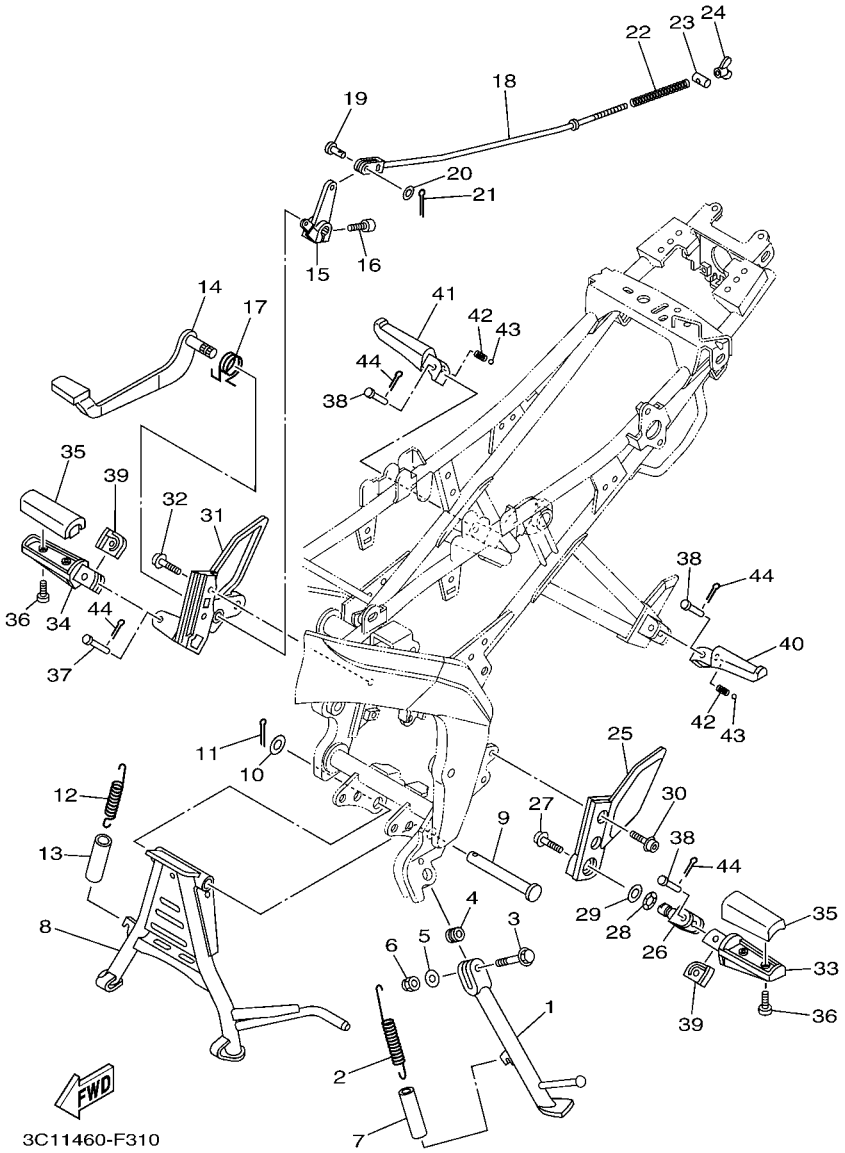

FIG. 31 STAND & FOOTREST

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
28	90206–17084	WASHER, WAVE	1					
29	90201–173U5	WASHER, PLATE	1					
30	90110–08803	BOLT, HEXAGON SOCKET HEAD	2					
31	3C1–F7462–00	BRACKET, FOOTREST 2	1					
32	90110–08803	BOLT, HEXAGON SOCKET HEAD	2					
33	5BP–F7451–00	FOOTREST	1					
34	5BP–F7461–00	FOOTREST	1					
35	3C1–F7413–00	COVER, FOOTREST	2					
36	90157–05079	SCREW, PAN HEAD	4					
37	90240–08145	PIN, CLEVIS	1					
38	90240–08144	PIN, CLEVIS	3					
39	3C1–F7426–00	SPRING, RETURN	2					
40	3C1–F7431–00	FOOTREST, REAR 1	1					
41	3C1–F7441–00	FOOTREST, REAR 2	1					
42	90501–12743	SPRING, COMPRESSION	2					
43	93501–04830	BALL	2					
44	91401–25015	PIN, COTTER	4					

FIG. 32 GENERATOR

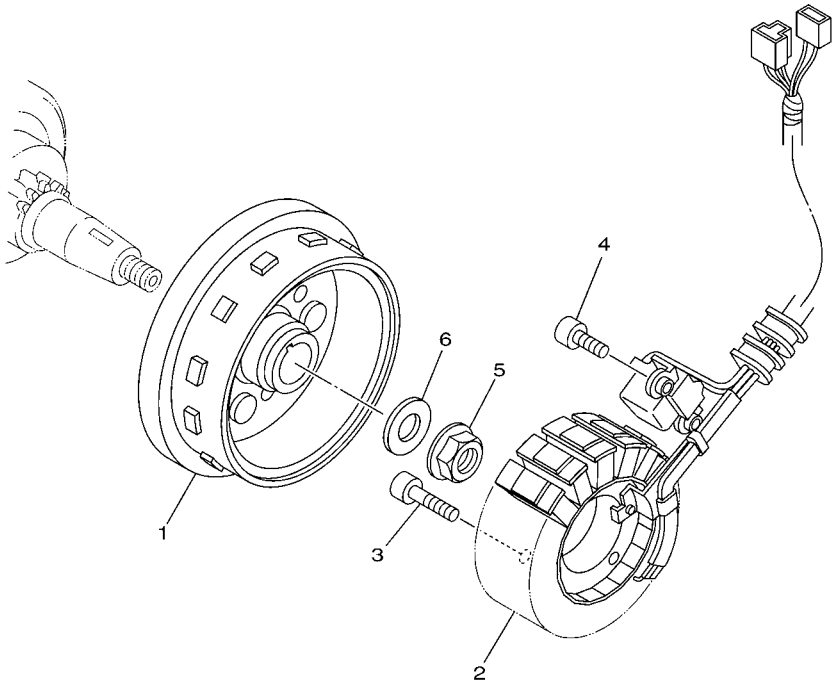

3C11460-F320

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H1450–00	ROTOR ASSY	1					
2	3C1–H1410–00	STATOR ASSY	1					
3	91317–06025	BOLT	3					
4	91317–06016	BOLT	2					
5	95707–12500	NUT, FLANGE	1					
6	90201–122H1	WASHER, PLATE	1					

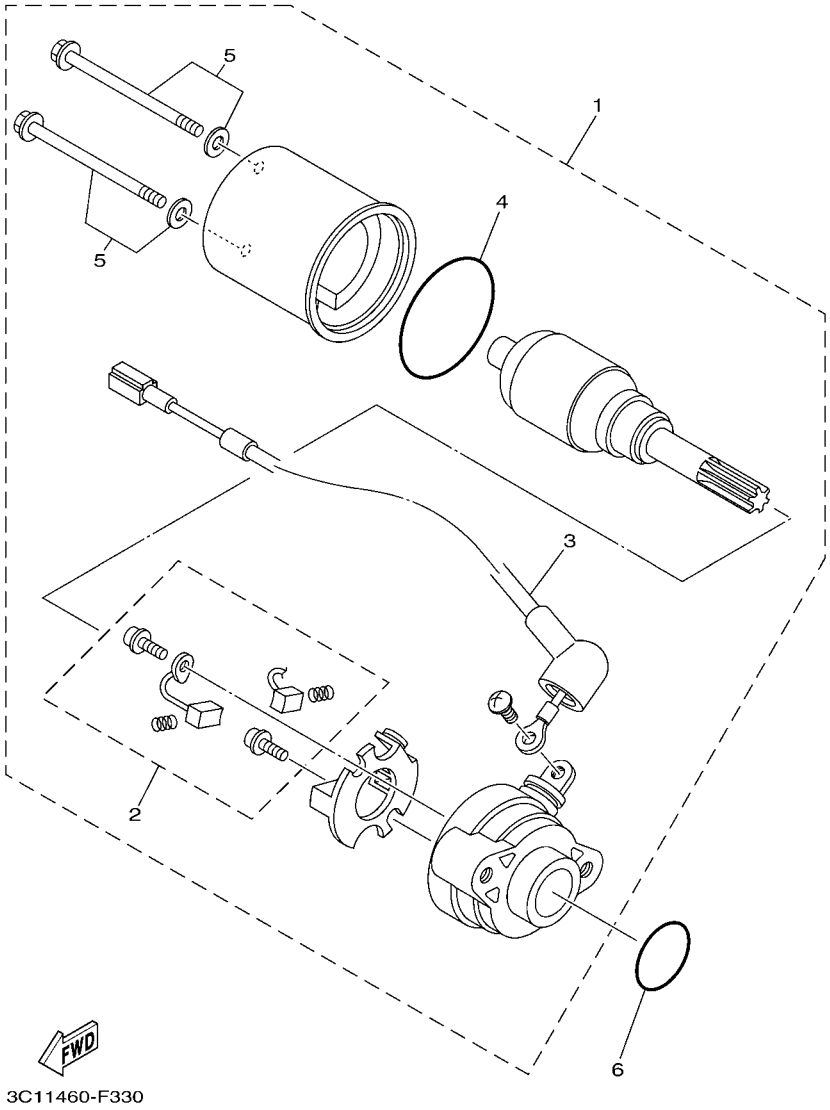

3C11460-F330

FIG. 33 STARTING MOTOR

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H1800–00	STARTING MOTOR ASSY	1					
2	3AY–H1801–00	.BRUSH SET	1					
3	3C1–H183G–00	.CORD COMP.	1					
4	3AY–H182M–00	.O-RING	1					
5	3AY–H1828–00	.BOLT 2	2					
6	93210–26805	O-RING	1					

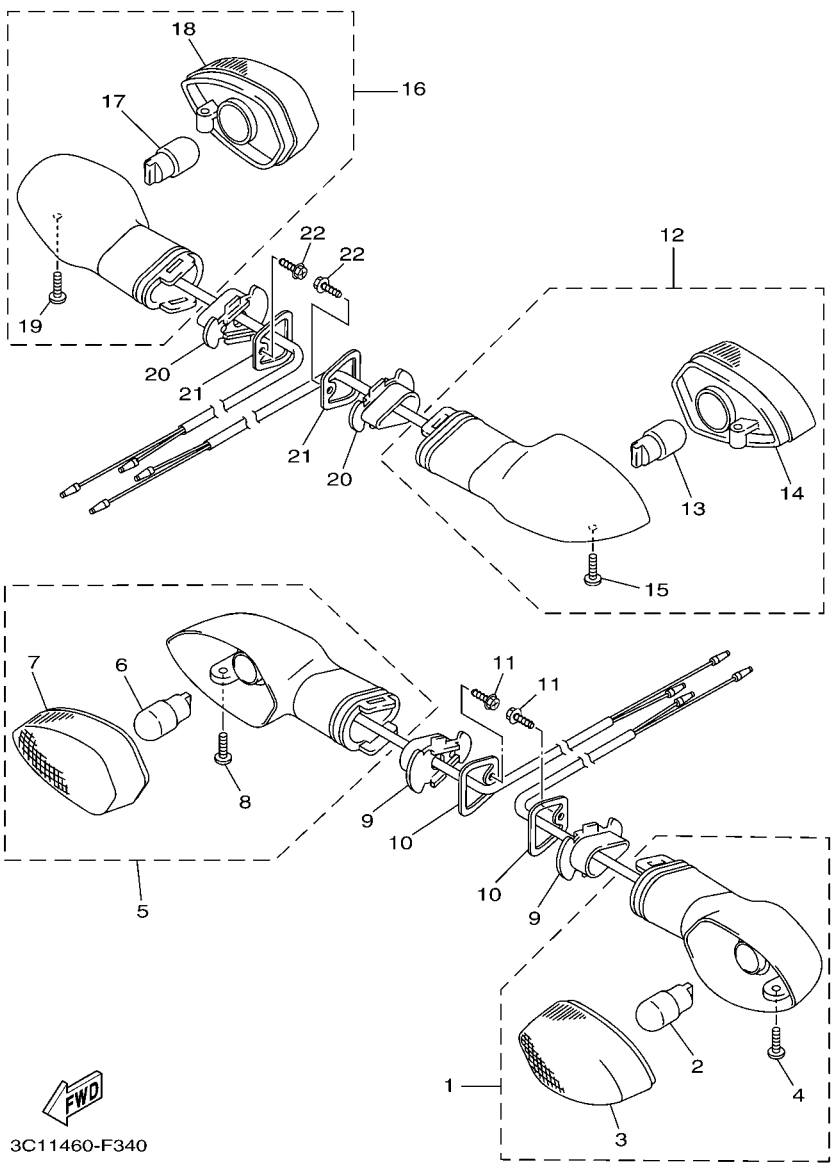

FIG. 34 FLASHER LIGHT

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H3310–00	FRONT FLASHER LIGHT ASSY 1	1					
2	5LL–H3311–00	.BULB, FLASHER (12V-10W)	1					AMBER
3	3C1–H333A–00	.LENS COMP	1					
4	97706–04012	.SCREW, TAPPING	1					
5	3C1–H3320–00	FRONT FLASHER LIGHT ASSY 2	1					
6	5LL–H3311–00	.BULB, FLASHER (12V-10W)	1					AMBER
7	3C1–H334A–00	.LENS COMP	1					
8	97706–04012	.SCREW, TAPPING	1					
9	3C1–H3318–00	STAY, FLASHER 1	2					
10	3KA–H331L–00	PLATE, STOPPER	2					
11	90163–04800	SCREW, TAPPING	2					
12	3C1–H3330–00	REAR FLASHER LIGHT ASSY 1	1					
13	5LL–H3311–00	.BULB, FLASHER (12V-10W)	1					AMBER
14	3C1–H334A–00	.LENS COMP	1					
15	97706–04012	.SCREW, TAPPING	1					
16	3C1–H3340–00	REAR FLASHER LIGHT ASSY 2	1					
17	5LL–H3311–00	.BULB, FLASHER (12V-10W)	1					AMBER
18	3C1–H333A–00	.LENS COMP	1					
19	97706–04012	.SCREW, TAPPING	1					
20	3C1–H3318–00	STAY, FLASHER 1	2					
21	3KA–H331L–00	PLATE, STOPPER	2					
22	90163–04800	SCREW, TAPPING	2					

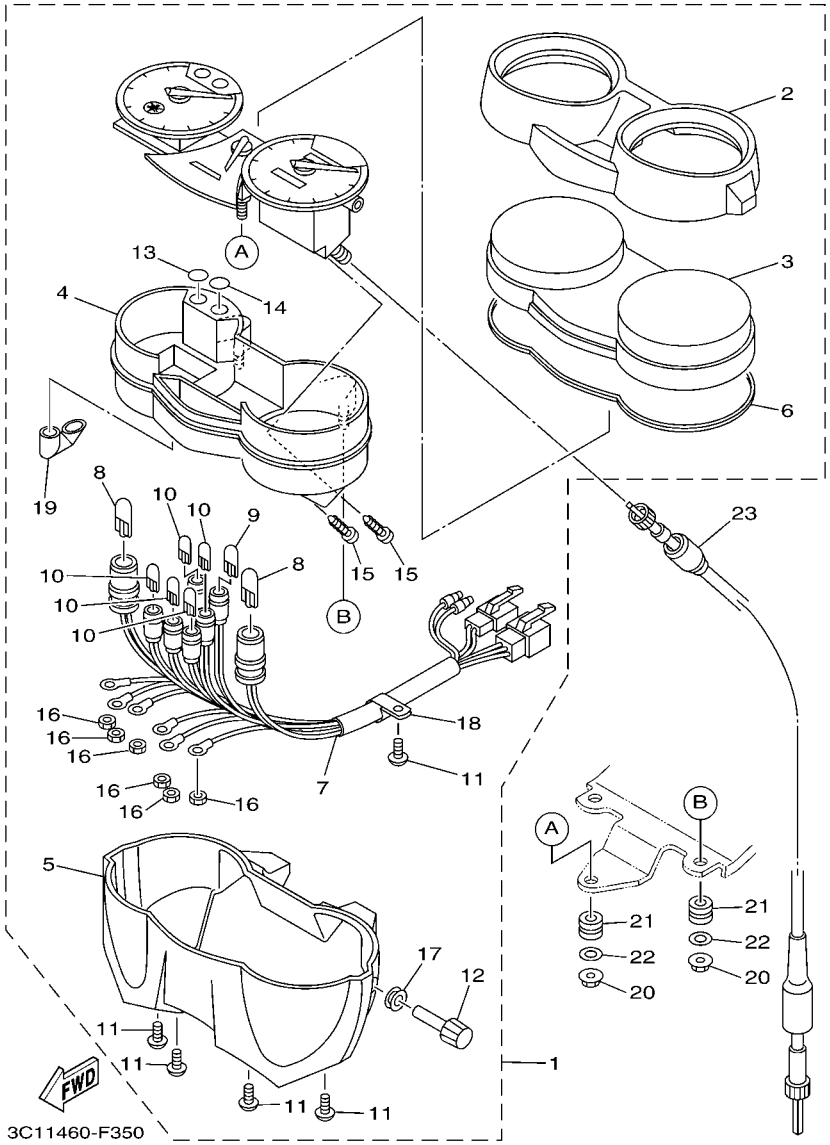

FIG. 35 METER

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H3500–00	METER ASSY	1					
2	3C1–H353G–00	.CASE, UPPER	1					
3	3C1–H3511–00	.LENS, SPEEDOMETER	1					
4	3C1–H353A–00	.CASE COMP.	1					
5	3C1–H359E–00	.CASE	1					
6	3C1–H357K–00	.PACKING,METER	1					
7	3C1–H355H–00	.SOCKET CORD ASSY	1					
8	3C1–H3518–00	.BULB, METER (12V-3.4W T10)	2					
9	3C1–H3518–10	.BULB, METER (12V-1.5W T6.5)	1					
10	5HH–H3517–00	.BULB (14V-3W T6.5)	5					
11	9770M–40010	.SCREW, TAPPING	5					
12	3C1–H3578–00	.KNOB, TRIP METER	1					
13	3C1–H356C–00	.LENZ, PILOT 1	1					
14	3C1–H356F–00	.LENZ, PILOT 2	1					
15	9890L–04008	.SCREW, BIND	2					
16	9530N–03600	.NUT	6					
17	3C1–H357L–00	.PACKING, METER 2	1					
18	3C1–H3595–00	.CLAMP	1					
19	3C1–H411V–00	.CAP	4					
20	9570M–06500	NUT, FLANGE	3					
21	90480–10801	GROMMET	3					
22	90201–06830	WASHER, PLATE	3					
23	3C1–H3550–00	SPEEDOMETER CABLE ASSY	1					

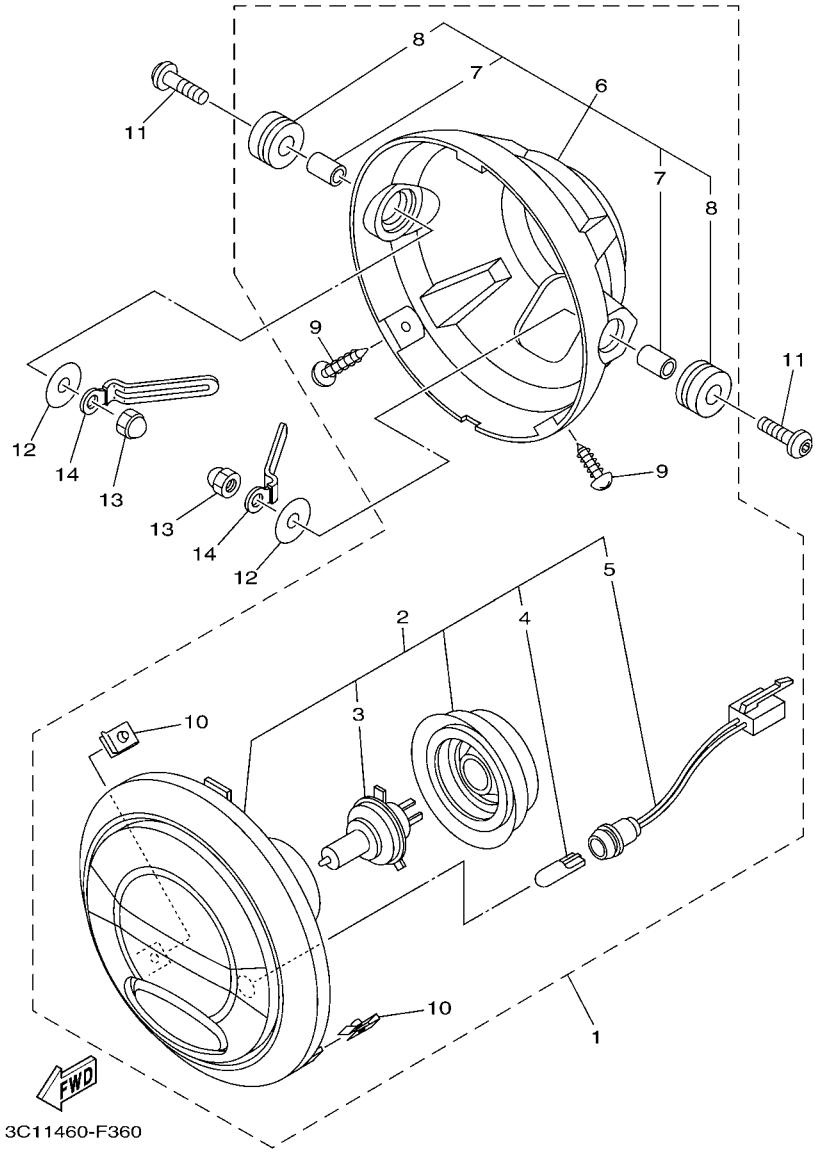

FIG. 36 HEADLIGHT

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H4300–00	HEADLIGHT ASSY	1					
2	3C1–H4310–00	.HEADLIGHT UNIT ASSY	1					
3	3C1–H4314–00	..BULB, HEADLIGHT (12V-35/35W)	1					
4	3C1–H4314–10	..BULB, HEADLIGHT (12V-5W)	1					
5	3C1–H4150–00	..SOCKET CORD ASSY 2	1					
6	3C1–H4130–10	.BODY ASSY, HEADLIGHT	1					
7	3C1–H4145–10	..COLLAR, BODY FITTING	2					
8	3C1–H4163–00	..DAMPER	2					
9	3C1–H4325–00	.SCREW, RIM FITTING	2					
10	3C1–H331B–00	.NUT, SPRING	2					
11	90111–08818	BOLT,HEX. SOCKET BUTTON	2					
12	90201–08612	WASHER, PLATE	2					
13	90176–08040	NUT, CROWN	2					
14	90462–08001	CLAMP	2					

FIG. 37 TAILLIGHT

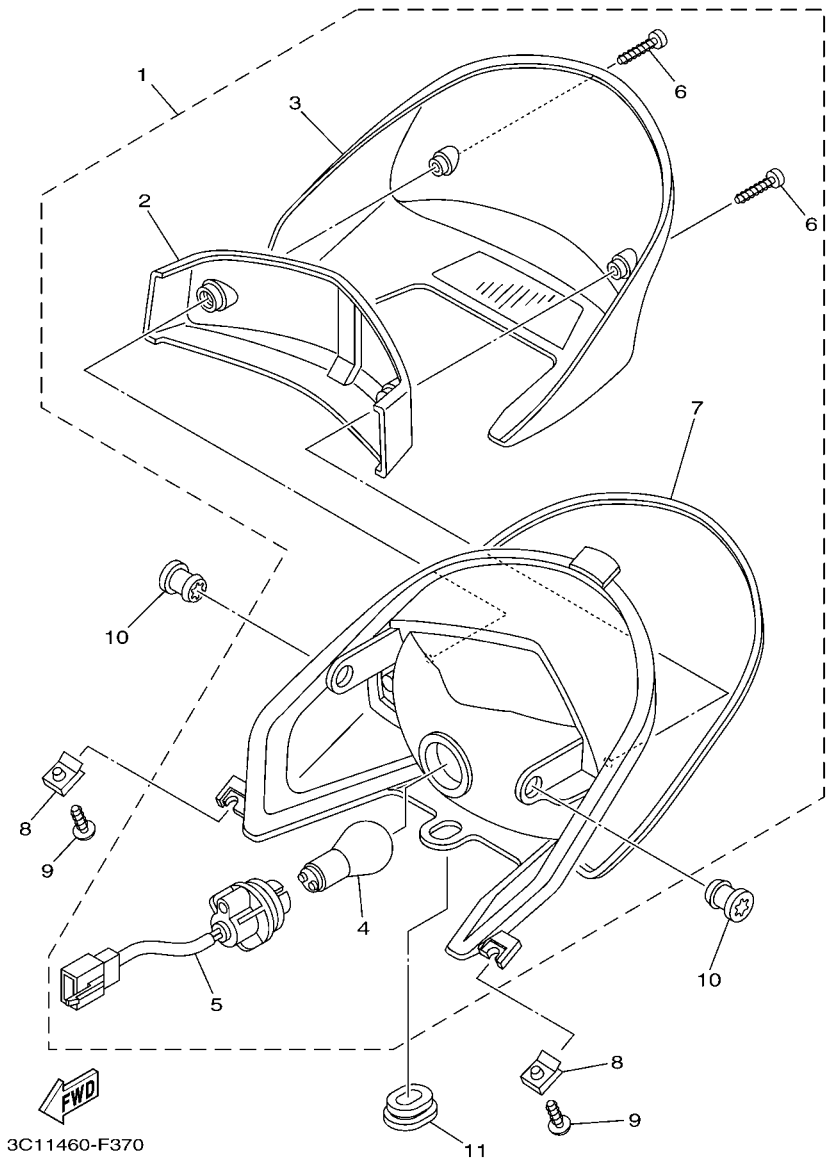

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H4710–00	TAILLIGHT UNIT ASSY	1					
2	3C1–H4721–00	.LENS, TAILLIGHT	1					
3	3C1–H4733–00	.LENS, TAILLIGHT	1					
4	3C1–H4714–00	.BULB (12V-21/5W)	1					
5	3C1–H4735–00	.CORD ASSY	1					
6	3C1–H4724–00	.SCREW, LENS FITTING	2					
7	3C1–H4704–00	.GASKET, TAILLIGHT	1					
8	90183–05807	NUT, SPRING	2					
9	97707–50014	SCREW, TRUSS HEAD TAPPING	2					
10	90480–13810	GROMMET	2					
11	90480–01558	GROMMET	1					

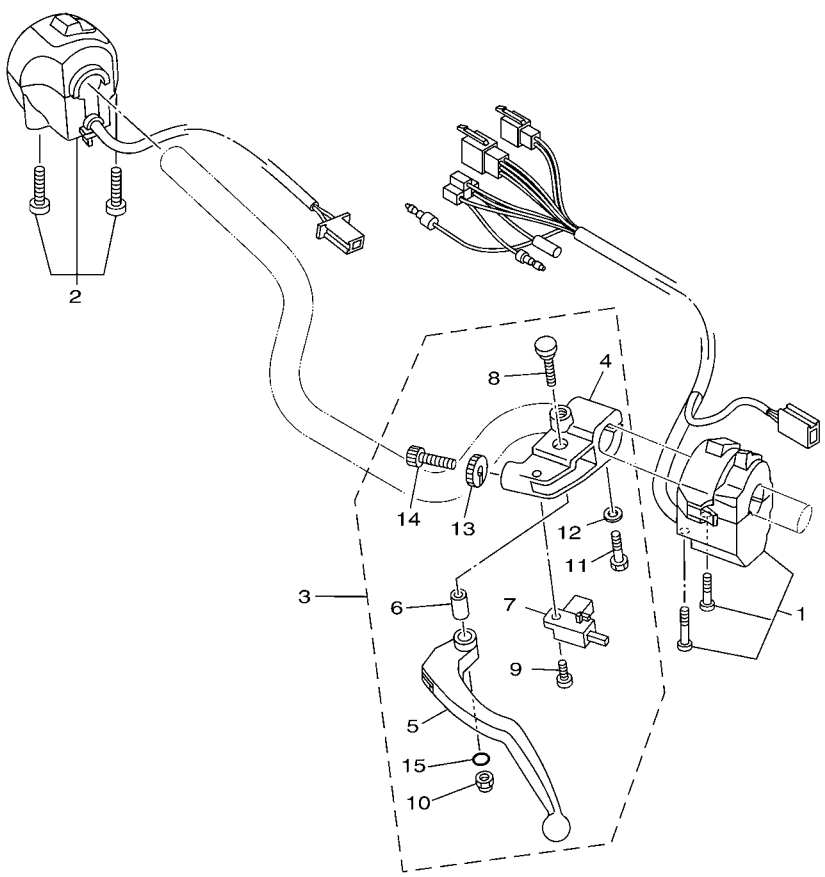

3C11460-F380

FIG. 38 HANDLE SWITCH & LEVER

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H3969–00	SWITCH, HANDLE 5	1					
2	3C1–H3975–00	SWITCH, HANDLE 2	1					
3	5BP–H2910–10	LEVER HOLDER ASSY (LEFT)	1					
4	3KA–H2911–00	.HOLDER, LEVER 1	1					
5	3KA–H3912–00	.LEVER 1	1					
6	3KA–H3913–00	.COLLAR, LEVER 1	1					
7	5BP–H2917–00	.SWITCH	1					
8	3KA–H3945–00	.BOLT, LEVER	1					
9	98707–03008	.SCREW, FLAT HEAD	1					
10	95607–06100	.NUT, U	1					
11	97007–06025	.BOLT	1					
12	92907–06600	.WASHER, PLATE	1					
13	90179–08148	.NUT	1					
14	90123–08046	.BOLT	1					
15	93210–108H5	.O-RING	1					

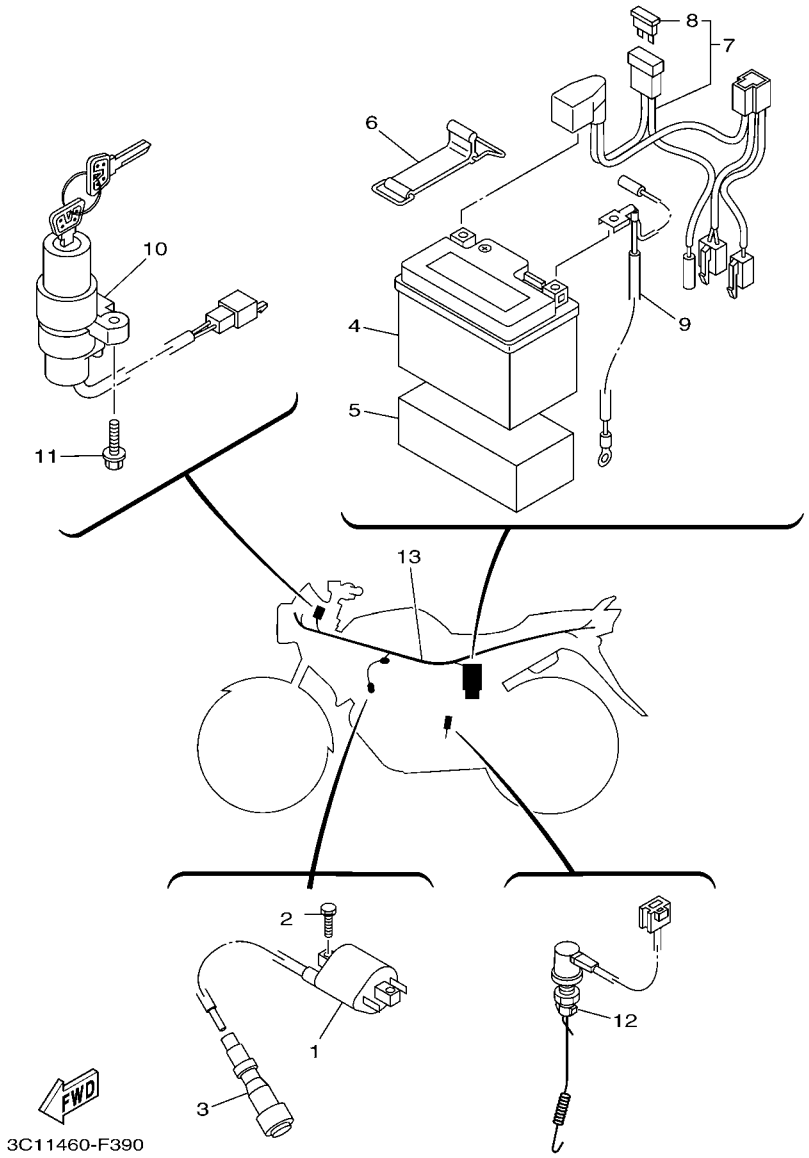

FIG. 39 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H2310–00	IGNITION COIL ASSY	1					
2	97007–06016	BOLT	2					
3	1S7–H2370–00	PLUG CAP ASSY	1					
4	3C1–H2100–00	BATTERY ASSY (YTZ5S MF YUASA)	1					
5	3C1–H2121–00	PAD, BATTERY	1					
6	3C1–H2131–00	BAND, BATTERY	1					
7	3C1–H2150–00	FUSE HOLDER ASSY	1					
8	3C1–H2151–00	.FUSE (20A)	1					
9	3C1–H2116–00	WIRE, MINUS LEAD	1					
10	3C1–H2501–00	MAIN SWITCH STEERING LOCK	1					
11	95817–06016	BOLT, FLANGE	2					
12	3C1–H2530–00	STOP SWITCH ASSY	1					
13	3C1–H2590–00	WIRE HARNESS ASSY	1					

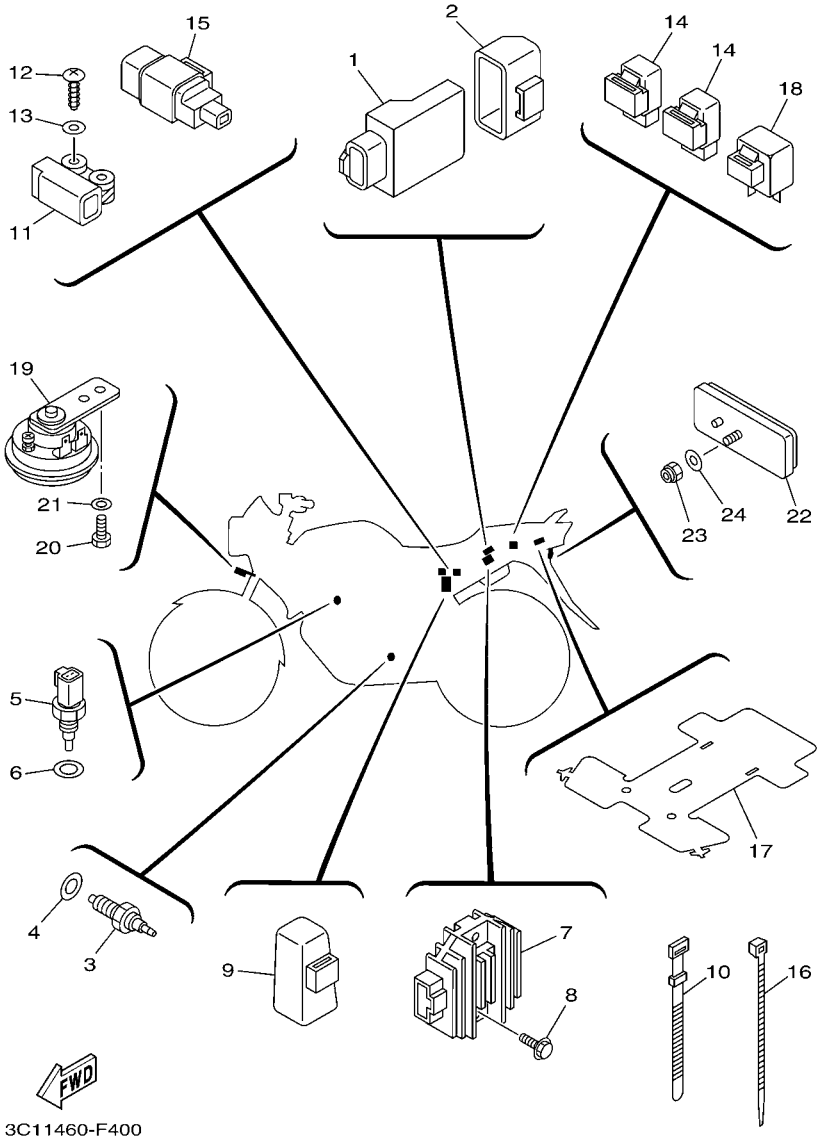

FIG. 40 ELECTRICAL 2

REF. NO.	PART NO.	DESCRIPTION	3C11					REMARKS
1	3C1–H591A–00	ENGINE CONTROL UNIT ASSY	1					
2	3C1–H5546–00	BAND	1					
3	3C1–H2540–00	NEUTRAL SWITCH ASSY	1					
4	90430–10148	GASKET	1					
5	5YP–85790–00	THERMOSENSOR ASSY	1					
6	90430–12801	GASKET	1					
7	3C1–H1960–00	RECTIFIER & REGULATOR ASSY	1					
8	95807–06020	BOLT, FLANGE	2					
9	5TP–H1940–00	STARTER RELAY ASSY	1					
10	3RS–H3936–00	BAND, SWITCH CORD	2					
11	3C1–H2576–00	LEAN ANGLE SENSOR	1					
12	97707–40012	SCREW, TAPPING	2					
13	90201–04804	WASHER, PLATE	2					
14	3C1–H1950–00	RELAY ASSY	2					
15	3C1–H1965–00	CONDENSER, SMOOTHING	1					
16	90464–36800	CLAMP	6					
17	3C1–H2599–00	COVER, CONNECTER	1					
18	2D5–H3350–00	FLASHER RELAY ASSY	1					
19	3C1–H3371–00	HORN	1					
20	97007–06012	BOLT	1					
21	92907–06600	WASHER, PLATE	1					
22	3C1–H5130–00	REAR REFLECTOR ASSY	1					
23	95607–05100	NUT, U	1					
24	90201–05725	WASHER, PLATE	1					

PART NO.	REF. NO.
3C1–11454–00	2 – 21
3C1–11531–00	2 – 22
3C1–11536–00	2 – 15
3C1–11603–00	2 – 14
3C1–11681–00	2 – 3
5YP–12117–00	3 – 6
3C1–12159–00	3 – 9
	3 – 12
1B9–12241–00	4 – 13
5YP–12411–00	6 – 1
3C1–13770–00	8 – 9
3C1–13971–00	8 – 11
5JW–14104–00	8 – 14
2S5–1410H–00	8 – 15
5CA–14147–00	8 – 10
1S4–14216–00	8 – 16
3C1–16193–00	14 – 2
3C1–16357–00	14 – 25
3C1–16380–00	14 – 23
2N4–23168–00	23 – 13
	23 – 29
183–23411–00	22 – 2
183–23412–00	22 – 3
5TL–2341E–00	22 – 4
164–23462–00	23 – 34
36Y–2589H–00	30 – 6
5YP–85790–00	40 – 5
1S7–E1102–00	1 – 1
1S7–E111F–00	4 – 9
1S7–E1133–10	1 – 2
3C1–E1166–00	8 – 34
3C1–E1181–00	1 – 19
1S7–E1185–01	5 – 4
1S7–E1191–00	1 – 6
1S7–E1193–00	1 – 14
1S7–E1196–00	5 – 5
3C1–E1311–00	1 – 23
1S7–E1351–00	1 – 24
3C1–E1400–00	2 – 1
3C1–E1412–00	2 – 2
3C1–E1422–00	2 – 6
3C1–E1496–00	2 – 16
3C1–E1549–00	2 – 7
3C1–E1631–00	2 – 11
3C1–E1633–00	2 – 12
3C1–E1651–10	2 – 5
1S7–E1951–00	5 – 8
1S7–E1952–01	5 – 9

PART NO.	REF. NO.
1S7–E2111–00	3 – 1
3C1–E2113–00	3 – 4
3S0–E2118–00	3 – 5
2S6–E2119–00	3 – 3
1S7–E2121–00	3 – 2
5YP–E2126–00	3 – 7
1S7–E2151–00	3 – 8
1S7–E2156–00	3 – 14
5YP–E2157–00	4 – 8
1S7–E2161–00	3 – 11
3C1–E2170–00	4 – 1
2P2–E2210–00	4 – 17
5MX–E2213–00	4 – 18
5YP–E2231–00	4 – 12
3C1–E2256–00	4 – 16
3C1–E2280–00	4 – 6
1S7–E2288–00	4 – 7
5YP–E2405–00	6 – 5
3C1–E240A–00	6 – 4
1S7–E2413–00	6 – 2
3C1–E2422–00	5 – 1
1S7–E2428–00	5 – 3
3C1–E2443–00	5 – 13
1S7–E2450–00	5 – 7
5YP–E2462–00	6 – 8
3C1–E2467–00	6 – 14
3C1–E2481–00	6 – 15
3C1–E2482–00	6 – 17
5YP–E2671–00	6 – 7
5YP–E2675–00	6 – 6
3C1–E3300–00	7 – 1
3C1–E3324–00	7 – 8
3C1–E3327–00	7 – 13
1S7–E3411–00	7 – 4
1S7–E3440–00	7 – 7
3C1–E3447–00	7 – 9
3C1–E3542–00	8 – 3
3C1–E3556–00	8 – 2
5MX–E3575–01	8 – 17
3C1–E3585–00	8 – 1
3C1–E3586–00	8 – 6
3C1–E3750–00	8 – 13
3C1–E3907–00	24 – 14
3C1–E4411–00	8 – 18
3C1–E4412–00	8 – 19
3C1–E4419–00	8 – 28
3C1–E441J–00	8 – 29
5TL–E443E–00	8 – 24

PART NO.	REF. NO.
3C1–E4450–00	8 – 20
3C1–E4452–00	8 – 22
3C1–E4453–00	8 – 21
3C1–E4485–00	8 – 26
1S7–E4613–00	9 – 10
3C1–E4710–00	9 – 1
3C1–E4728–00	9 – 3
1S7–E4737–00	9 – 5
5TP–E4747–00	18 – 8
3C1–E4758–00	9 – 2
1S7–E482K–00	1 – 8
1S7–E4840–00	1 – 9
3C1–E4877–00	8 – 40
3C1–E4881–00	8 – 43
3C1–E4882–00	8 – 36
3C1–E4883–00	8 – 45
1S7–E4890–00	1 – 10
3C1–E5150–00	10 – 1
1S7–E5351–00	7 – 3
3C1–E5362–00	11 – 16
3C1–E5411–00	11 – 1
3C1–E5418–00	11 – 9
3C1–E5421–00	11 – 11
3C1–E5441–00	4 – 19
3C1–E5451–00	11 – 2
3C1–E5461–00	11 – 12
3C1–E5514–00	13 – 1
3C1–E5521–00	13 – 2
3C1–E5524–00	13 – 5
5YP–E5580–00	13 – 8
5HV–E5583–00	13 – 9
3C1–E5598–00	4 – 15
5YP–E5614–00	13 – 10
3C1–E5620–00	12 – 17
3C1–E5641–00	12 – 2
3C1–E5651–00	12 – 12
3C1–E5661–00	12 – 1
3C1–E5666–00	12 – 6
3C1–E5671–00	12 – 4
3C1–E5674–00	12 – 15
3C1–E5767–00	12 – 7
3C1–E6111–00	14 – 1
3C1–E6135–00	14 – 21
3C1–E6144–00	14 – 19
3C1–E6150–00	14 – 5
3C1–E6154–00	14 – 6
3C1–E6307–00	14 – 10
3C1–E6321–00	14 – 12

PART NO.	REF. NO.
3C1–E6324–00	14 – 13
3C1–E6331–00	14 – 11
3C1–E6333–00	14 – 15
3C1–E6337–00	14 – 16
3C1–E6344–00	14 – 20
3C1–E6345–00	14 – 24
3C1–E6351–00	14 – 14
3C1–E6356–00	14 – 18
3C1–E6358–00	14 – 17
3C1–E6371–00	14 – 7
3C1–E6383–00	14 – 9
3C1–E6384–00	14 – 8
3C1–E7121–00	15 – 6
3C1–E7131–00	15 – 5
3C1–E7151–00	15 – 2
3C1–E7211–00	15 – 12
3C1–E7221–00	15 – 20
3C1–E7231–00	15 – 18
3C1–E7241–00	15 – 17
3C1–E7251–00	15 – 14
3C1–E7285–00	15 – 19
3C1–E7402–00	15 – 11
3C1–E7411–00	15 – 1
3C1–E7456–00	15 – 27
3C1–E7471–00	15 – 9
3C1–E8101–00	17 – 4
3C1–E8110–00	17 – 9
5BP–E8112–00	17 – 14
1EG–E8113–01	17 – 10
3C1–E8115–00	17 – 11
3C1–E8119–00	17 – 2
3C1–E8140–00	17 – 1
3C1–E8337–00	17 – 3
3C1–E8511–00	16 – 2
3C1–E8512–00	16 – 3
3C1–E8513–00	16 – 4
3C1–E8531–00	16 – 5
3C1–E8540–00	16 – 1
3C1–F1110–00	18 – 1
1S7–F117K–00	25 – 14
3C1–F118E–00	18 – 14
3C1–F118W–00	18 – 5
3C1–F1338–00	18 – 13
3C1–F137N–01	20 – 16
	20 – 24
3C1–F137N–11	20 – 16
	20 – 24
3C1–F137N–21	20 – 16

PART NO.	REF. NO.
3C1–F137N–21	20 – 24
3C1–F137P–00	20 – 17
3C1–F137P–10	20 – 17
3C1–F137P–20	20 – 17
3C1–F137R–00	20 – 25
3C1–F137R–10	20 – 25
3C1–F137R–20	20 – 25
3C1–F137W–00–33	20 – 15
3C1–F137W–00–P0	20 – 15
3C1–F137W–00–P1	20 – 15
3C1–F137X–00–33	20 – 23
3C1–F137X–00–P0	20 – 23
3C1–F137X–00–P1	20 – 23
3C1–F1511–00–33	19 – 1
3C1–F1511–00–P0	19 – 1
3C1–F1511–00–P1	19 – 1
4ST–F1518–00	19 – 4
5BP–F153E–00	20 – 41
5BP–F153E–10	20 – 41
5BP–F153E–20	20 – 41
3C1–F1611–00	19 – 5
3C1–F1621–00	19 – 6
3C1–F1711–00	20 – 1
3C1–F171E–00–33	20 – 40
3C1–F171E–00–P0	20 – 40
3C1–F171E–00–P1	20 – 40
3C1–F1721–00	20 – 2
3C1–F1731–00–33	20 – 31
3C1–F1731–00–P0	20 – 31
3C1–F1731–00–P1	20 – 31
3C1–F173E–00	20 – 32
3C1–F173E–10	20 – 32
3C1–F173E–20	20 – 32
3C1–F173F–00	20 – 35
3C1–F173F–10	20 – 35
3C1–F173F–20	20 – 35
3C1–F1741–00–33	20 – 34
3C1–F1741–00–P0	20 – 34
3C1–F1741–00–P1	20 – 34
3C1–F1748–00	20 – 19
	20 – 27
3C1–F174G–00	20 – 33
3C1–F174G–10	20 – 33
3C1–F174G–20	20 – 33
3C1–F174H–00	20 – 36
3C1–F174H–10	20 – 36
3C1–F174H–20	20 – 36
3C1–F1828–00	20 – 10

PART NO.	REF. NO.
3C1–F1871–00	20 – 7
3C1–F1875–00	20 – 9
3C1–F2110–00	21 – 1
5BP–F2129–00	21 – 4
3C1–F2141–00	21 – 5
3C1–F2151–00	21 – 7
3C1–F217A–00	21 – 8
3C1–F217F–00	21 – 12
3C1–F2184–00	21 – 3
3C1–F2210–00	21 – 18
3C1–F2311–00	21 – 15
3C1–F2327–00	18 – 12
3C1–F3102–01	23 – 1
3C1–F3103–01	23 – 17
3C1–F3110–01	23 – 6
	23 – 22
3C1–F3111–00	23 – 12
	23 – 28
2JK–F3114–00	23 – 11
	23 – 27
3C1–F3118–01	23 – 16
	23 – 32
3C1–F3121–00	22 – 18
3C1–F3126–01	23 – 2
3C1–F3131–00	22 – 19
3C1–F3136–01	23 – 18
3C1–F3141–00	23 – 9
	23 – 25
5BP–F3144–00	23 – 5
	23 – 21
5BP–F3145–00	23 – 3
	23 – 19
2JK–F3149–01	23 – 15
	23 – 31
22W–F3156–L0	23 – 4
	23 – 20
509–F3158–L0	23 – 10
	23 – 26
3C1–F3170–00	23 – 7
	23 – 23
2JK–F3173–00	23 – 8
	23 – 24
3C1–F3174–00	22 – 16
2JK–F3181–00	23 – 14
	23 – 30
3C1–F3340–00	23 – 33
2JK–F3346–00	23 – 36
5BP–F3416–00	22 – 5

PART NO.	REF. NO.
5BP–F3418–00	22 – 8
3C1–F3435–00	22 – 9
3KA–F3441–10	22 – 13
3KA–F3469–00	22 – 15
5BP–F3873–01	22 – 1
5BP–F3875–00	23 – 35
3C1–F4100–00–33	24 – 1
3C1–F4100–10–P0	24 – 1
3C1–F4100–20–P0	24 – 1
3C1–F416B–00	24 – 18
3C1–F417B–00	24 – 19
3C1–F4188–00	24 – 12
3C1–F4191–00	24 – 4
3C1–F4244–00	24 – 2
3C1–F4244–10	24 – 2
3C1–F4244–20	24 – 2
3C1–F4245–00	24 – 3
3C1–F4245–10	24 – 3
3C1–F4245–20	24 – 3
3C1–F4486–00	24 – 16
3C1–F4491–00	24 – 15
3C1–F4610–00	24 – 13
3C1–F4728–00	25 – 3
3C1–F4730–00	25 – 1
3C1–F4731–00	25 – 2
3C1–F4741–00	25 – 5
3C1–F4773–00–35	25 – 11
5BP–F4780–00	25 – 7
3C1–F478E–00	25 – 10
5BP–F4792–00	25 – 8
3C1–F4799–00	25 – 13
3C1–F510C–00	26 – 2
3C1–F5168–00	26 – 1
3C1–F5181–00	26 – 10
3C1–F5186–00	26 – 9
3C1–F5190–00	26 – 8
5BP–F530K–00	28 – 6
5BP–F530S–00	28 – 2
5BP–F5321–01–33	28 – 5
3C1–F5338–00	28 – 1
4ST–F533A–00	28 – 13
5BP–F5351–00	28 – 9
5BP–F5355–00	28 – 10
3C1–F5364–00	28 – 4
3C1–F5366–00–33	28 – 14
3C1–F5371–00	28 – 23
3C1–F5381–00	28 – 28
3C1–F5383–00	28 – 29
3C1–F5386–00	28 – 30
3C1–F5388–00	28 – 32
3C1–F5389–00	28 – 33
3C1–F5442–00	28 – 18
3C1–F580U–00	27 – 3
3C1–F582U–00	27 – 1
3C1–F583T–00	30 – 2
3C1–F5852–00	30 – 5
3RW–F5854–00	30 – 4
3C1–F5855–00	30 – 8
3RW–F5867–00	30 – 7
3C1–F5872–00	30 – 1
3C1–F5886–01	30 – 16
5YP–F5917–00	27 – 8
5YP–F5919–00	27 – 10
5YP–F5924–00	27 – 11
5YP–F5925–01	27 – 9
5YP–F5937–00	27 – 7
5YP–F5939–00	27 – 13
3C1–F6111–00	29 – 1
3C1–F6240–00	29 – 2
4NS–F6241–10	29 – 6
4NS–F6242–10	29 – 3
3C1–F6243–00	29 – 4
5ER–F6246–00	29 – 7
5MX–F6280–00	29 – 14
5MX–F6290–00	29 – 15
3C1–F6311–00	29 – 9
3C1–F6335–00	29 – 12
3RS–F6372–00	29 – 13
3C1–F6393–00	29 – 10
3C1–F7111–00	31 – 8
3C1–F7112–00	31 – 9
4YY–F7114–00	9 – 4
3C1–F7211–00	31 – 14
3C1–F7216–00	31 – 17
3C1–F7231–00	31 – 18
3C1–F7262–00	31 – 15
3C1–F7311–00	31 – 1
5BP–F7411–00	31 – 26
3C1–F7413–00	31 – 35
3C1–F7426–00	31 – 39
3C1–F7431–00	31 – 40
3C1–F7441–00	31 – 41
5BP–F7451–00	31 – 33
3C1–F7452–00	31 – 25
5BP–F7461–00	31 – 34
3C1–F7462–00	31 – 31
3C1–F8100–00	18 – 15
3C1–H1410–00	32 – 2
3C1–H1450–00	32 – 1
3C1–H1800–00	33 – 1
3AY–H1801–00	33 – 2
3AY–H1828–00	33 – 5
3AY–H182M–00	33 – 4
3C1–H183G–00	33 – 3
5TP–H1940–00	40 – 9
3C1–H1950–00	40 – 14
3C1–H1960–00	40 – 7
3C1–H1965–00	40 – 15
3C1–H2100–00	39 – 4
3C1–H2116–00	39 – 9
3C1–H2121–00	39 – 5
3C1–H2131–00	39 – 6
5TL–H2131–00	25 – 6
3C1–H2150–00	39 – 7
3C1–H2151–00	39 – 8
3C1–H2310–00	39 – 1
1S7–H2370–00	39 – 3
3C1–H2501–00	39 – 10
3C1–H2530–00	39 – 12
3C1–H2540–00	40 – 3
3C1–H2576–00	40 – 11
3C1–H2590–00	39 – 13
3C1–H2599–00	40 – 17
5BP–H2910–10	38 – 3
3KA–H2911–00	38 – 4
5BP–H2917–00	38 – 7
3C1–H3310–00	34 – 1
5LL–H3311–00	34 – 2
	34 – 6
	34 – 13
	34 – 17
3C1–H3318–00	34 – 9
	34 – 20
3C1–H331B–00	36 – 10
3KA–H331L–00	34 – 10
	34 – 21
3C1–H3320–00	34 – 5
3C1–H3330–00	34 – 12
3C1–H333A–00	34 – 3
	34 – 18
3C1–H3340–00	34 – 16
3C1–H334A–00	34 – 7
	34 – 14
2D5–H3350–00	40 – 18
3C1–H3371–00	40 – 19
3C1–H3500–00	35 – 1
3C1–H3511–00	35 – 3
5HH–H3517–00	35 – 10
3C1–H3518–00	35 – 8
3C1–H3518–10	35 – 9
3C1–H353A–00	35 – 4
3C1–H353G–00	35 – 2
3C1–H3550–00	35 – 23
3C1–H355H–00	35 – 7
3C1–H356C–00	35 – 13
3C1–H356F–00	35 – 14
3C1–H3578–00	35 – 12
3C1–H357K–00	35 – 6
3C1–H357L–00	35 – 17
3C1–H3595–00	35 – 18
3C1–H359E–00	35 – 5
3KA–H3912–00	38 – 5
3KA–H3913–00	38 – 6
3C1–H3922–00	30 – 9
3RS–H3936–00	40 – 10
3KA–H3945–00	38 – 8
3C1–H3969–00	38 – 1
3C1–H3975–00	38 – 2
5BP–H3980–10	30 – 12
3C1–H411V–00	35 – 19
3C1–H4130–10	36 – 6
3C1–H4145–10	36 – 7
3C1–H4150–00	36 – 5
3C1–H4163–00	36 – 8
3C1–H4300–00	36 – 1
3C1–H4310–00	36 – 2
3C1–H4314–00	36 – 3
3C1–H4314–10	36 – 4
3C1–H4325–00	36 – 9
3C1–H4704–00	37 – 7
3C1–H4710–00	37 – 1
3C1–H4714–00	37 – 4
3C1–H4721–00	37 – 2
3C1–H4724–00	37 – 6
3C1–H4733–00	37 – 3
3C1–H4735–00	37 – 5
3C1–H5130–00	40 – 22
3C1–H5546–00	40 – 2
3C1–H591A–00	40 – 1
5TL–W0041–01	30 – 3
4C9–W0045–00	27 – 12
3C1–W0047–00	27 – 5
5TL–W0048–00	27 – 6
3C1–W0057–00	27 – 4
90101–06278	28 – 11
90105–08850	1 – 16
90105–10006	22 – 11
90105–10323	18 – 2
90105–106A7	31 – 3
90105–10826	21 – 11
90105–10829	18 – 3
90109–06183	19 – 8
	20 – 8
90109–063F1	19 – 7
90109–06577	30 – 10
90109–08063	28 – 24
90109–08825	28 – 25
90110–08803	31 – 30
	31 – 32
90110–10801	31 – 27
90111–08815	27 – 2
90111–08818	36 – 11
90116–08812	28 – 19
90119–06044	19 – 2
	20 – 3
	20 – 37
	20 – 42
90119–06051	8 – 33
90119–06877	24 – 7
90123–08046	38 – 14
90149–06821	20 – 20
	20 – 28
90149–06829	4 – 14
90149–10802	27 – 14
90153–06803	1 – 3
	1 – 25
90157–05079	31 – 36
90159–06033	25 – 15
90163–04800	34 – 11
	34 – 22
90163–05803	8 – 23
90170–05302	3 – 10
	3 – 13
90170–10405	2 – 30
90175–06013	31 – 24
90176–08040	36 – 13
90179–08148	38 – 13
90179–10805	18 – 4
	21 – 13
90179–12802	12 – 18
90179–12802	14 – 4
90179–14001	14 – 22
90179–25615	22 – 6
90183–05807	19 – 9
	37 – 8
90183–06802	8 – 32
90201–04804	40 – 13
90201–05725	40 – 24
90201–05817	9 – 9
90201–06072	6 – 11
90201–06830	35 – 22
90201–08609	1 – 17
90201–08612	9 – 13
	36 – 12
90201–10118	30 – 15
90201–105E8	13 – 3
90201–12019	14 – 3
90201–122H1	32 – 6
90201–15821	2 – 17
90201–163H8	31 – 10
90201–173F4	15 – 22
90201–173U5	31 – 29
90201–175F6	12 – 13
90201–19800	12 – 11
90201–20685	12 – 8
90201–20814	15 – 21
90201–20815	12 – 3
90201–25290	13 – 7
90201–261L1	29 – 5
90202–26142	22 – 7
90206–17084	31 – 28
90208–20003	14 – 30
90209–10020	22 – 12
90209–17285	15 – 3
90209–18208	15 – 15
90214–10800	2 – 18
90215–10284	2 – 29
90240–08144	31 – 38
90240–08145	31 – 37
90249–12008	31 – 23
90280–03017	2 – 10
90282–05031	2 – 28
90338–15802	18 – 9
90338–16008	8 – 30
90338–16148	18 – 11
90338–18122	18 – 10
90340–14805	11 – 5
90340–32810	11 – 7

PART NO.	REF. NO.
90387–062M9	19 – 3
90387–064W3	6 – 12
90387–06890	24 – 11
90387–06892	24 – 5
90387–06897	20 – 18
	20 – 26
90387–068S1	8 – 41
90387–08813	18 – 7
90387–09803	21 – 16
90387–10003	31 – 4
90387–10814	21 – 10
90387–15810	2 – 23
90387–158V4	28 – 17
90387–17804	15 – 13
90387–22660	29 – 16
90401–10812	30 – 14
90413–13800	8 – 44
90430–06014	1 – 4
	1 – 13
	1 – 26
90430–09800	8 – 5
90430–10148	40 – 4
90430–12801	40 – 6
90445–08831	20 – 11
90445–08832	20 – 12
90445–12804	6 – 19
90445–21848	31 – 7
	31 – 13
90450–28801	6 – 16
	6 – 18
90450–39802	8 – 39
90462–08001	36 – 14
90464–14807	20 – 14
90464–36800	40 – 16
90467–08003	20 – 13
90467–08092	8 – 4
90467–10805	6 – 20
90467–12800	8 – 25
90467–13064	8 – 35
90467–13802	8 – 38
90467–15012	8 – 37
90467–16800	8 – 46
90467–20050	8 – 27
90467–23801	8 – 31
90480–01558	20 – 5
	20 – 39
	37 – 11
90480–01803	6 – 13
90480–10623	20 – 22
	20 – 30
90480–10801	35 – 21
90480–12320	20 – 21
	20 – 29
90480–13567	20 – 4
90480–13810	37 – 10
90480–15363	6 – 9
90480–15483	24 – 6
90480–18549	24 – 9
90501–030A0	13 – 11
90501–06800	16 – 6
90501–10245	31 – 22
90501–12743	31 – 42
90501–16800	2 – 19
90501–18576	7 – 5
90506–12001	28 – 7
90506–15001	28 – 8
90506–28800	31 – 2
90506–35003	31 – 12
90508–26803	12 – 5
90508–32837	17 – 5
91317–05010	24 – 17
91317–06016	12 – 16
	32 – 4
91317–06020	4 – 20
	13 – 12
	31 – 16
91317–06025	32 – 3
91317–06100	1 – 22
91317–08030	22 – 14
9131L–08030	22 – 10
91401–20012	17 – 13
	28 – 27
	31 – 21
91401–25015	31 – 44
91401–30030	31 – 11
91701–06018	31 – 19
91810–14809	1 – 20
	1 – 21
	10 – 2
	11 – 3
	11 – 13
91811–10005	1 – 7
92014–06010	22 – 20
92907–06200	17 – 12
92907–06600	31 – 20
	38 – 12
92907–06600	40 – 21
92907–10600	31 – 5
92990–06600	9 – 7
93101–10843	11 – 18
93102–12862	14 – 28
93102–12891	17 – 8
93102–20892	15 – 25
93103–10801	5 – 2
93106–17801	21 – 14
93106–20814	26 – 4
93106–26815	28 – 16
93109–20800	12 – 19
93210–09806	4 – 3
93210–108H5	38 – 15
93210–11803	1 – 15
93210–11805	2 – 24
93210–13803	2 – 25
93210–148F8	11 – 6
93210–19809	5 – 16
93210–198F9	11 – 17
93210–26805	33 – 6
93210–32807	8 – 7
93210–328G3	11 – 8
93210–34802	7 – 6
93210–54805	7 – 12
93210–84801	5 – 6
93306–000Y3	5 – 10
93306–001X2	4 – 4
93306–003Y7	15 – 23
93306–004XR	15 – 7
93306–004XV	28 – 15
93306–201XA	26 – 5
93306–203XK	2 – 27
93306–204YL	15 – 24
93306–252X1	15 – 8
93306–252X7	28 – 3
93306–252Y9	2 – 26
93306–301XE	26 – 3
93306–305X7	2 – 9
93306–305YF	2 – 8
93306–906Y0	4 – 2
93310–325X1	13 – 6
93310–528YB	2 – 4
93315–112Y8	14 – 27
93315–317Y1	21 – 9
93317–218Y1	21 – 2
93410–20038	12 – 9
	15 – 4
93410–22039	15 – 16
93450–16115	2 – 13
93501–04830	31 – 43
93503–16003	14 – 26
93604–08800	2 – 20
93608–30839	17 – 7
93822–14815	15 – 26
94109–17801	28 – 21
94109–17802	28 – 21
94127–17805	26 – 6
94127–17806	26 – 6
94218–17800	28 – 22
94227–17803	26 – 7
94227–17805	26 – 7
	28 – 22
94568–A8096	4 – 11
94568–C0120	28 – 34
94700–00872	1 – 18
94700–00873	1 – 18
95027–06010	4 – 10
	15 – 28
95027–06012	5 – 12
	22 – 17
95027–06014	1 – 11
95027–06016	30 – 17
95027–06020	1 – 12
	6 – 3
95027–06025	5 – 11
	5 – 14
	30 – 13
95027–06050	5 – 15
9502L–06012	7 – 14
9502L–06016	11 – 10
9502L–06020	7 – 10
9502L–06040	10 – 6
	11 – 4
	11 – 14
9502L–06045	10 – 4
9502L–06050	11 – 15
9502L–06055	10 – 3
9502L–06070	10 – 5
9502L–06080	7 – 11
9502L–06090	11 – 19
9502N–06020	8 – 8
95307–06600	28 – 12
9530N–03600	35 – 16
95607–05100	40 – 23
95607–06100	30 – 11
95607–06100	38 – 10
95607–08200	28 – 20
95607–12200	26 – 11
95607–14200	28 – 31
95617–08620	1 – 5
95617–10100	31 – 6
95707–06500	25 – 9
95707–08500	9 – 11
	28 – 26
95707–12500	32 – 5
9570L–06500	25 – 4
9570L–12500	21 – 6
9570M–06500	35 – 20
95807–06020	40 – 8
95817–06016	39 – 11
95817–06030	8 – 12
95817–08025	9 – 12
95817–08040	9 – 14
9581L–08020	18 – 6
95827–06014	21 – 17
95827–06025	6 – 10
95827–06030	24 – 10
95827–08020	25 – 12
9582L–06016	24 – 8
97007–06012	40 – 20
97007–06016	39 – 2
97007–06025	38 – 11
97024–06020	17 – 15
97027–06014	8 – 42
97080–06008	9 – 8
97706–04012	34 – 4
	34 – 8
	34 – 15
	34 – 19
97707–40012	40 – 12
97707–50014	20 – 6
	20 – 38
	37 – 9
9770M–40010	35 – 11
98507–05016	29 – 11
98507–05025	7 – 2
98517–06012	15 – 10
98707–03008	38 – 9
98707–06035	29 – 8
9890L–04008	35 – 15
98980–06010	9 – 6
99001–10600	17 – 6
99009–10400	13 – 4
99009–17400	12 – 14
99009–19400	12 – 10
99009–20500	14 – 29
99480–05010	4 – 5